


Step 2 Mounting

- To mount onto drywall, use the self tapping plastic anchor provided. It is strongly recommended to use a wood block when mounting to tiled ceiling.

- Unscrew the mounting base (A) from the upper support (B) and insert mounting screw (C) to attach to the ceiling base.

- Screw the upper support back onto the mounting base.

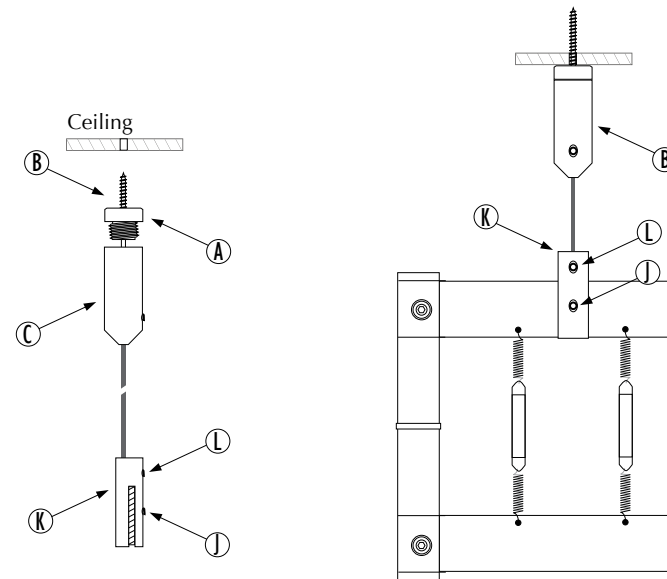

Step 3 Power Supply

- To install the 300 Watt transformer, please read the installation instructions provided in the box (Read all instructions).


- After the transformer has been installed, loosen the two side allen screws (D) on each side of the power feed (E).

- Connect the power supply cables (G) from the low-voltage transformer provided to the power supply.

- Slide the two feed elements (E) onto the track (F). Retighten the side allen screws (D) firmly.

- Use wire ferrules provided (H). Tighten side allen screw (I) to complete.

Make sure that the power feed is tightened firmly to the track; an improper connection will cause arcing and overheating. The power feed cables should be connected to the transformer terminals.

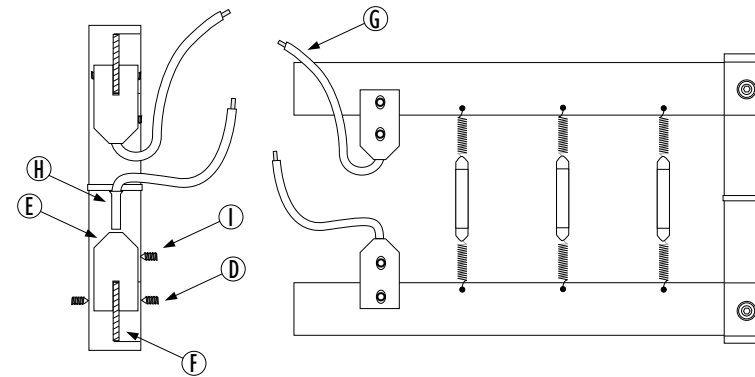


Step 4 To Adjust The Support Cables

- Some fine tuning maybe required to straighten the support cable.


- Slightly loosen the allen screw (J) to straighten (K) and retighten.

- Do not unscrew (L) doing so will detach the support cable from the support (K).


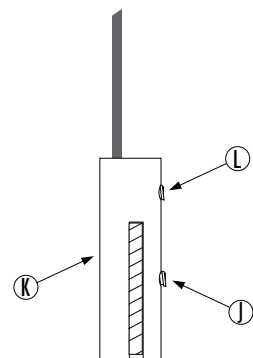


Changing Lamps

- The festoon lamps are held to the track with two springs. To replace the lamp unhook the festoon from the springs.

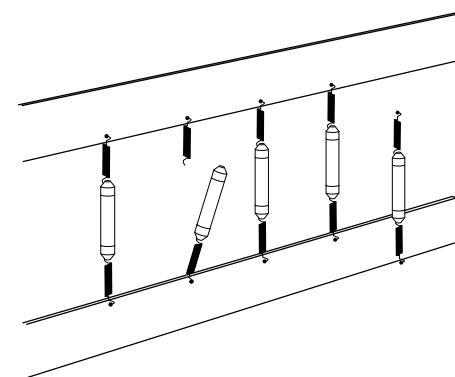

FLIGHT SPIRAL

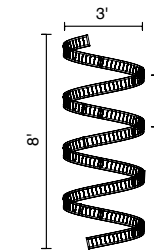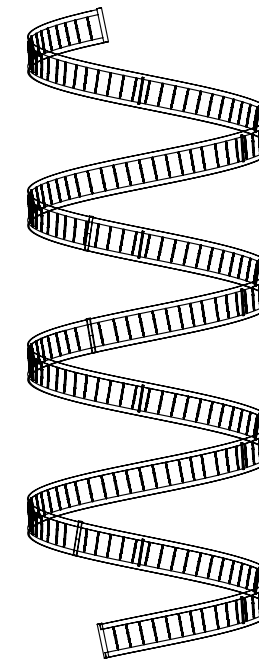

IMPORTANT SAFETY INSTRUCTIONS



1. THIS PRODUCT MUST BE INSTALLED BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED, IN ACCORDANCE WITH LOCAL AND NATIONAL CODE.
2. Save these instructions and refer to them when additions to or changes to the track configuration are made.
3. Do not install this track in damp or wet locations.
4. Do not install any part of the track less than 7 feet above the floor.
5. CAUTION - Do not install any fixture assembly closer than 6 inches from any curtain, or similar combustible material.
6. To reduce the risk of fire and electric shock, do not attempt to connect power tools, extension cords, appliances, and the like to the track.
7. This track system MUST BE HARD WIRED. For all the wire connections, use Listed Wire Nuts.
8. Secondary connections must be clean and tight to avoid arcing and overheating!
9. Turn off power prior to any work on the systems.
10. Warranty is void in case of unauthorized modifications and/ or improper use.

READ ALL OF THESE INSTALLATION INSTRUCTIONS BEFORE INSTALLING

FLIGHT SPIRAL PART NUMBER

225 301mc matte chrome, 3 ft. diameter

INSTRUCTIONS

Note

The supports on the Flight Spiral is already assembled in its required position.

Step 1 Determine Support Location

- Prior to mounting the fixture, determine the center of the location where the fixture will be mounted. Measure 1 feet 6 inches out from the center to mark the location of the first support.

- The second support should be 3 feet and 2 4/8 inches away from the first support.

- The third support should be 3 feet and 2 4/8 inches away from the second support.

- Each support should be 1 feet 6 inches away from the center. A separate hole should be made for the power feed cable.

