
Step 4 Installing Pira II

- Place fixtures onto Enzis track.

Do not exceed 50W per fixture

- Secure by tightening thumb screws (M) with phillips head screwdriver,
- #3 is the recommended size to use.

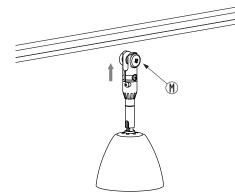




Step 5 End Cap


NOTE


- Place end caps (N) on to track to complete track installation.

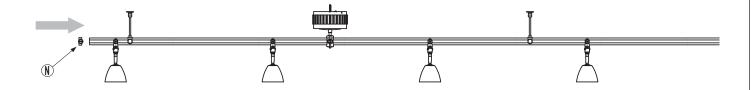

BRUCK LIGHTING SYSTEMS 15774 Gateway Circle Tustin, CA. 92780 www.brucklighting.com For more assistance with technical questions please call our technical support staff at (714) 259-9959. You can also contact us by email at info@brucklightingsystems.com.

ENZIS SYSTEM KIT 300W MAX

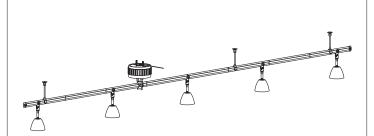

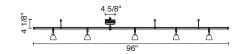

Â

IMPORTANT SAFETY INSTRUCTIONS



- 1. THIS PRODUCT MUST BE INSTALLED BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED, IN ACCORDANCE WITH LOCAL NEC CODE.
- 2. FOR USE WITH ENZIS RAIL NETWORK ONLY.
- The Enzis rail system is not intended for use with a power supply cord or convenience receptacle adaptor. This rail system is to be supplied by Bruck Lighting.
- 4. Do not install this rail in damp or wet locations.
- 5. Do not install any part of a rail system less than 5 feet above the floor.
- 6. Do not install any fixture assembly closer than 6 inches from any curtain, or similar combustible material.
- 7. Disconnect electrical power before adding to or changing the configuration of the rail.
- 8. Do not attempt to energize anything other than lighting fixtures on the rail. To reduce the risk of fire and electric shock, do not attempt to connect power tools, extension cords, appliances, and the like to the rail.
- 9. This track system MUST BE HARD WIRED. For all the wire connections, use Listed Wire Nuts.
- 10. Do not connect a rail to more than one circuit unless the rail is constructed so that it can be used with more than one circuit. Check with a qualified electrician. Although the rail lighting system may seem to operate acceptably, a dangerous overload of the neutral may occur and result in a risk of fire.
- 11. Secondary connections must be clean and tight to avoid arcing and overheating!
- 12. Power Feed must be 3 inches away from any support
- 13. Warranty is void in case of unauthorized modifications and/ or improper use.

READ ALL OF THESE INSTALLATION INSTRUCTIONS BEFORE INSTALLING

ENZIS PART NUMBER

340 096bz bronze, 96", 5 Pira II fixtures 340 096mc matte chrome, 96", 5 Pira II fixtures 340 098bz bronze, 96", 5 Tikus fixtures 340 098mc matte chrome, 96", 5 Tikus fixtures




INSTRUCTIONS

System Includes

Enzis 300W electronic transformer Enzis 96" track Enzis Pira II fixture 5 pcs/ or Enzis Tikus fixture 5 pcs Enzis ceiling support 3 pcs Enzis end caps 2 pcs 50W MR16 36° lamps 5 pcs

Step I Mounting The Transformer And Canopy


- Connect the wires (A) from the canopy to the power supply cables from the transformer.
- Ground wire should be grounded in accordance with local electrical codes.
- Insert the screws (C) through the mounting plate (B) and secure to ceiling J-box.
- Place the cover (D) over the mounting plate (B) and secure it with two allen screws (E) located on the side of the base.

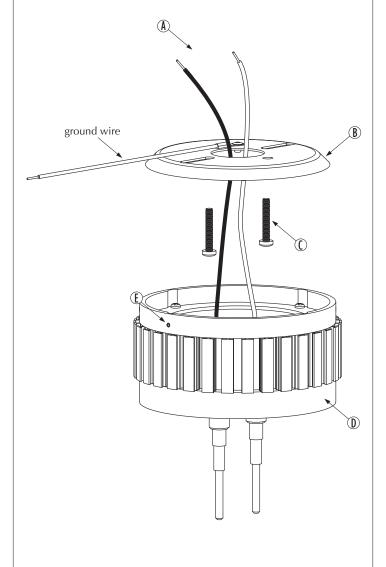

Step 2 Installing Power Feed


- Remove power feed cap (F) push power feed body (G) onto track.
- In location of transformer, screw power feed cap (F) onto the power feed body (G).
- Insert screw driver into power feed through hole (H) on the contact screws (I) and tighten only until they make full contact with flat wire. Each contact screw (I) must be equally offset on both sides of the track.
- Make a final turn on each contact screw (I) until the through holes (H) are in a vertical position.

CAUTION: OVERTIGHTING WILL STRIP THE THREADS ON THE POWER FEED AND CAUSE POOR CONTACT RESULTING IN OVERHEATING AND FAILURE OF SYSTEM.

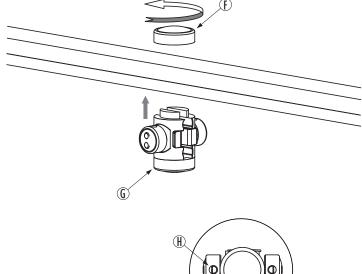






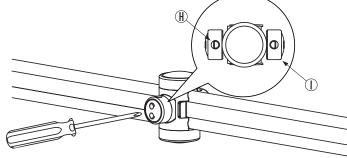

Step 3 Installing Supports

- Use planning grid to decide all mounting locations prior to installation.
- Mark position of support and drill a hole to accommodate anchors or inserts.*
- Unscrew the base from the support and mount it to the ceiling with the screw.*
- Screw the support back onto the base. Rotate the support so that it is in line with your track run.
- Loosen the thumb screws so that the Enzis track can be inserted.
- Tighten the thumb screws to complete the installation.
- *Mounting hardware supplied may not be suitable for all installations.


Even spacing between supports is recommended 2'8". Power supply is in place of one support.

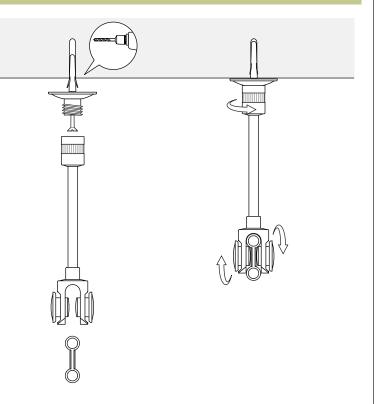




When turning on the system for the first time, turn off the system after 15 minutes and check ALL track and power connections for any heat.

- Slide holes (H) onto rod (J). Tighten set screws (K) to finish power feed installation to Enzis track.

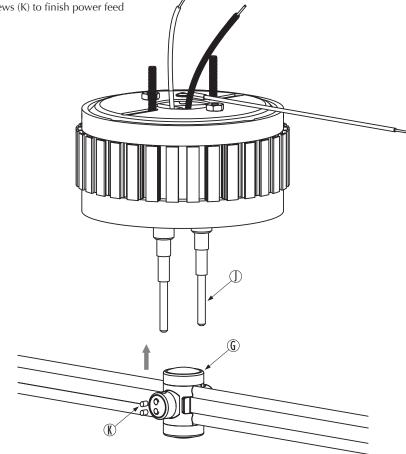

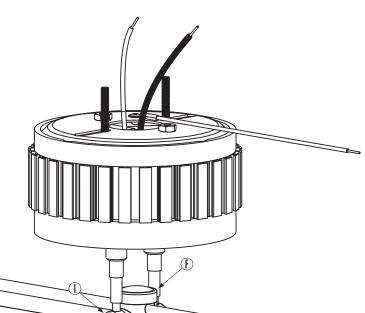

To Remove The Power Supply

- Loosen the set screws (K) slide power feed and track off of power rods (J) and loosen the contact screws (I).
- With a flat tool, push back the contact plates (L) until it clears the track.
- Unscrew the power feed cap (F) and remove the power feed.