


INSTEON®



**INSTEON Wireless Thermostat
2441ZTH**
Quick Start Guide


INSTEON Wireless Thermostat

Temperature Adjust

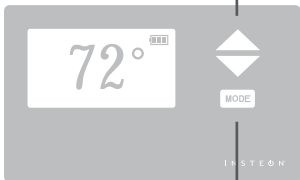

Mode


Status LED

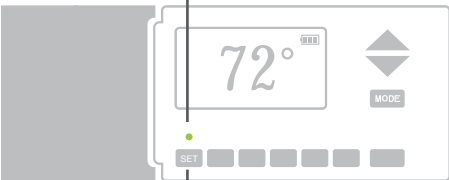

Set Button

Battery Compartment

2 AA Batteries

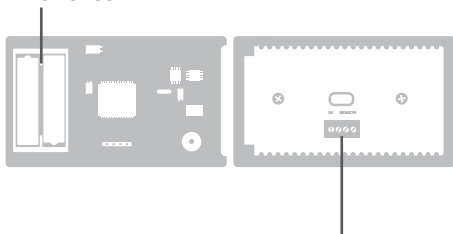


Optional Connections for
5V Power and External
Temperature Sensor




For the complete Owner's Manual and more, visit: [insteon.com/support](https://www.insteon.com/support)

Using with a Wired Thermostat

- 1 On the Wireless Thermostat, press and hold the set button until the device beeps.

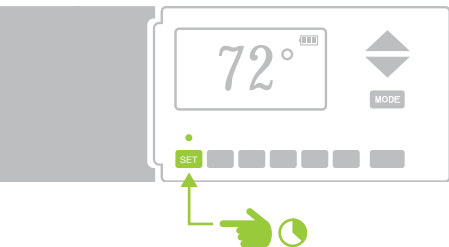

- 2 On the Wired Thermostat, press and hold the set button until the Wired Thermostat double beeps.

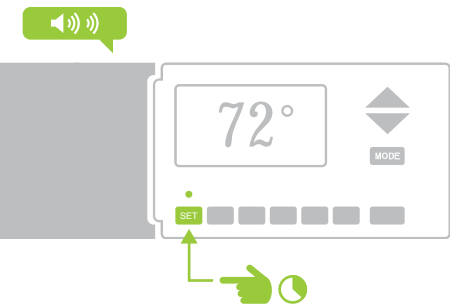

✓ Wireless Thermostat setup complete.

Use °F or °C

Follow the instructions below to change the temperature mode of your thermostat.



PROGRAM




MODE



PROGRAM

Controlling Millivolt Heaters

You can control vintage millivolt heaters with the INSTEON Wireless Thermostat if you replace the mercury float or battery-powered thermostat with an IO Module*.

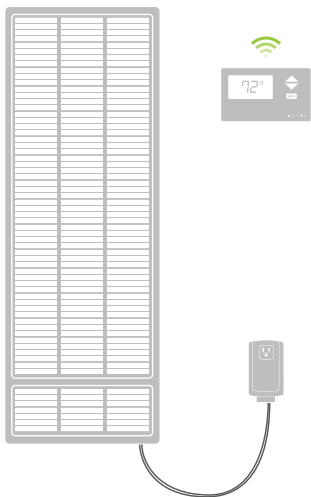

*Wireless Thermostat requires at least one Dual-Band INSTEON device to communicate with IO Module.

Controlling Line Voltage Heaters

You can control a line voltage heater with the INSTEON Wireless Thermostat if you replace the line voltage thermostat with an INSTEON Micro Module.

