



YOUR GUARANTEE

If this product is found to be faulty as a result of faulty materials or workmanship within 1 year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

1. Sunpentown must be notified of the fault.
2. Proof of purchase must be presented to Sunpentown's nominated representative.
3. The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
4. The warranty after repair will not be extended beyond the original zone-year period.
5. All replacement parts will be new or reconditioned.
6. Parts, which are replaced, become the property of Sunpentown.
7. The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

1. Warranty does not include freight charges.
2. Incidental or consequential damage caused by possible defects with this product.
3. Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
4. Failure of product resulting from unauthorized modifications to the product.
5. Improper installation or failure to perform the necessary maintenance.


This GUARANTEE is in addition to your Statutory Rights

Sunpentown Int'l Inc.
14625 Clark Ave, City of Industry, CA 91745
Tel: 626-336-2299 Fax: 626-336-7116
service@spt-usa.com
www.spt-usa.com



INSTRUCTION MAUAL

DISH DRYER SD-1502

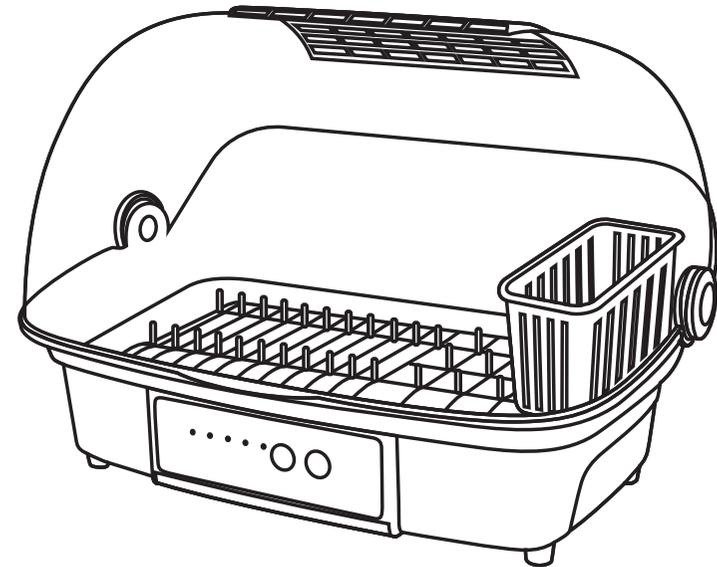


BEFORE OPERATING THIS APPLIANCE,
PLEASE READ THESE INSTRUCTIONS COMPLETELY.

CONTENTS

Title	Page
Parts Introduction	1
Technical Specifications	1
Before Using	2
How to Operate Dish Dryer	2
Cleaning and Maintenance	2
Important Guidelines	2-3

Parts Introduction

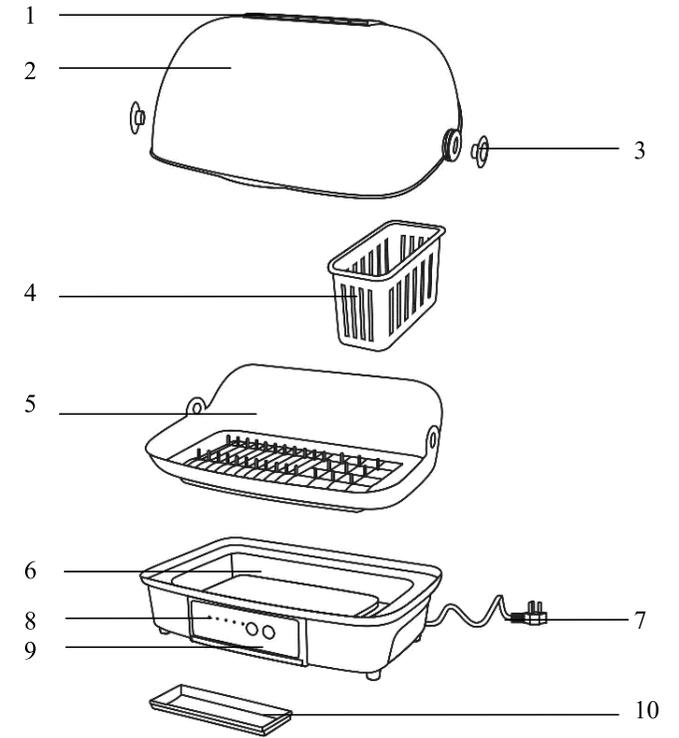

- | | |
|----------------------|-------------------|
| 1. Vent | 6. Body |
| 2. Transparent Cover | 7. Power Cord |
| 3. Decorative Cover | 8. Indicator Lamp |
| 4. Utensils Holder | 9. Control Panel |
| 5. Dish Holder | 10. Water Tray |

Technical Specifications

Voltage	120V~
Wattage	180W
Frequency	60Hz

Thank you for choosing Sunpentown appliances.
May you have an enjoyable experience using our products.

Before using

- Please read these instructions carefully before use and keep them for future reference.
- Check your local main voltage whether it is the same as stated on the rating label.
- Before using for the first time, remove any protective films or stickers from the product.
- Ensure the power switch is off position.

How to Operate Dish Dryer

- Connect to the main electrical supply.
- Check that water tray is properly in place. Always wash the water tray after each use.
- Place the utensils holder in place.
- Only cleaned dishware should be placed into the dish dryer. Do not place too closely together.
- Note: Using warm water to clean the dishware can shorten the drying time.
- Press the ON/OFF button to turn on the dish dryer. Both Power and 30-min indicator light will illuminate. 30-min is the default setting.
- Press the Timer button to change the time setting: 30, 60, 90 and 120 minutes.
- When selected time is up, unit will automatically turn off.
- Note: If the red indicator light keeps blinking, unit may be faulty.
Please contact Sunpentown for troubleshooting.

Cleaning and Maintenance

- Always unplug the product from the wall socket and shut down completely prior to cleaning.
- Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance.
- Please be cautious when cleaning the product near to the motor housing area.
- Use only damp cloth to wipe the exterior surfaces of the unit. Do not immerse the main body in water.
- Do not allow the motor or other electrical components to be exposed to water.
- For proper storage, always place the appliance in a low humidity environment.

Important Guidelines

- Use only original accessories supplied.
- The current voltage which indicates on the plate must correspond to your local voltage.
- The dish dryer should be operated only on condition that the type of power supply corresponds to the marking label. Otherwise, it will not work or even be damaged.
- Never operate unit unless it is fully assembled.
- Do not overload outlets or extension cords. It can result in fire or electric shock.
- Do not operate the appliance if the power supply cord or plug has been damaged.
- This dish dryer is intended for indoor and household use only; not for outdoor, commercial and industrial use.

- Do not immerse the cord, plug or appliance in water or other types of liquid and do not pour water onto it to avoid from fire, electrical shock or personal injury.
- To protect against risk of electrical shock, do not force any foreign objects such as pins and wires into any openings.
- Do not pull the cord to remove the plug from wall socket, pull on the plug instead.
- Do not attempt to insert or remove the plug with wet hands.
- Do not place the appliance on or near hot gas/electric burner, or a heated oven.
- Do not let cord hang over the edge of table or counter or touch any hot surfaces.
- In the event not using the appliance for a long period of time, please remove the plug from the power outlet.
- Do not allow the motor or other electrical components to be exposed to water.
- Never let children use electrical equipment without adult supervision.
- Educate children about the danger and safety rules associated with operating electrical equipment.
- This appliance should not be used by the physically challenged, slow response or mentally disabled people (including children) unless guidance is provided during operation.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Repair and services should always be carried out by Customer Care/Service Centre.