H06658 2003.7

TOTO

NEOREST Installation Instructions <Bowl>

The installation of the toilet bowl for the NEOREST differs from installation of conventional toilet bowls.

Be sure to read the following installation instructions and install the product only as described in this manual.


1 Always Follow This Precaution

Before installing the NEOREST, be sure to read the safety instructions in "Always Follow This Precaution" and install the product only as described in the instructions.

 Precautionary symbols are used in these instructions to ensure safe and proper installation of the product and to prevent injury to the end-user and damage to personal property. The definitions of these precautionary symbols There are two types of precautionary symbols.
 The symbols and definitions appear below.

are as follows.		
Symbol	Definition	
 MARNING	When this symbol appears, precaution should be taken to ensure proper and safe use of the product. Ignoring this precaution could result in injury or damage to personal property.	

0	The ⊘ symbol indicates a prohibited use of the product.	
0	This symbol means "Always follow this precaution".	

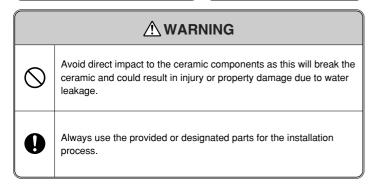


2 Parts Included in the Installation Kit

* Before installation, confirm that the parts listed below are included in the kit.

Part Name		Quantity	Drawing	
Toilet		1 unit		
Outlet connection			1	
Installation Hardware	Mounting Pieces	Mounting Blocks	2	
		Self- tapping screws (for Mounting Blocks)	4	Communication Communication
		Washers	4	0000
	Bag of screws ①	Self- tapping screws (for outlet connection)	4	
	Bag of screws ②	Bolts	2	Сининин Олинини
		Washers	2	0
		Gasket	2	
	Bag of screws ③	Pan head screws	2)
	Screw caps		2	7 7
	Paper installation template		1	
	Installation instructions		1	
W	ater shutoff valve		1	() -

3 Before Installing the NEOREST

- Confirm that there is enough floor space to install the toilet unit and that the bathroom door will open/close without obstruction.
- Confirm that the position of the drain hole and pipes are properly lined up as designated in the drawing.

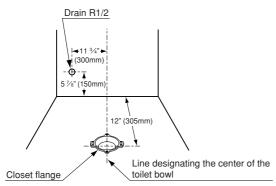

■ Water Pressure.

The NEOREST is designed to operate under a minimum working pressure of 10 psi flowing (as detected by a sensor within the unit). It should be noted that the standard range of working pressures allowed by model codes is 20 to 80 psi static.*

It is necessary to install the water supply valve (angle stop) provided with the NEOREST. This will assure the proper flow rate is achieved and allow for optimum performance of the unit. *See warranty for details.

Optional:

How to check the water pressure:

flow into the bucket

for 10 seconds and measure the water volume.

If a pressure gauge is unavailable, the fill method may be used as follows.


NEOREST water supply valve fully open condition

Allow the water to


The following water volume will ensure sufficient water pressure.

Water volume (for 10 sec)
1.5 Gallons (5.5 L) or more
NEOREST water supply valve fully open condition

Prepare two buckets to hold the water.

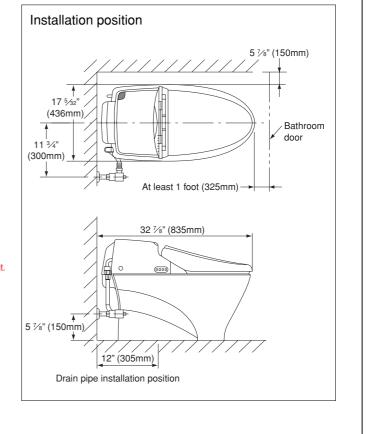



4 Parts and Installation Instructions

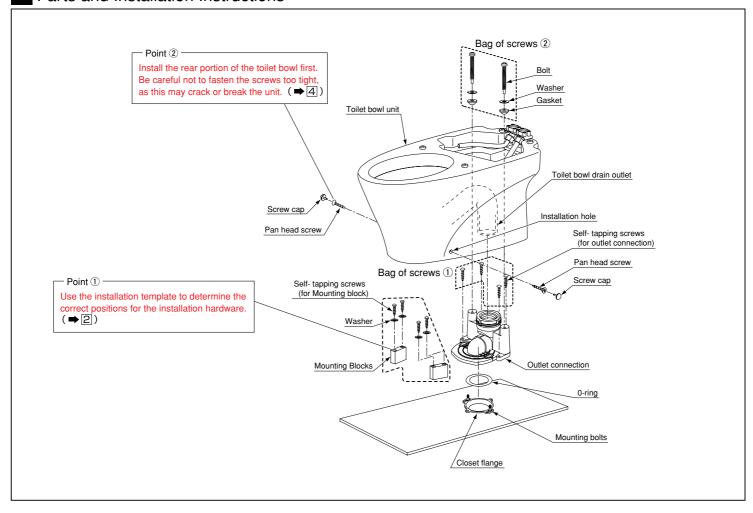


5 Installation Procedures

Installing the water shutoff valve Water supply inlet 1) Before installing the water shutoff valve, be Ô sure to remove any dirt or sand that may have become lodged inside the valve. Remove dirt and sand Water supply pipe ② Wrap the sealing tape around the fitting on the water supply pipe of the water shutoff valve. Water shutoff valve Sealing tape 3 Install the water supply connection on the water shutoff valve so that it is parallel with the floor. Water shutoff valve

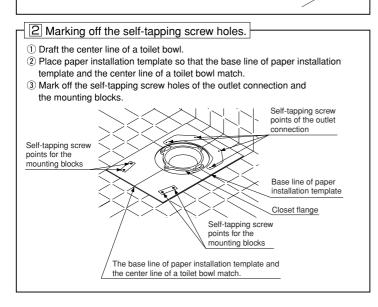

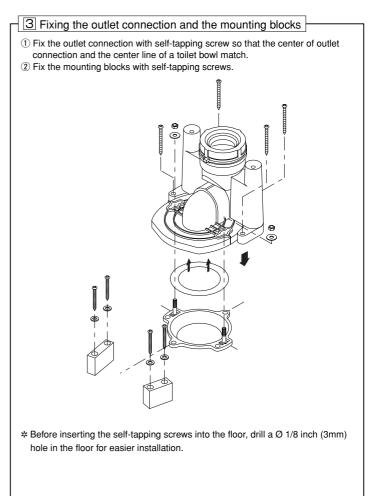

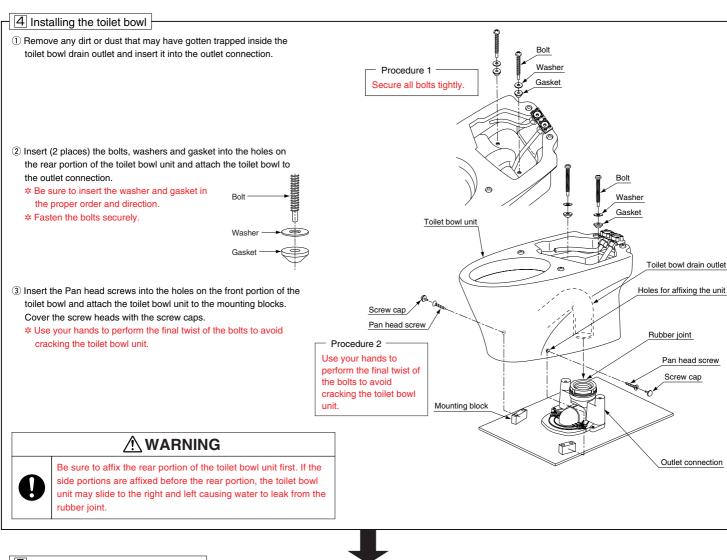

5 Installing the Washlet components

Refer to the installation instructions included in the packaging for the Washlet component.



The manufacturer recommends that silicone caulking be applied around the bottom of the toilet bowl base to prevent water and urine from seeping under the flooring material, resulting in a stained floor.

