

Swirled Marble Glass Light Kit Installation Instructions




IMPORTANT: Read all warnings before you begin.

⚠ CAUTIONS

- Read entire installation instructions carefully before beginning installation and save these instructions.
- To avoid possible risk of electrical shock and fire, install this light fixture only on Hunter ceiling fan Type A-Z. Find the fan model number on the fan package or on the nameplate on top of the motor housing.

⚠ WARNINGS

- To avoid possible electrical shock, before installing light fixture disconnect power by turning off the circuit breakers both to the outlet box and to its associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.
- Connect house wiring to the fan before attaching the light fixture to the fan.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, you should use a qualified electrician. Professional installation is recommended.
- To reduce the risk of fire or personal injury, allow bulbs and surrounding surfaces to cool to room temperature before touching or removing them.

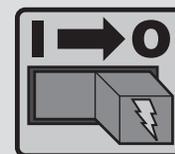

This light fixture is for use only on Hunter Ceiling Fans Type A-Z.


This light fixture weighs 6.25 pounds.


This manual contains installation instructions for the following mounting methods:

- Ceiling Installation
- Fans With Removable Switch Housing
- Fans With Non-Removable Switch Housing
- Fans With Non-Removable Switch Housing and No Center Hole


Preparing the Light Kit

1. Disconnect power by turning off the circuit breakers both to the outlet box and to its associated wall switch location.
2. The shade cover plate comes in a choice of decorative finishes. In addition, the cover plate for the ceiling-mounted light has no hole in the side; the cover plate for the fan-mounted light has a hole in the side. Choose the cover plate that applies to your decorating preference and your mounting preference.

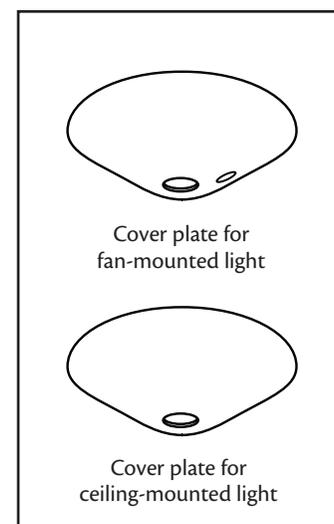

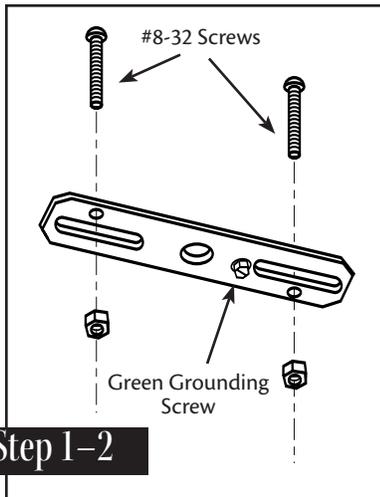

Step 1-2

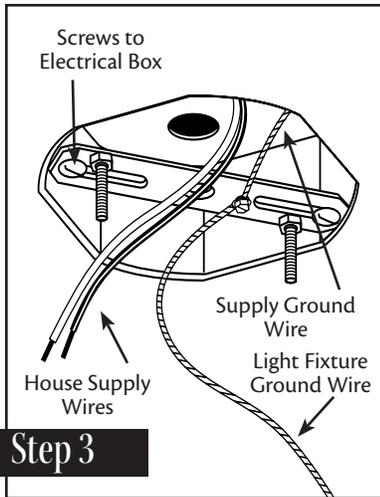

Step 3

Installing the Light Kit on your Ceiling

1. If you are replacing an existing light fixture, disconnect and remove the old fixture and mounting bracket. Leave the wires coming from the outlet box exposed.

Pre-install the two #8-32 screws, two corresponding washers, and two #8-32 nuts on the hanger bracket. Tighten nuts securely. Note: The hanger bracket should be positioned so that the two #8-32 screws are coming down and the green grounding screw is going up towards the ceiling.
2. Using the screws located on the electrical box, secure the hanger bracket to the electrical box by threading the screws through the slotted holes in the hanger bracket. Tighten screws. Note: The screws for installing the hanger bracket to the electrical box should be installed in the opposite direction as the screws for installing the ceiling plate cover to the hanger bracket.


 
3. Locate the metal (uncoated) ground wire from the light fixture and the supply ground wire coming out of the electrical box.

Connect the metal ground wire and the supply ground wire underneath the green ground screw on the hanger bracket. Tighten the green ground screw as needed.


4. Connect the white wire from the light fixture to the white supply wire coming out of the ceiling. Connect the black wire from the light fixture to the black supply wire coming out of the ceiling. Secure all wire connections using approved wire nuts. To connect the wires, hold the bare metal leads together and place a wire nut over them, then twist the wire nut clockwise until tight.

Spread the electrical splices so that the black wires are on one side of the outlet box and the white wires are on the other side.




5. Align the holes in the cover plate with the #8-32 screws that were pre-installed on the hanger bracket. Raise the light fixture and insert the screws through the two holes in the cover plate.
6. Install the decorative nuts on the end of each of the #8-32 screws. Tighten securely.

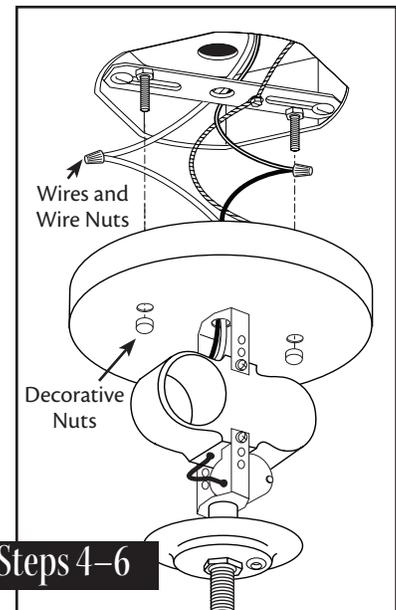

Steps 4-6

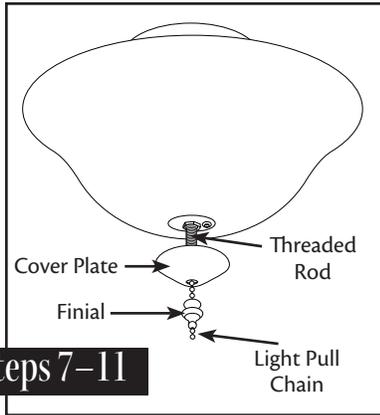

7. Install two 60-watt maximum Type B-10 (candelabra) bulbs into the lamp sockets.
8. Remove the lower chain extension from the light fixture by unhooking it from the breakaway connector. Leave the breakaway connector in place on the upper chain.
9. Thread the light pull chain through the hole in the center of the glass bowl. Place the glass bowl on the threaded rod until flush against the metal disk.
10. Place a cover plate (with no side hole) up against the glass bowl. Thread the light pull chain through the center opening of the cover plate.
11. Thread the light pull chain through the finial and screw the finial onto the threaded rod until tight.
12. The installation is complete and you can restore power to the ceiling fan.

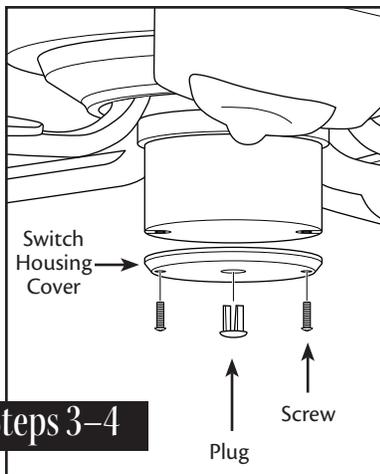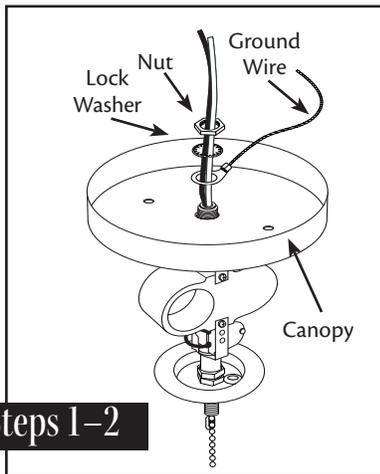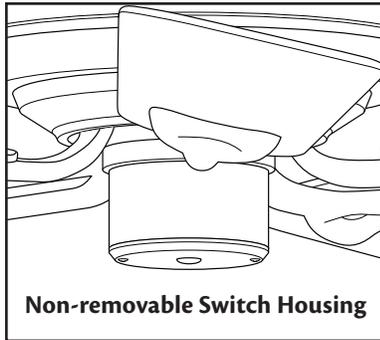



Installing the Light Kit on Fans with Non-Removable Switch Housing



1. To install the light fixture in a ceiling fan, rather than on the ceiling, first remove the canopy that comes installed on the ceiling light fixture.
2. Loosen the nut inside the canopy and remove the nut, lock washer, and metal ground wire ring. Remove the canopy.
3. Uninstall the two screws from the switch housing cover.
4. Remove the plug or screw from the center of the switch housing cover.
5. Thread the switch housing cover onto the wires from the light kit. Align the screw holes in the light kit with the screw holes in the switch housing cover. Install the nut and washer onto the threaded rod from the light kit to secure the switch housing cover.
6. Finish attaching the light kit to the switch housing cover. Use the two attachment screws removed from the lower switch housing and the lock washers on the red tag. Securely tighten the two screws.

⚠ WARNING: Improper installation could cause the light fixture to fall, or result in electrical shock or personal injury.



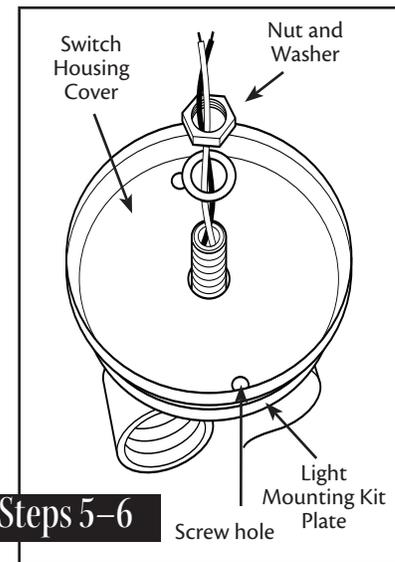


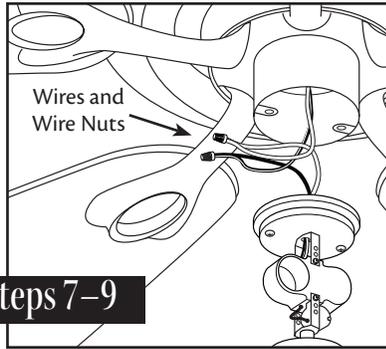


7. Remove the wire nuts from the two wires in the switch housing labeled “Connect Light Here” or “For Light Use.” One wire is white and the other wire is black/white striped.
Connect the black/white striped wire from the switch housing to the black wire from the light kit. Connect the white wire from the switch housing to the white wire from the light kit. Secure all wire connections using wire nuts.
To connect the wires, hold the bare metal leads together and place a wire nut over them, then twist the wire nut clockwise until tight.

⚠ CAUTION: Be sure no bare metal wires or wire strands are visible after making the connections.

8. Align the locator posts in the switch housing cover with the screw holes in the switch housing.
9. Align the threaded screw holes in the switch housing cover with the threaded holes in the switch housing and install two screws.
10. Go to the instructions for Installing Bulbs, Chains, Shades.

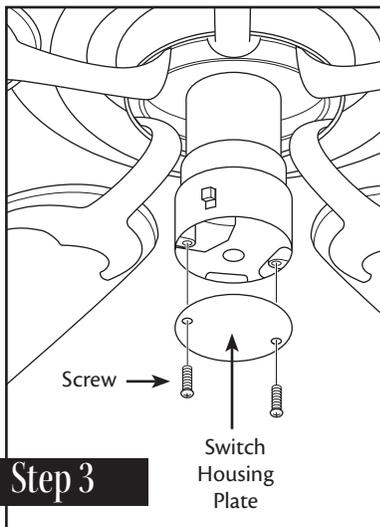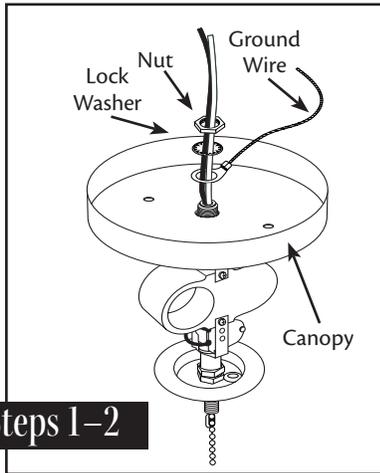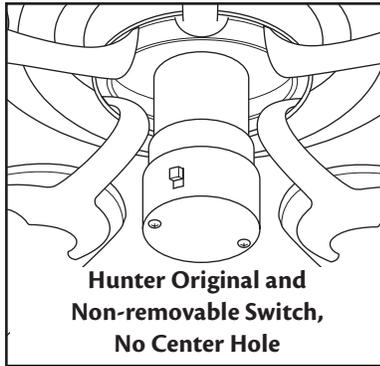

 Installing the Light Kit on Fans With Non-Removable Switch Housing and No Center Hole



1. To install the light fixture in a ceiling fan, rather than on the ceiling, first remove the canopy that comes installed on the ceiling light fixture.
2. Loosen the nut inside the canopy and remove the nut, lock washer, and metal ground wire ring. Remove the canopy.
3. Uninstall the two screws from the switch housing plate.
4. Remove the wire nuts from the two wires in the switch housing labeled "Connect Light Here" or "For Light Use." One wire is white and the other wire is black/white striped.

Connect the black/white striped wire from the switch housing to the black wire from the light kit. Connect the white wire from the switch housing to the white wire from the light kit. Secure all wire connections using wire nuts.



To connect the wires, hold the bare metal leads together and place a wire nut over them, then twist the wire nut clockwise until tight.


CAUTION: Be sure no bare metal wires or wire strands are visible after making the connections.

5. Finish attaching the light kit to the switch housing. Use the two screws removed from the switch housing and the lock washers on the red tag. Screw the light kit into the two tabs in the switch housing. Securely tighten the two screws.

WARNING: Improper installation could cause the light fixture to fall, or result in electrical shock or personal injury.




6. Go to the instructions for Installing Bulbs, Chains, Shades.

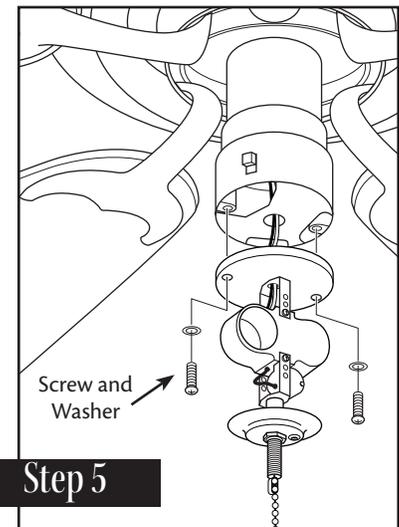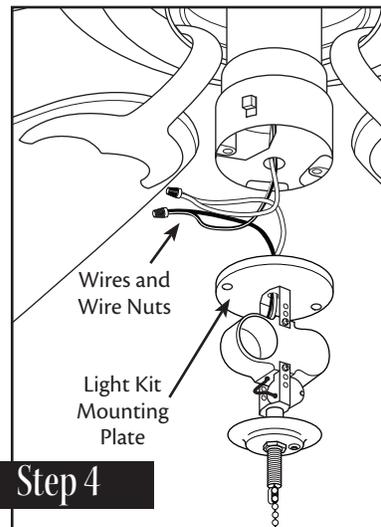

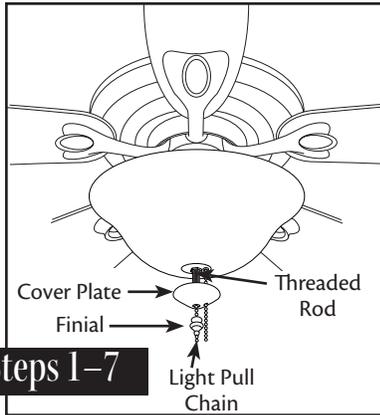


Installing Bulbs, Chains, Shade on Fan-Mounted Lights

1. Install two 60-watt maximum Type B-10 (candelabra) bulbs into the lamp sockets.
2. Attach the provided fan chain extension to the fan chain. Thread the chain through the grommetted hole in the upper cap.
3. Remove the lower chain extension from the light fixture by unhooking it from the breakaway connector. Leave the breakaway connector in place on the upper chain.
4. Place the glass shade over the threaded pipe, against the upper cap.
5. Select a cover plate with side hole in the finish of your choice. Threading the cover plate over the threaded pipe, align the grommetted holes of the lower cap and cover plate. Thread the fan chain through the holes. Ensure that the fan chain extension moves freely.
6. Thread the light pull chain through the finial and screw the finial onto the threaded rod until tight.
7. Reattach the breakaway connector and light chain extension to the light chain.
8. The installation is complete and you can restore power to the ceiling fan.

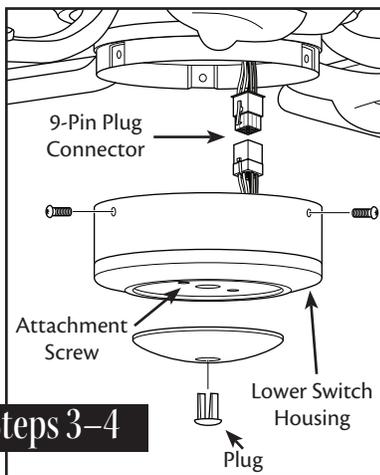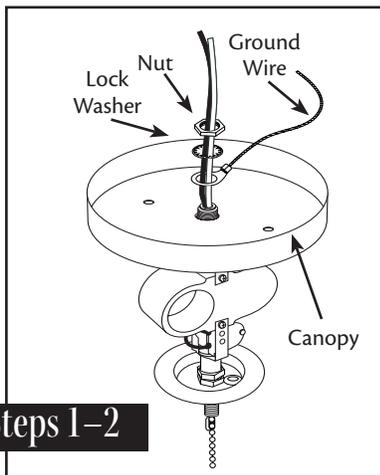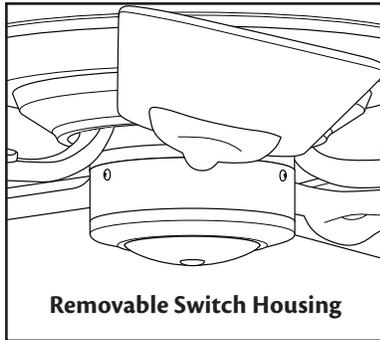

 Installing the Light Kit on Fans with Removable Switch Housings



1. To install the light fixture in the ceiling fan, rather than on the ceiling, first remove the canopy that comes installed on the ceiling light fixture.
2. Loosen the nut inside the canopy and remove the nut, lock washer, and metal ground wire ring. Remove the canopy.
3. Unscrew the three screws from the upper switch housing. Disconnect the 9-pin plug connectors. Remove the lower switch housing.
4. Push the plug from inside the lower switch housing to remove the plug and switch housing cap. Unscrew the two attachment screws on the bottom of the switch housing.

NOTE: Save the plug button and switch housing cap should you choose to remove the light fixture in the future.

5. Feed the two wires from the light kit up through the center hole in the lower switch housing.

CAUTION: If your fan is operated by remote control, take care not to damage the small components on the circuit board inside the housing.

Align the screw holes of the light kit and the lower switch housing.

Install the nut and washer onto the threaded rod from the light kit.


Finish attaching the light kit to the lower switch housing. Use the two attachment screws removed from the lower switch housing and the lock washers on the red tag. Securely tighten the two screws.

WARNING: Improper installation could cause the light fixture to fall, or result in electrical shock or personal injury.

6. Remove the wire nuts from the two wires in the switch housing labeled "Connect Light Here" or "For Light Use."


Connect the black/white striped wire from the switch housing to the black wire from the light kit. Connect the white wire from the switch housing to the white wire from the light kit. Secure all wire connections using wire nuts.

To connect the wires, hold the bare metal leads together and place a wire nut over them, then twist the wire nut clockwise until tight.

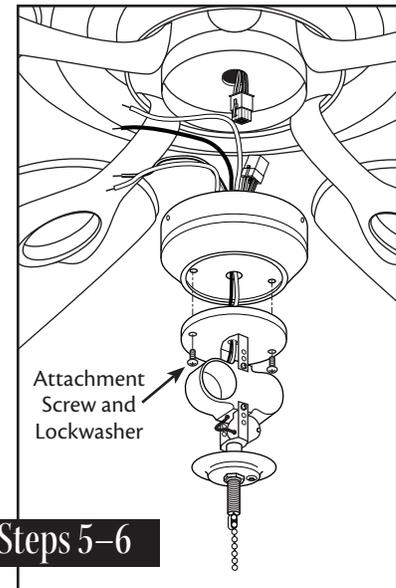

⚠ CAUTION: Be sure no bare metal wires or wire strands are visible after making the connections.

7. Reconnect the 9-pin plug connector.
8. Install screws to reattach the lower switch housing to the upper switch housing.
9. Go to the instructions for Installing Bulbs, Chains, Shades.

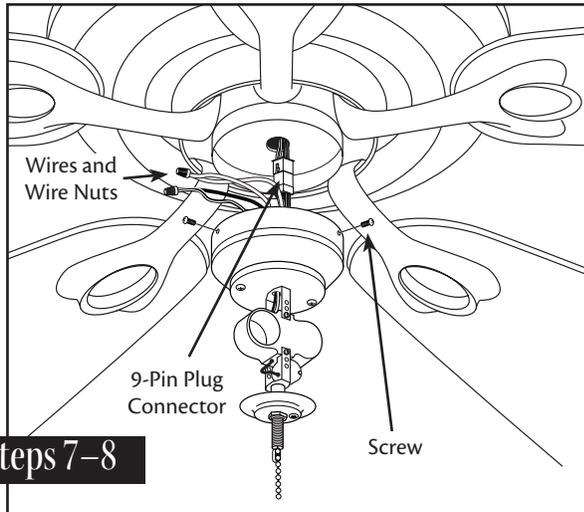

Hunter Fan Company
2500 Frisco Avenue
Memphis, Tennessee 38114

Troubleshooting

Light does not come on.

1. Make sure bulbs are installed properly and filament is not blown.
2. Make sure breakers or fuses are on.
3. Verify that the light power lead is connected at the ceiling. Refer to your ceiling fan manual for locating assembly and wiring.

Glass rattles.

1. Make sure the glass globe is secure.

For other problems or questions, contact the Hunter Fan Company Technical Support at US 888-830-1326 / Canada 866-268-1936.

<http://www.hunterfan.com>

