


# SMART KEY

Customized Security™


Seguridad Personalizada<sup>MR</sup>

## SMARTKEY RESET CRADLE

1

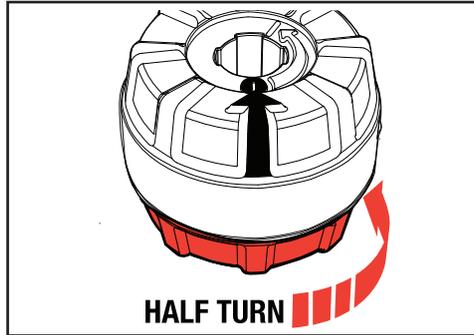

**A** Before you begin, rotate lower dial to the right till it stops to align arrow on upper grip with start point ① on inner dial.

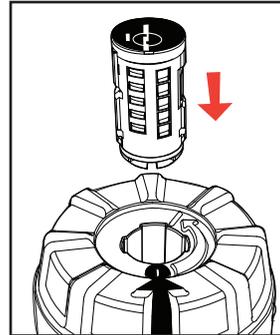


**B** Insert cylinder all the way into the inner dial.




**C** Rotate lower dial half turn to the left till it stops, where the two arrows meet.


2

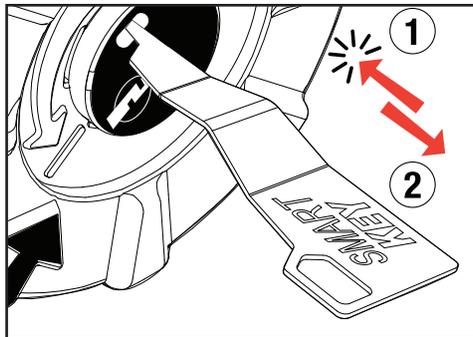

**A** Insert the SmartKey tool into the small hole (next to the keyway) on the cylinder face, and push with force till it goes all the way in, then remove the SmartKey tool.

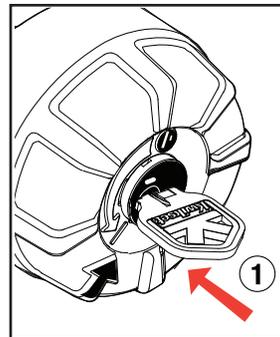


**B** Insert the key you want to learn in the plug, while being sure not to rotate the plug

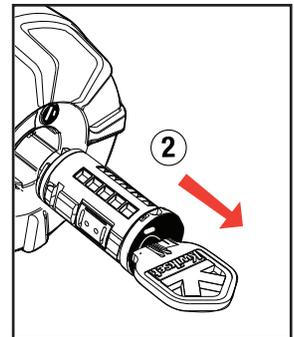


**C** Remove the plug from the reset cradle by gently pulling on the key.

3

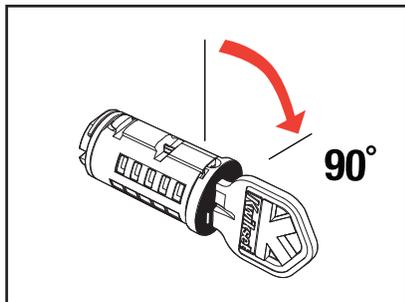

**A** While holding the cylinder body stationary, rotate the key back to the home position.

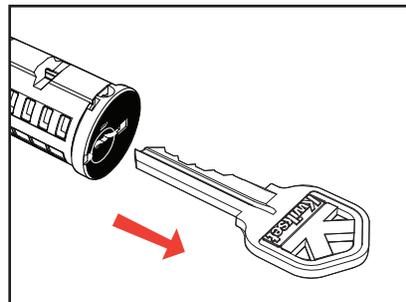

**B** Remove the key.




**C** Reinstall cylinder in product

**CAUTION** To avoid risk of laceration injury, keep reset cradle out of the reach of children and DO NOT insert finger in the center dial hole.


## CUNA PARA RESTABLECER SMARTKEY

1

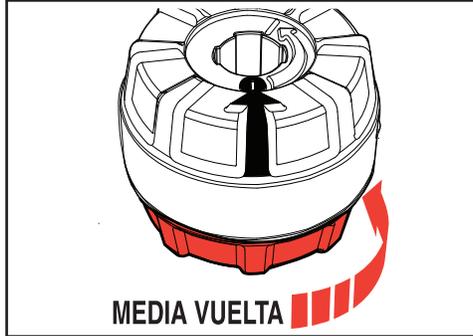

MEDIA VUELTA

- A** Antes de comenzar, gire el disco inferior a la derecha hasta que se detenga, y alinee la flecha en el fijador de aguste con el punto de comienzo **(1)** en el disco interior.

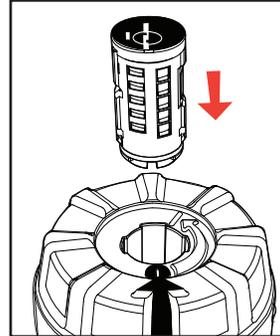


- B** Introduzca el cilindro hasta el fondo dentro del disco interior.




MEDIA VUELTA

- C** Gire el disco de arajo dándole media vuelta a la izquierda hasta que se detenga, donde ambas flechas se juntan.


2

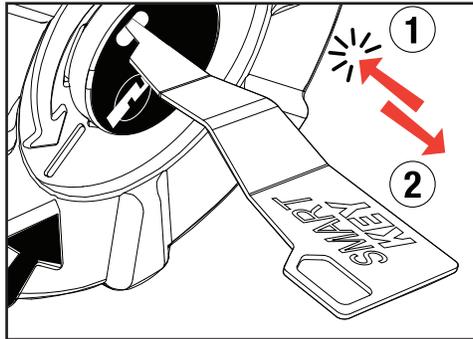

- A** Inserte la herramienta SmartKey al agujero pequeño (al lado de la bocallave) en la cara del cilindro, y empújela con fuerza hasta que se meta totalmente, luego saque la herramienta SmartKey.

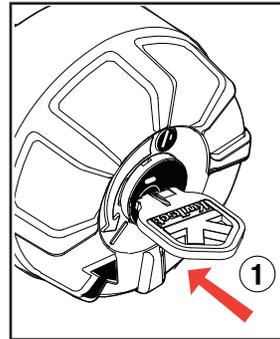


- B** Inserte la llave que desee que se re programe en el cilindro, asegurándose mientras tanto de no girar el cilindro.

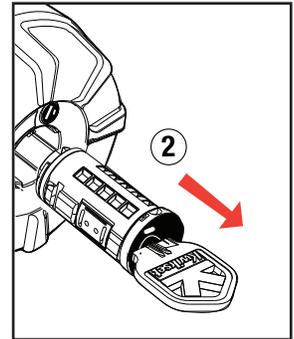


- C** Saque el cilindro de la cuna jalando la llave con cuidado.

3

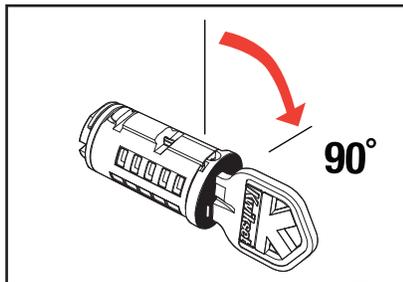

- A** Mientras detiene el cuerpo del cilindro en su lugar, gire la llave de regreso a la posición inicial.

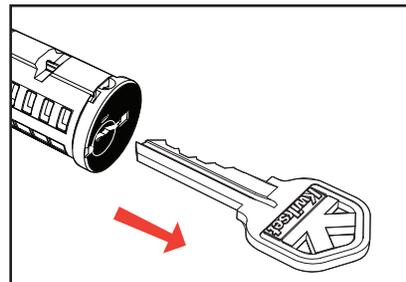

- B** Saque la llave.



- C** Vuelva a instalar el cilindro en el producto.

**! CUIDADO**

Para evitar daño físico, mantenga la cuna lejos de los niños y no meta el dedo en el centro del disco interior.