

OVERLAY PANEL INSTALLATION INSTRUCTIONS

PRODUCT INFORMATION

Thank you for purchasing your panel ready undercounter wine or beverage refrigerator from Avallon. Our brand set out with one particular goal: To present appliances that are as reliable and recognizable as they are attainable. We create products that invite entire kitchens to be built around them, serving as an establishing feature in the very spaces they occupy.

In accordance with our ongoing mission to provide cutting-edge and forward-thinking products to our loyal customers, we recently introduced a line of panel ready appliances. These models are fully customizable, and in just a few short steps, you can match your undercounter refrigerator with your adjacent cabinetry.

This document serves as a guide for installing custom door panels on any of these models. For more product information, including owner's manuals, dimension guides, and more, visit Avallon.com.

PANEL INSTALLATION INSTRUCTIONS



TOOLS REQUIRED

- Phillips Screwdriver
- Drill and 7/64" Drill Bit
- #6 Wood Screws*
- Clamps (Recommended)



NOTE


*Because the sizes of overlay panels vary, hardware for mounting your overlay is not included with your Avallon panel ready refrigerator. #6 wood screws are recommended. The required length depends on the thickness of your overlay panel. Take care to ensure the screws are not too long to avoid them protruding though the overlay panel.



IMPORTANT


Warning: The weight of the overlay panel should not exceed 15 lbs.

- Open the door to a 90° angle.
- 2. Use a Phillips screwdriver to remove the two (2) screws from the top hinge.
- 3. Remove the door by carefully sliding the top of the door forward while lifting the door up and out of the bottom hinge assembly.

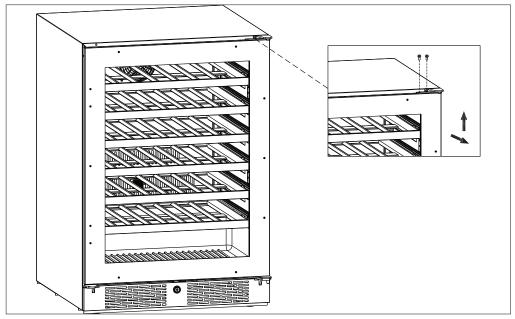





- Lay the door on a solid surface with the glass panel or door front facing downward. We recommend placing the door on a moving blanket, sheet of cardboard, or other soft material before proceeding.
- 5. Peel away and remove the door gasket from the inside of the door frame as shown below. We recommend starting at one corner and gently pulling to avoid tearing the gasket. Set the gasket aside in a safe location.

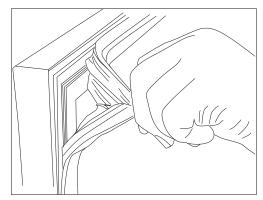


6. Place the door (with the glass panel or door front facing downward) on top of the overlay panel as shown below. Align the top edge of the overlay panel with the top edge of the door frame. We recommend clamping the two pieces together before proceeding to prevent movement and misalignment.

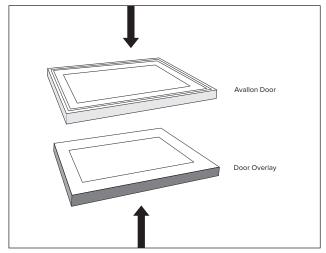

- 7. Drill pilot holes into your overlay panel using the screw hole openings in the Avallon door for exact placement.
- 8. Use #6 wood screws of the correct length to secure the overlay panel to the door. The length of screw depends on the thickness of your overlay panel. Take care to ensure the screws are not too long to avoid them protruding though the overlay panel.
- 9. Your Avallon refrigerator comes with a standard towel bar handle. If you choose to install this handle, do so using the designated holes in the door. Hole positioning is shown on the *Screw Placement* diagrams on the following pages.
- 10. Replace the door gasket by lining the backside of the gasket up with the track in the top of the door. Press the gasket into the track when properly aligned and work the gasket into the track all the way around the door.
- 11. Reinstall the door by placing the lower hinge pin into the lower hinge assembly then securing the two (2) Phillips screws to the upper hinge axis.

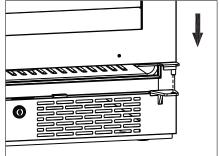

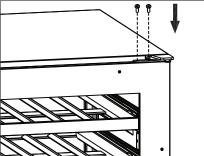





DOOR DIMENSIONS FOR 15" MODELS

MODELS: ABR152PRGLH, ABR152PRGRH, AWC152SPRGLH, AWC152SPRGRH, AWC152DPRGLH, AWC152DPRGRH, ABR152PRSLH, ABR152PRSRH, AWC152SPRSLH, AWC152SPRSRH, AWC152DPRSRH



IMPORTANT

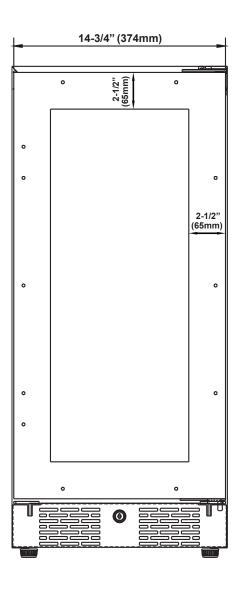

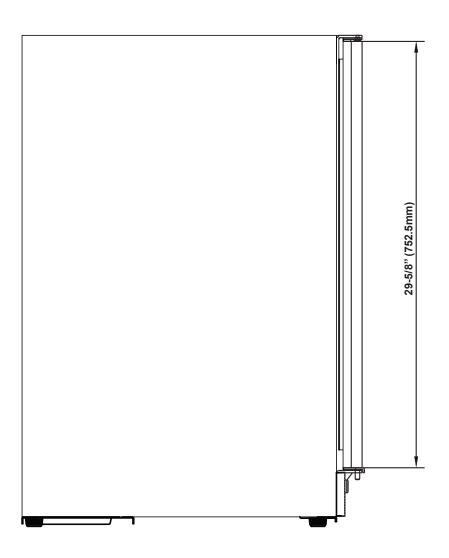




SCREW PLACEMENT FOR 15" GLASS DOOR MODELS

MODELS: ABR152PRGLH, ABR152PRGRH, AWC152SPRGLH, AWC152SPRGRH, AWC152DPRGLH, AWC152DPRGRH



IMPORTANT

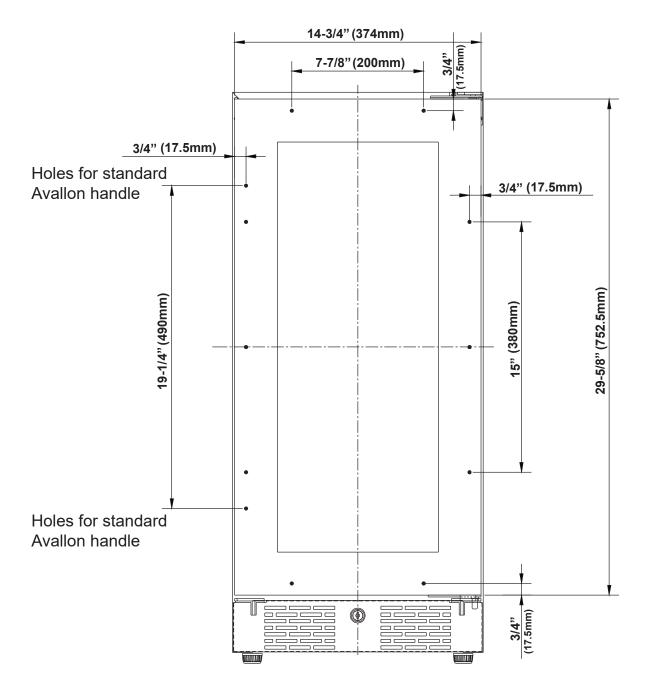

^{*}Handle screw placement for left hinged models is reversed.




SCREW PLACEMENT FOR 15" SOLID DOOR MODELS

MODELS: ABR152PRSLH, ABR152PRSRH, AWC152SPRSLH, AWC152SPRSRH, AWC152DPRSLH, AWC152DPRSRH



IMPORTANT

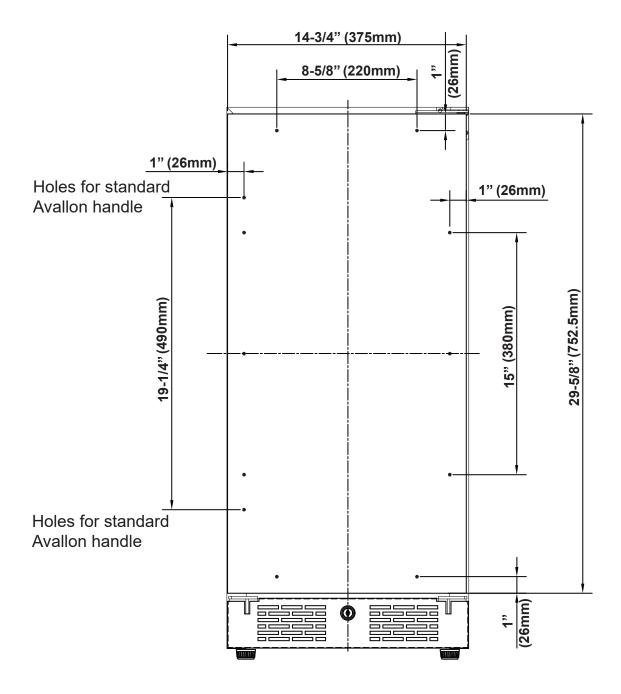

^{*}Handle screw placement for left hinged models is reversed.





DOOR DIMENSIONS FOR 24" MODELS

MODELS: AWC242SPRGLH, AWC242SPRGRH, AWC242DPRGLH, AWC242DPRGRH, AWC242DPRSLH, AWC242DPRSRH, ABR242PRSLH, ABR242PRSRH



IMPORTANT

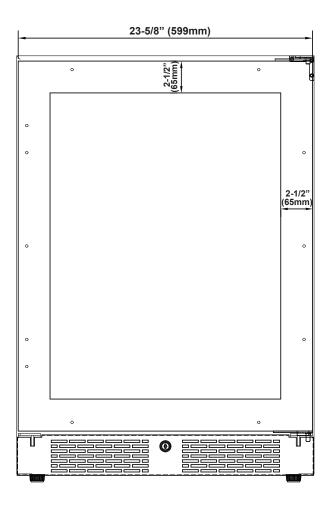

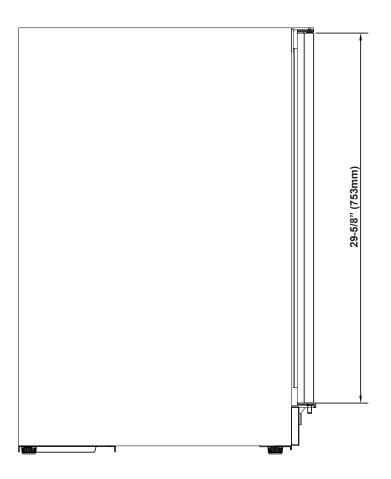




SCREW PLACEMENT FOR 24" GLASS DOOR MODELS

MODELS: AWC242SPRGLH, AWC242SPRGRH, AWC242DPRGLH, AWC242DPRGRH



IMPORTANT

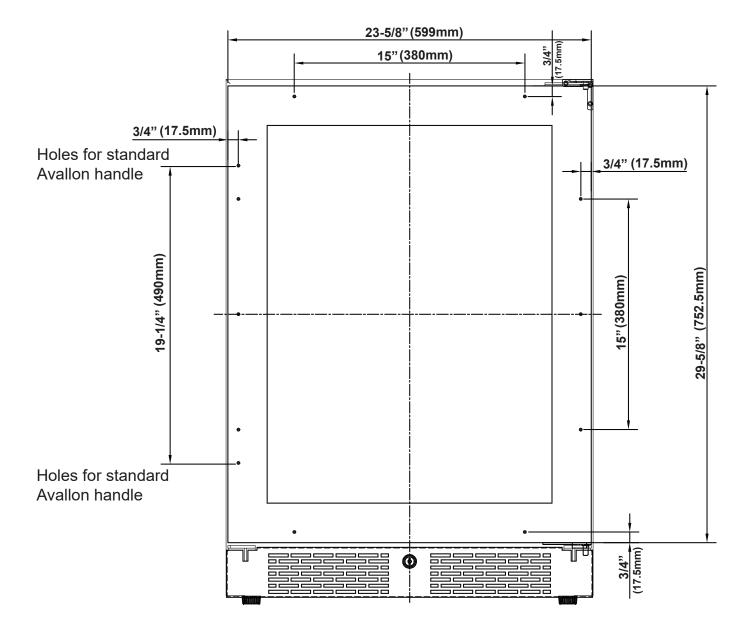

^{*}Handle screw placement for left hinged models is reversed.




SCREW PLACEMENT FOR 24" SOLID DOOR MODELS

MODELS: AWC242DPRSLH, AWC242DPRSRH, ABR242PRSLH, ABR242PRSRH



IMPORTANT

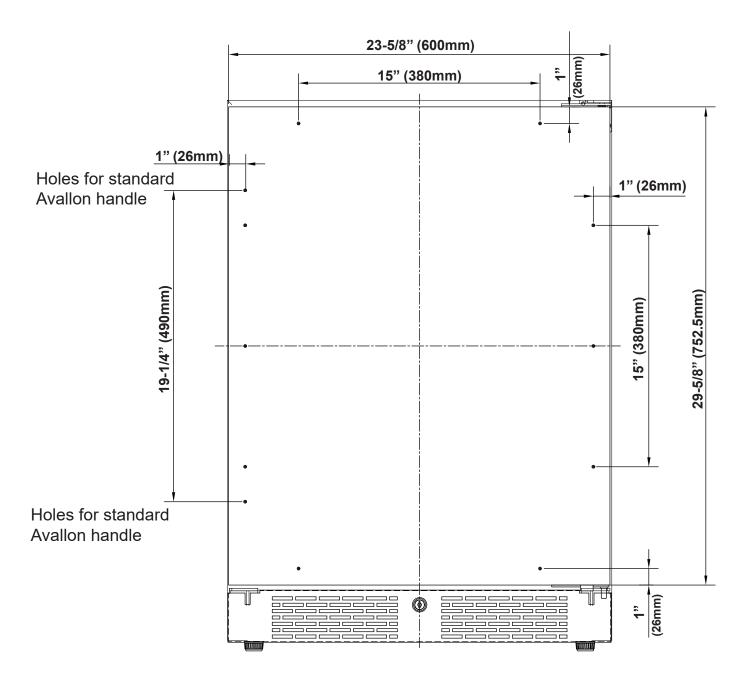

^{*}Handle screw placement for left hinged models is reversed.





DOOR DIMENSIONS FOR 24" FRENCH DOOR MODELS

MODELS: AWC242FDPRG, AWBC242GGFDPRG



IMPORTANT

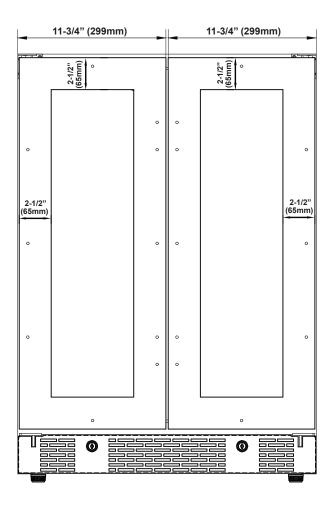

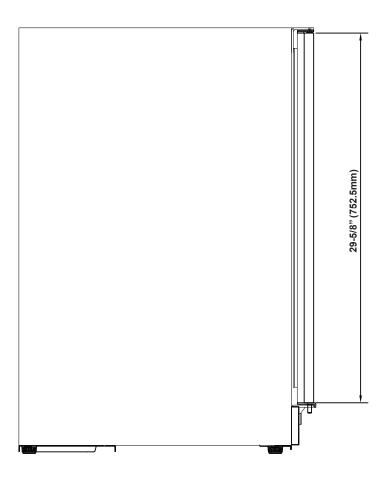



SCREW PLACEMENT FOR 24" FRENCH DOOR MODELS

MODELS: AWC242FDPRG, AWBC242GGFDPRG



IMPORTANT

