






 



 
GOLDEN
Elegant lighting for everyday living

PARTS & ASSEMBLY SHEET

Fixture Name: TWIST 8013-FM PC

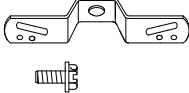This fixture assembled PO: _____ Date: _____

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

PARTS LIST		
Company Name: _____ Co. Account #: _____ to be filled out by retailer		
Mounting Strap 1ea L104*W24*H11mm 	Mounting screw 2ea 8/32-IP*H1" 	Mounting screw 2ea 5/32-IP*H1-1/2" 
Hex nut 2ea 3/8-IP*H3mm 	Wire connector 2 ea A3 Orange 	Nipple 1ea 3/8"*H130mm 
Bottom cap 1ea Φ60.5"*H22mm 	Finial 1ea 3/8-IP*H21mm 	
Part Needed _____		Quantity _____
Part Needed _____		Quantity _____
Reason why (missing, scratched, broken glass, bent, bad finish)		
Comments _____		


FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

1. Thread the Nipple (G) into the Coupling (E), and then thread the Hex Nut (F) onto Nipple (G) until tight.
2. Install the lighting bulbs in accordance with the fixture's specification .
3. Place the Glass Shade (H) over the Ceiling Pan (D). The Nipple (G) shall protrude through the bottom hole of the Glass Shade (H).
4. While holding the Glass Shade (H) slide the washer (I) over Nipple (G) and thread Hex Nut (J) until tight.
5. Slide Bottom Cap (K) over Nipple (G) and thread the Finial (M) until tight. (DO

NOT EXCEED MAXIMUM WATTAGE RATING!)

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

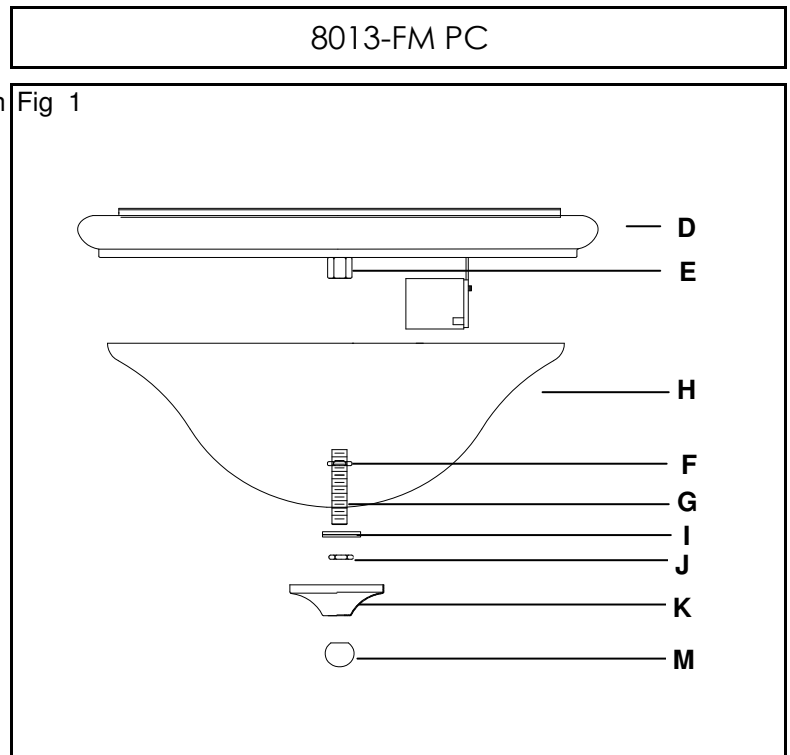

For Customer Service, contact the place of purchase to arrange for replacement parts.

Fixture Name: TWIST 8013-FM PC

For Flush mount Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig 1)

1. Carefully remove the new fixture from the carton and the yellow bag that holds all your parts. Check that all parts are included as shown in the illustration and parts list.
2. Shut off power at the circuit breaker and remove the old fixture from ceiling, including the old mounting strap.
3. Thread the two Fixture Mounting Screws (A) into the pre-drilled Holes in the Mounting Strap (B) spaced the same distance apart as the holes in the Ceiling Pan.
4. Attache Mounting Strap (B) to the junction box using the two Mounting Screws (C)

CONNECTING THE WIRES (Fig 2)

5. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
 6. Attach the GROUND wire (GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (B) or connect both wires together using the correct size of wire connectors.
- NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
7. Tuck these wire connections neatly into the Junction Box.

FINISHING THE INSTALLATION (Fig 3)

8. Finish mounting the Ceiling Pan (D) by placing it over the Mounting Strap (B). Rotate the Pan until the Mounting screws(A) protrude through the "Keyholes" located in the bottom of Ceiling Pan (D). Using a screw driver, secure the Ceiling Pan (D) by screwing Mounting Screws (A) until tightly

YOUR INSTALLATION IS NOW COMPLETE. RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.

Fig. 1

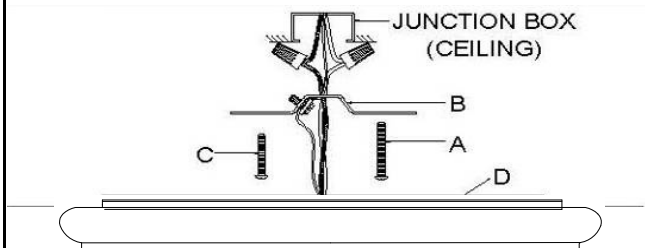


Fig. 2

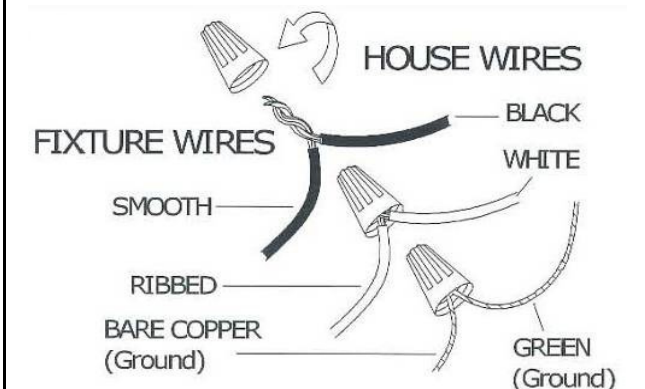


Fig. 3

