

INSTALLATION INSTRUCTIONS

For Models # P3613/P3614

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig. 1)

1. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
2. Shut off power at the circuit breaker and remove old fixture including the crossbar.
3. Install the screws (K) into crossbar (A) and secure with hex nut (L).
4. Attach the crossbar (A) to the Outlet box in the ceiling with two screws (B). The side of the crossbar with "GND" marked on it and two convex points must face out.
5. At this point, connect the electrical wire as shown in Figure 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture Ground Wire to it. Otherwise, connect the fixture Ground Wire directly to the crossbar using the Green Screw provided.
6. Place the Canopy (C) up to the ceiling and secure by threading the Cap Nuts (D) onto the screws.
7. Place glass (I) into ring (J). Suspend the ring from the fitter with rods (E).
8. Install the light bulbs (3 / 4X100W, Type A, Medium Base) in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING FOR EVERY BULB!)**
9. Install glass covers (G) and secure with cap nuts (F) to the fitter assembly (H).
10. Adjust height and level fixture with cable locks in canopy.

Your installation is now complete. Return power to the junction box and test the fixture.

