## **INSTALLATION INSTRUCTIONS FOR 1134-84**

# WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER. AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

#### READ AND SAVE THESE INSTRUCTIONS

#### **PREPARATION**

- Shut off power at the fuse box or circuit breaker box. If necessary. Remove the old fixture including the mounting hardware.
- Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.

### **ASSEMBLING THE FIXTURE (FIG. 1)**

- 3. Determine the desired hanging height and thread rods (L, K, J, I) into fixture body (M). Carefully pass the wires through each rod as you assemble.
- 4. Thread the couplings (H) onto the top of the last attached rod.
- Insert the nipples of coupling (H) into holes in canopy (D), then place metal plate (G) over the nipples and secure with lock washers (F) and nuts (E).

#### **MOUNTING THE FIXTURE (FIG.1)**

 Secure mounting bracket (A) to junction box (not provided) with junction box screws (B) (Size: #8-32\*0.6"L) through the slotted holes in hanging bracket (A). The side of the mounting bracket marked "GND" must face out.

#### **CONNECTING THE WIRES (FIG. 2)**

- 7. At this point, connect the electrical wires as shown in figure 2, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting bracket using the green screw provided
- 8. Tuck the wire connectors neatly into the ceiling junction box.

#### **COMPLETING THE INSTALLATION (FIG. 1)**

- 9. Raise the canopy (D) to the mounting bracket (A), and the secure canopy (H) with mounting screws (C) (Size: #8-32\*0.5"L).
- Install the proper light bulb for your fixture. Install the light bulbs (Included) in accordance with the fixture's specifications. (DO NOT EXCEED THE MAXIMUM WATTAGE!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)

Your installation is now complete. Return the power to the junction box and test the fixture.





