




COMPACT ELECTRIC DRYER

MODELS:

NEC3240FW0 (White)


BULKHEAD PARTS

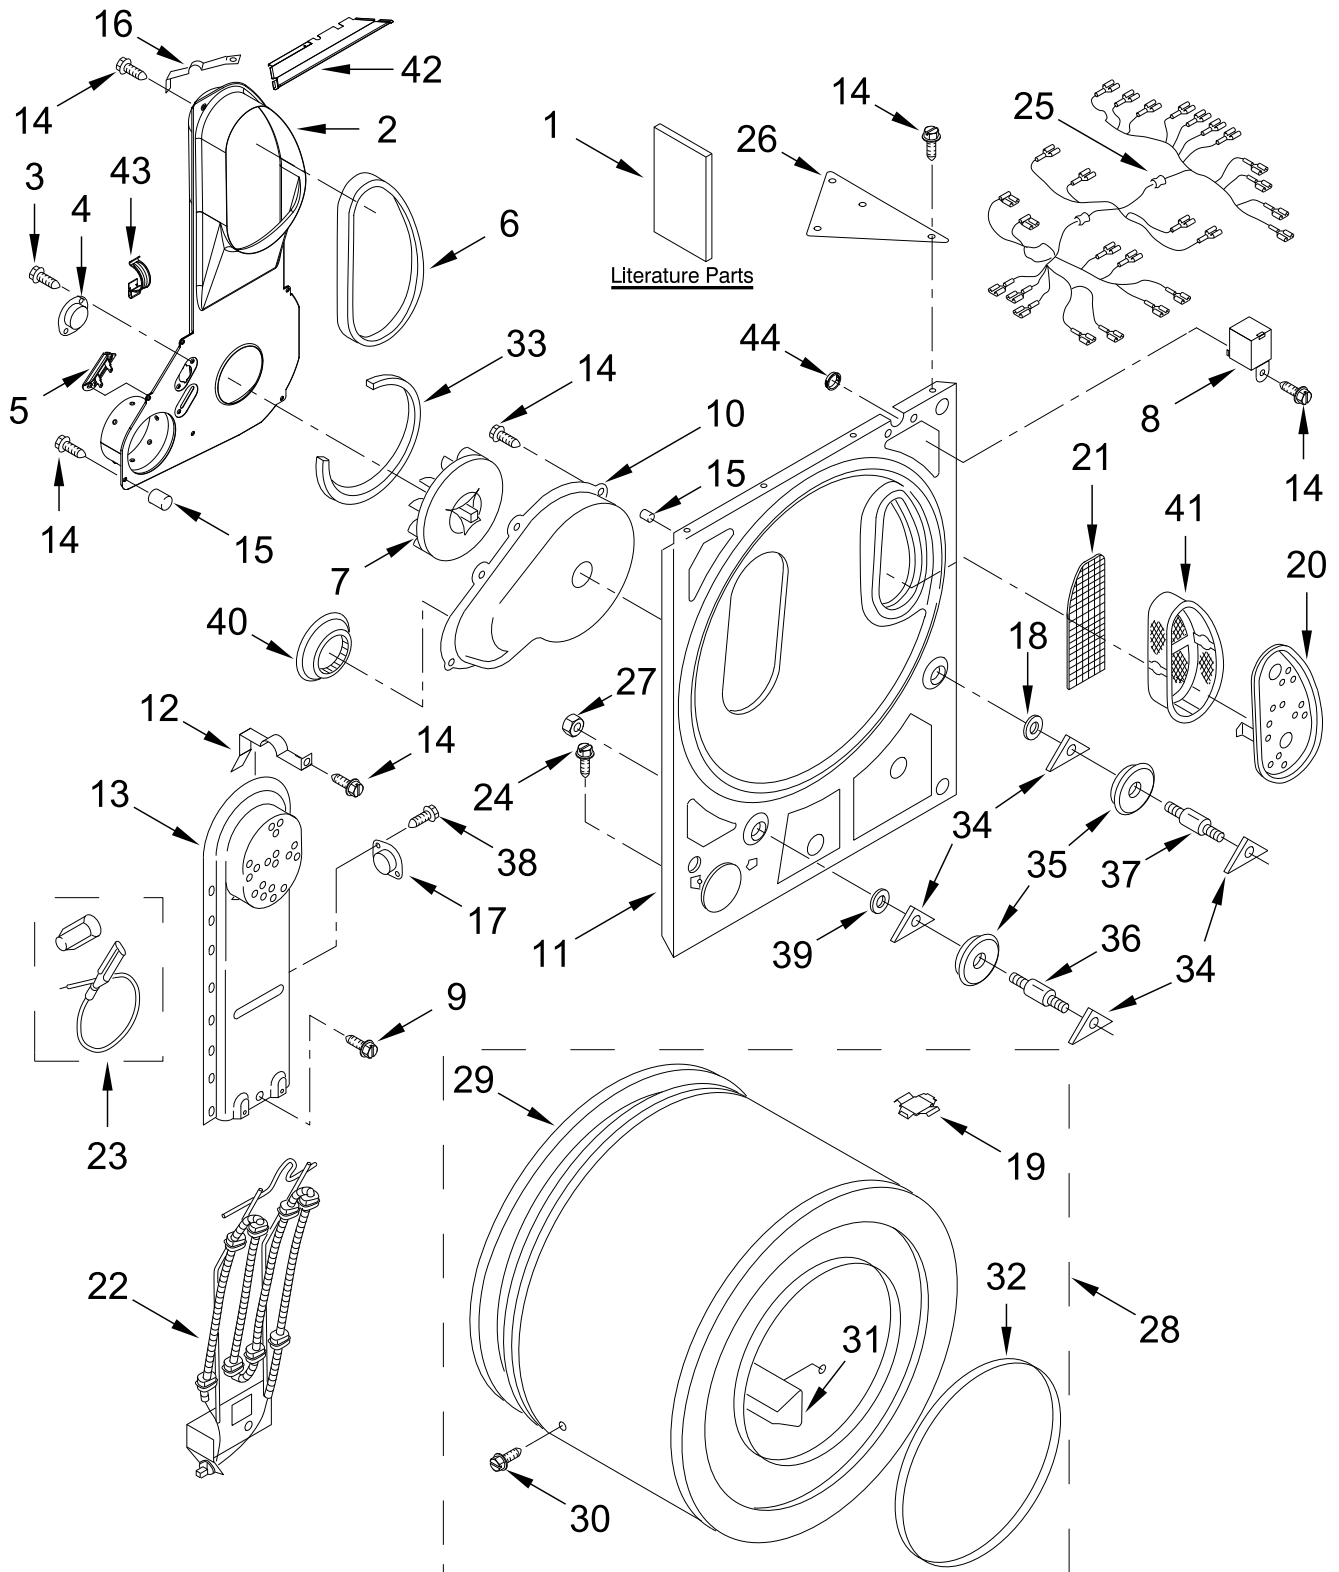

BULKHEAD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	15	359702	Cap	29	345648	Seal, Drum Rear
	W10773360	Owners Manual	16	9830393	Clip	30	W10219342	Screw
	W10488815	Label, Wiring Diagram	17	3404154	Thermostat, High Limit (200~/160F)	31	685207	Baffle, Drum
2	696545	Air Duct Assembly	18	348197	Washer	32	3394508	Ring, Bearing
3	8533971	Screw	19	8066086	Plug, Drum Hole	33	8066094	Seal, Fan Scroll
4	3398128	Thermostat, Internal Bias	20	8531967	Cover, Lint Screen Outlet	34	W10512946	Washer, Tri Ring
5	3392519	Fuse, Thermal (91C)	21		Screen, Back-up (Not Serviceable)	35	3397590	Roller, Support
6	339956	Seal	22	3403586	Element, Heater	36	W10359269	Shaft, Drum Roller - Right Hand Thread
7	696426	Wheel, Blower	23	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)	37	W10359270	Shaft, Drum Roller - Left Hand Thread
8	W10503559	Buzzer, Mini	24	342202	Screw, Tapping	38	90767	Screw
9	489463	Screw	25	W10488665	Wiring Harness (Includes Fuse)	39	3388703	Washer
10	696419	Scroll, Fan	26	345325	Gusset	40	W10389567	Shield, Exhaust
11	695931	Bulkhead	27	W10298789	Nut, Hex	41	8531964	Lint Screen
12	3398161	Clip, Heater Box	28	695943	Drum Assembly Complete	42	W10524700	Shield, Bulkhead
13	3401380	Box, Heater				43	98997	Clip
14	343641	Screw				44	8066084	Bushing, Snap


CABINET PARTS

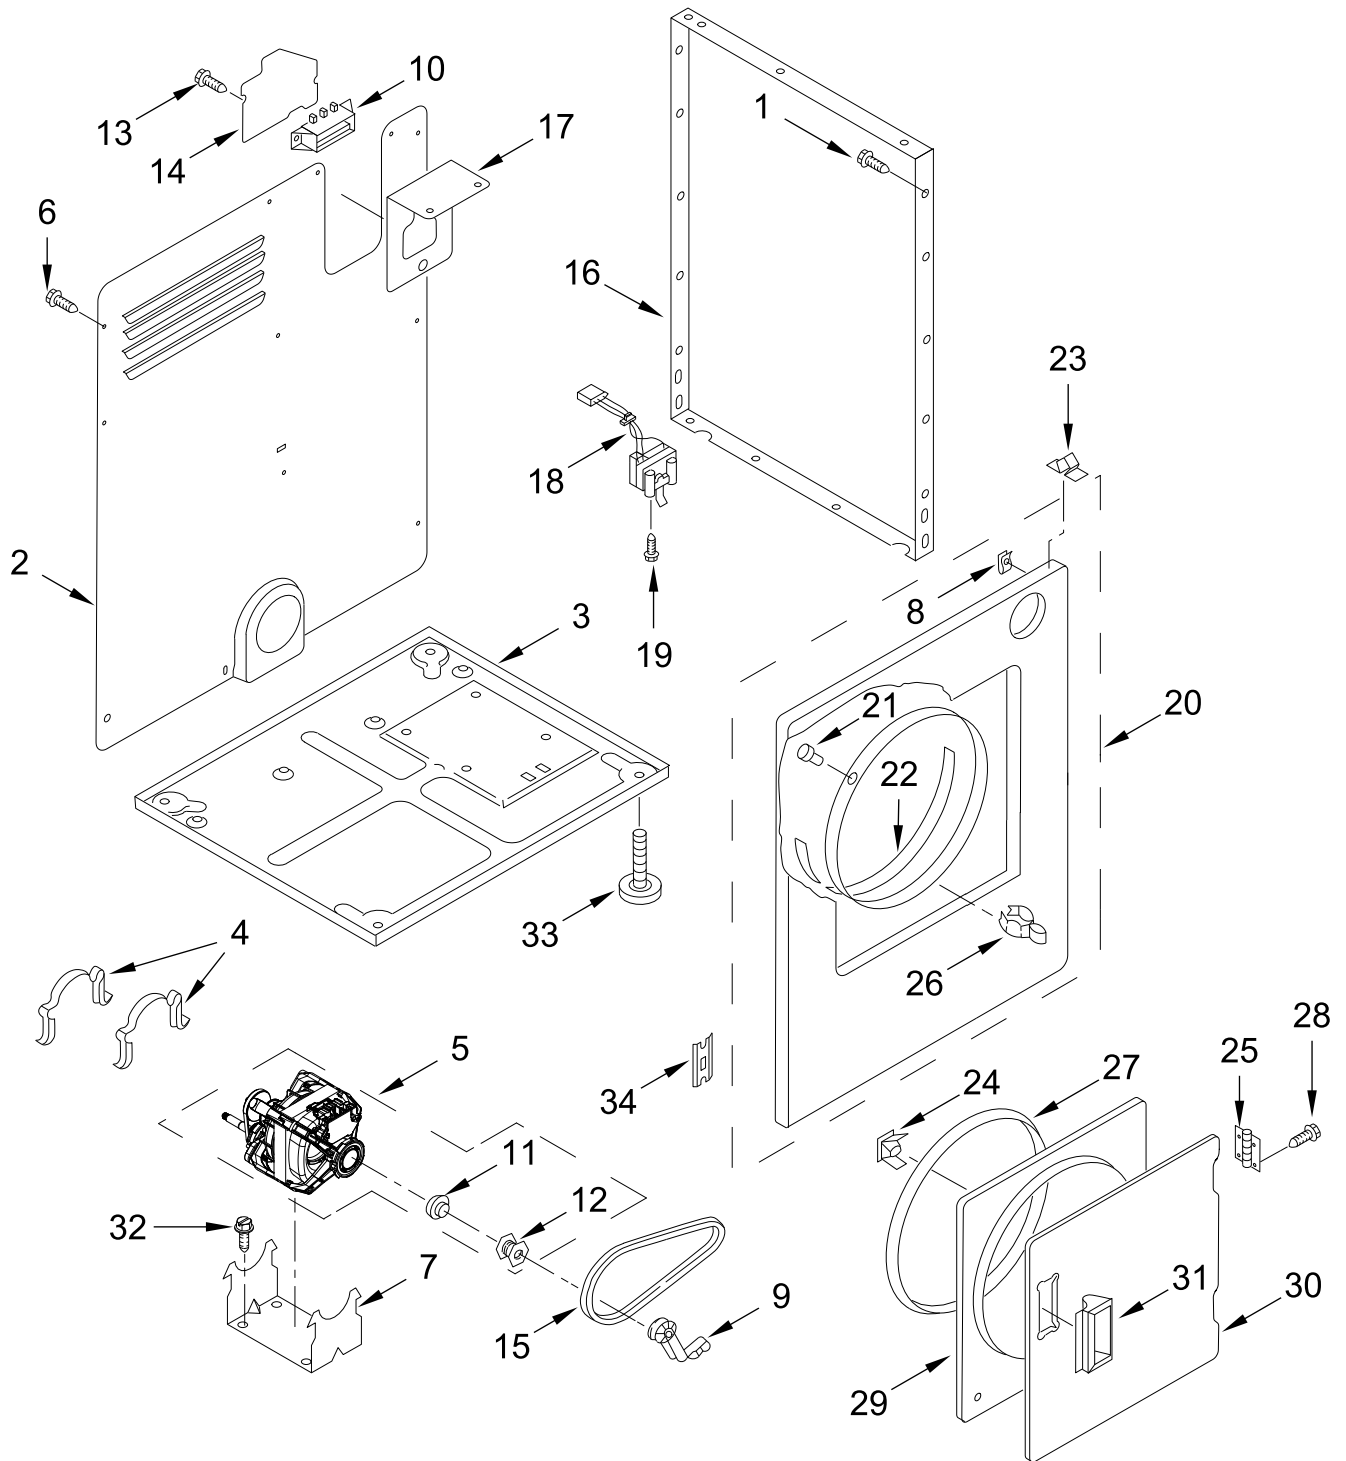

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	343641	Screw	15	8066064	Belt, Drive	26	696144	Strike, Door
2	695201	Panel, Rear	16		Panel, Side	27	W10823581	Seal, Door
3	348726	Base Assembly		348705	White	28	342055	Screw
4	660658	Clamp, Motor	17	690259	Support, Terminal Block	29	695656	Door, Rear
5	W10396037	Motor, Main Drive (60 Hz)	18	3406104	Door Switch Assembly	30		Door, Front
6	8533974	Screw	19	697773	Screw		348205	White
7	696541	Base, Motor	20		Panel, Front	31	8562104	Handle, Door
8	98234	Clip, Ground		8066229	White	32	3390631	Screw
9	691366	Idler Assembly	21	685203	Clip, Felt Pad	33	W10001130	Foot, Front
10	3397659	Block, Terminal	22	8066123	Seal and Bearing Assembly	34	W10775448	Clip, Front Panel
11	3393657	Restrainer, Belt	23	345670	Lock Top			
12	8066051	Pulley, Motor	24	3389441	Assembly, Door Catch			
13	3393008	Screw	25	348023	Hinge and Pin Assembly			
14	W10509545	Cover, Terminal Block						

TOP AND CONSOLE PARTS

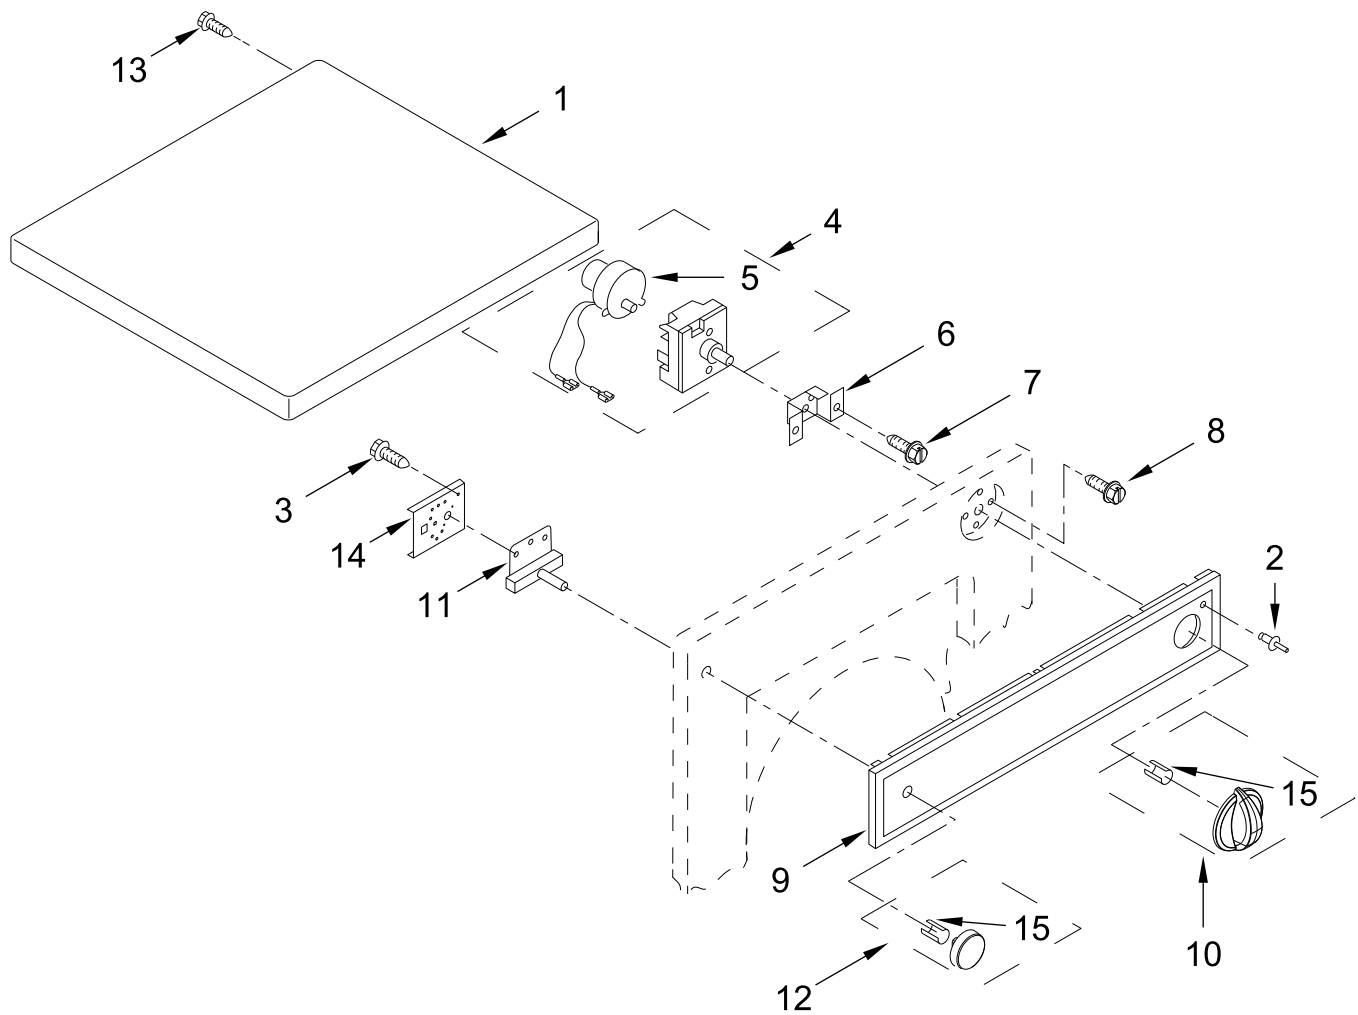

TOP AND CONSOLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Top
	345703	White
2	307563	Rivet, Pop
3	3390631	Screw
4	8563882	Timer, 60 Hz.
5		Timer Motor (Not Serviceable)
6	348171	Bracket, Timer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	3400882	Screw
8	8533971	Screw
9	W10772596	Panel, Control
10		Assembly, Timer Knob
	8544955	White
11	W10503561	Switch, Push-To-Start

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
12		Assembly, Push-To-Start Knob
	8544939	White
13	343641	Screw
14	3406860	Bracket, Front Panel
15	8536939	Clip, Spring

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350938	Gray Primer
	350930	White

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)