

Ice Machine Cleaning & Sanitizing

The ice maker must be cleaned & sanitized at least once a year.

HOSHIZAKI

KM-1301SAH/3, SWH/3, SRH/3 KM-1601SAH/3, SWH/3, SRH/3 KM-1900SAH/3, SWH/3, SRH/3 KM-2100SWH3, SRH3 KM-2500SWH3, SRH3

Cleaning Prep:

- 1 Remove the **Front Panel**, move the control switch to **OFF**. After 3 min., move the switch to **ICE**, then replace the panel.
- 2 After 3 min., remove the Front Panel, move the switch to OFF.
- 3 Remove all ice from the ice storage bin and/or dispenser.
- **WARNING! IF ON DISPENSER**, turn off the dispenser power supply after dispensing all the leftover ice.






DO NOT leave icemaker unattended when panels are off







Cleaning:

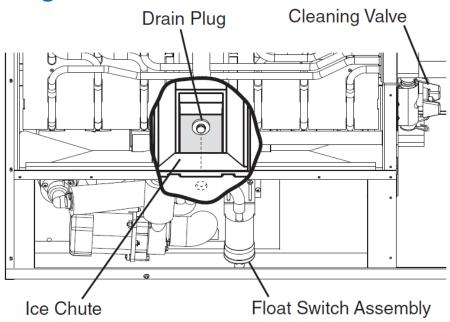

Front View of Ice Maker with Front Panel removed

- 4 Remove the **Front Insulation Panel**, remove the **Drain Plug**. After the water tank has drained, replace **Drain Plug**. Replace the **Front Insulation Panel**.
- ⚠ NOTICE! DO NOT cross thread the drain plug.
- 5 Refill water tank by moving the control switch to ICE, replace the Front Panel. After 3 minutes, remove the Front Panel, then move the control switch to OFF.
- 6 Remove the Front Insulation Panel. Pour Hoshizaki
 Scale Away into the water tank (see Table).
 Replace the Front Insulation Panel. Turn the cleaning valve left until completely

vertical (open).

Model	Scale Away
KM-1601 and Smaller	32 fl. oz. (946 ml)
KM-1900 and Larger	43 fl. oz. (1,272 ml)

NOTICE! AVOID EXCESSIVE FOAMING, wait 1 minute before next step.



3

min.

Sanitizing:

- Fill the water tank
- CLOSE the cleaning valve
- Move control switch to ICE, replace the front panel
- After 3 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation 15 panel
- Pour chlorine bleach* into the water tank (see below)

KM-1601 and smaller 3.75 fl. oz (110 ml)

KM-1900 and larger

5 fl. oz (148 ml)

- Replace the front insulation panel
- OPEN the cleaning valve

* Use bleach without additives.
Additives cause excessive foaming, and reduces effectiveness of the cleaning.

Wait 1 minute to avoid excessive foaming





- Move control switch to WASH, replace the front panel
- After 45 minutes, remove the front panel
- Move control switch to OFF

G continued on the back...

#51002 | 7.21.2016 Tech Support: 1.800.233.1940 Page 1

  - Move the control switch to WASH, replace Front Panel.
- 8 After 30 minutes, remove Front Panel, then move the control switch to OFF.
- NOTICE! DO NOT leave the control switch on WASH for extended periods when water tank is empty. It will damage water pump seals.







F sanitizing continued...

- Remove the front insulation panel and drain
- After the water tank has drained, replace drain plug and

RINSE 1: (Steps 19-21)

front insulation panel



18

- CLOSE cleaning valve
- Move control switch to ICE, replace the front panel
- · After 3 minutes, remove the front panel
- · Move control switch to OFF
- OPEN cleaning valve



- Move control switch to WASH, replace the front panel
- · After 5 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation panel and drain plug
- After the water tank has drained, replace drain plug and

RINSE 2 & 3: (Steps 22-28)

front insulation panel



- Repeat 2x (Steps 19-21) for complete ice/food safety
- Clean the dispenser / storage bin liner with a neutral cleaner (dish soap)
- · Rinse thoroughly
- CLOSE cleaning valve



- Move control switch to ICE, replace the front panel
- · Replace all panels in their correct positions

 


IF ICE MAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning



Cleaning Rinse:

- 11 Turn the cleaning valve to the right until completely horizontal (closed). Move the control switch to ICE. replace Front Panel. After 3 minutes, remove the Front Panel, move switch to OFF.
- **⚠ NOTICE! ICE MACHINE WILL NOT WORK,** unless valve is completely closed.
- 12 Turn the cleaning valve to the <u>left</u> until completely vertical (open). Move the control switch to WASH. replace the Front Panel. After 5 minutes, remove the Front Panel, switch to OFF.
- 13 Remove the Front Insulation Panel, then remove the Drain Plug. After the water tank has drained, replace all items. Continue to Sanitation - Step 14 on front...





CONTROL PANEL WASH > 5 minutes > OFF

OPEN cleaning valve:

- To allow cleaning solution flow to the inside the evaporator
- Turn left to open (vertical)



CLOSE cleaning valve:

- Must be closed for normal ice making operation
- Turn right to close (horizontal)

Cleaners





DOWNLOAD COMPLETE INSTRUCTION MANUAL:



hoshizakiamerica.com/support

Type in the model number of your ice machine (including dashes) to download manuals

CLEANING SCHEDULE

- Scoop
- Water Filters
- Exterior

- Bin Door/Top Kit

- Ice Maker/Bin
- Water Supply Inlet Clean inlet screen
- Condenser Water Hoses
 - Inspect. Replace if req'd
- DAILY | MONTHLY | YEARLY

Dish soap, rinse well

Check psi, change if req'd

Dish soap & damp cloth

Warm water & clean cloth

Follow these instructions

Inspect. Clean with brush

Tech Support: 1.800.233.1940

WARNING!

DO NOT use ammonia type cleaners. Can cause damage to icemaker

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals