
Hoshizaki America, Inc.

Condensing Unit

Model SRC-10H

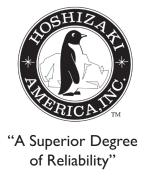

PARTS LIST

www.hoshizaki.com



Number: 71236 Issued: 5-23-2005 Revised: 3-16-2016

CONTENTS

Auxiliary Codes	. 3
Note About Ordering Parts	. 3
A. Main Assembly & Refrigeration Circuit	
B. Control Box Assembly	
C. Accessories & Labels	

Auxiliary Codes

SRC-10H

P-0 July 2004

Q-0 July 2005

S-0 February 2007

T-0 April 2008

U-0 January 2009

V-0 January 2010

A-0 January 2011

B-0 January 2012

C-0 January 2013

D-0 January 2014

E-0 May 2015

F-0 March 2016

Auxiliary Code Breakdown


The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

Note About Ordering Parts

Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

A. Main Assembly & Refrigeration Circuit SRC-10H


P-0 to F-0

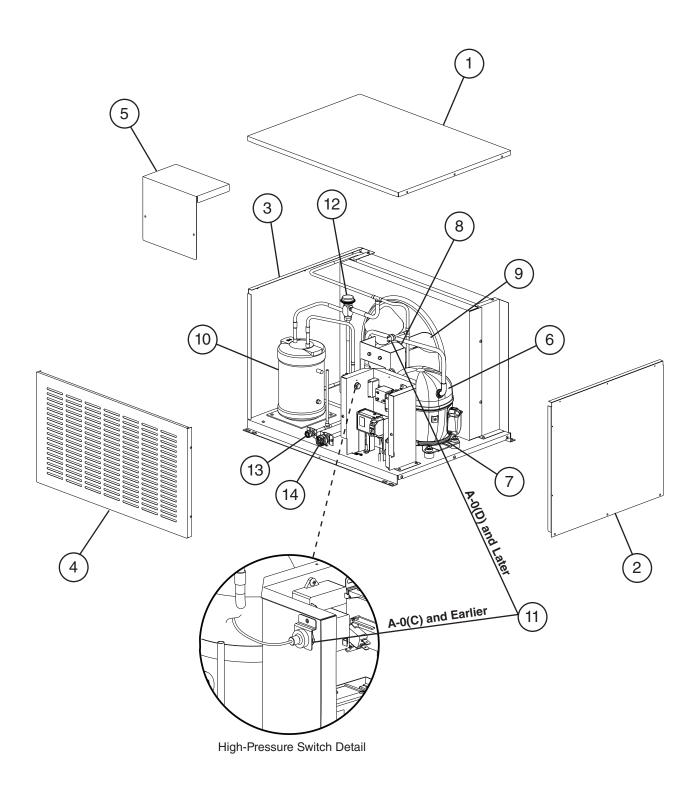

Title: A. Main Assembly & Refrigeration Circuit Model: SRC-10H											
				Required Number							
				P-0	A-0						
				to	(D)	D-0					
Index		Material or		A-0	to	to					
No.	Description	Model Number		(C)	C-0	F-0					
Main Assembly											
1	Top Panel		2A3164-01	1	1	1					
2	Right Side Panel		2A3163-01	1	1	1					
3	Left side Panel		2A3162-01	1	1	1					
4	Louver Panel		2A1598-01	1	1	1					
5	Control Box Cover	i	3A3182-01	1	1	1					
		•									
		Refrige	ration Circuit								
6	Compressor		4A3494-01	1	1	-					
			3A6900-02			1					
7	Crankcase Heater		434186-01	1	1	-					
			4A5091-01			1					
8	Fan Motor		4A3201-01	1	1	1					
9	Fan Blade	1	4A1493-01	1	1	1					
10	Receiver		437652-01	1	1	1					
11	High-Pressure Switch		433441-05	1	-						
			463180-04		1	1					
12	Headmaster (Condensing Pressure Regulator)		4A0229-03	1	1	1					
13	Liquid Line Coupling		426554-01	1	1	1					
14	Suction Line Coupling		434072-01	1	1	1					

B. Control Box Assembly SRC-10H


P-0 to F-0

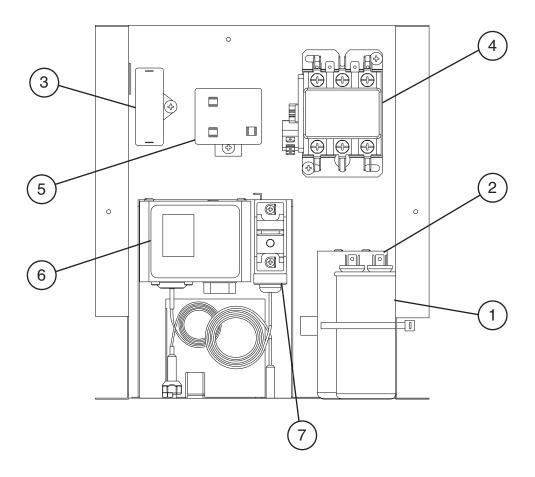

Title: B. Control Box Assembly Model: SRC-10H												
				Required Number								
				P-0	D-0							
Index		Material or		to	to							
No.	Description	Model Number	Part Number	C-0	F-0							
1	Run Capacitor	20MFD, 440VAC	3A2005-01	1	-							
		30MFD, 440VAC	3A2005-14		1							
2	Start Capacitor	189-227MFD, 330VAC	3A0076-12	1	-							
		108-130MFD, 330VAC	3A0076-22		1							
3	Fan Motor Capacitor	10MFD, 250VAC	443192-01	1	1							
4	Magnetic Contactor		4A0794-01	1	1							
5	Start Relay		4A1107-12	1	-							
			4A1107-07		1		Î				Î	
6	Control Low-Pressure Switch		4A5353G01	1	1							
7	Safety Low-Pressure Switch		4A3497-01	1	1							

C. Accessories & Labels SRC-10H

P-0 to F-0

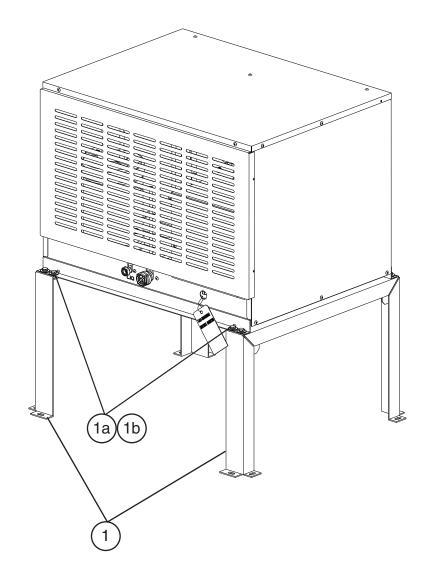

Title: C	Title: C. Accessories & Labels Model: SRC-10H												
				Required Number									
				P-0									
Index		Material or		to									
No.	Description	Model Number	Part Number	F-0									
1	Leg		2A3166G01	2									
1a	Hex Head Bolt w/ Washer	8×20, SS	7B0130820	8									
1b	Hex Nut	M8, SS	7N12-0800	8									