

KitchenAid®

BOTTOM MOUNT REFRIGERATOR


MODELS:

KRFF300EWH00 (White)

KRFF300EBL00 (Black)

KRFF300ESS00 (Stainless Steel)


CABINET PARTS

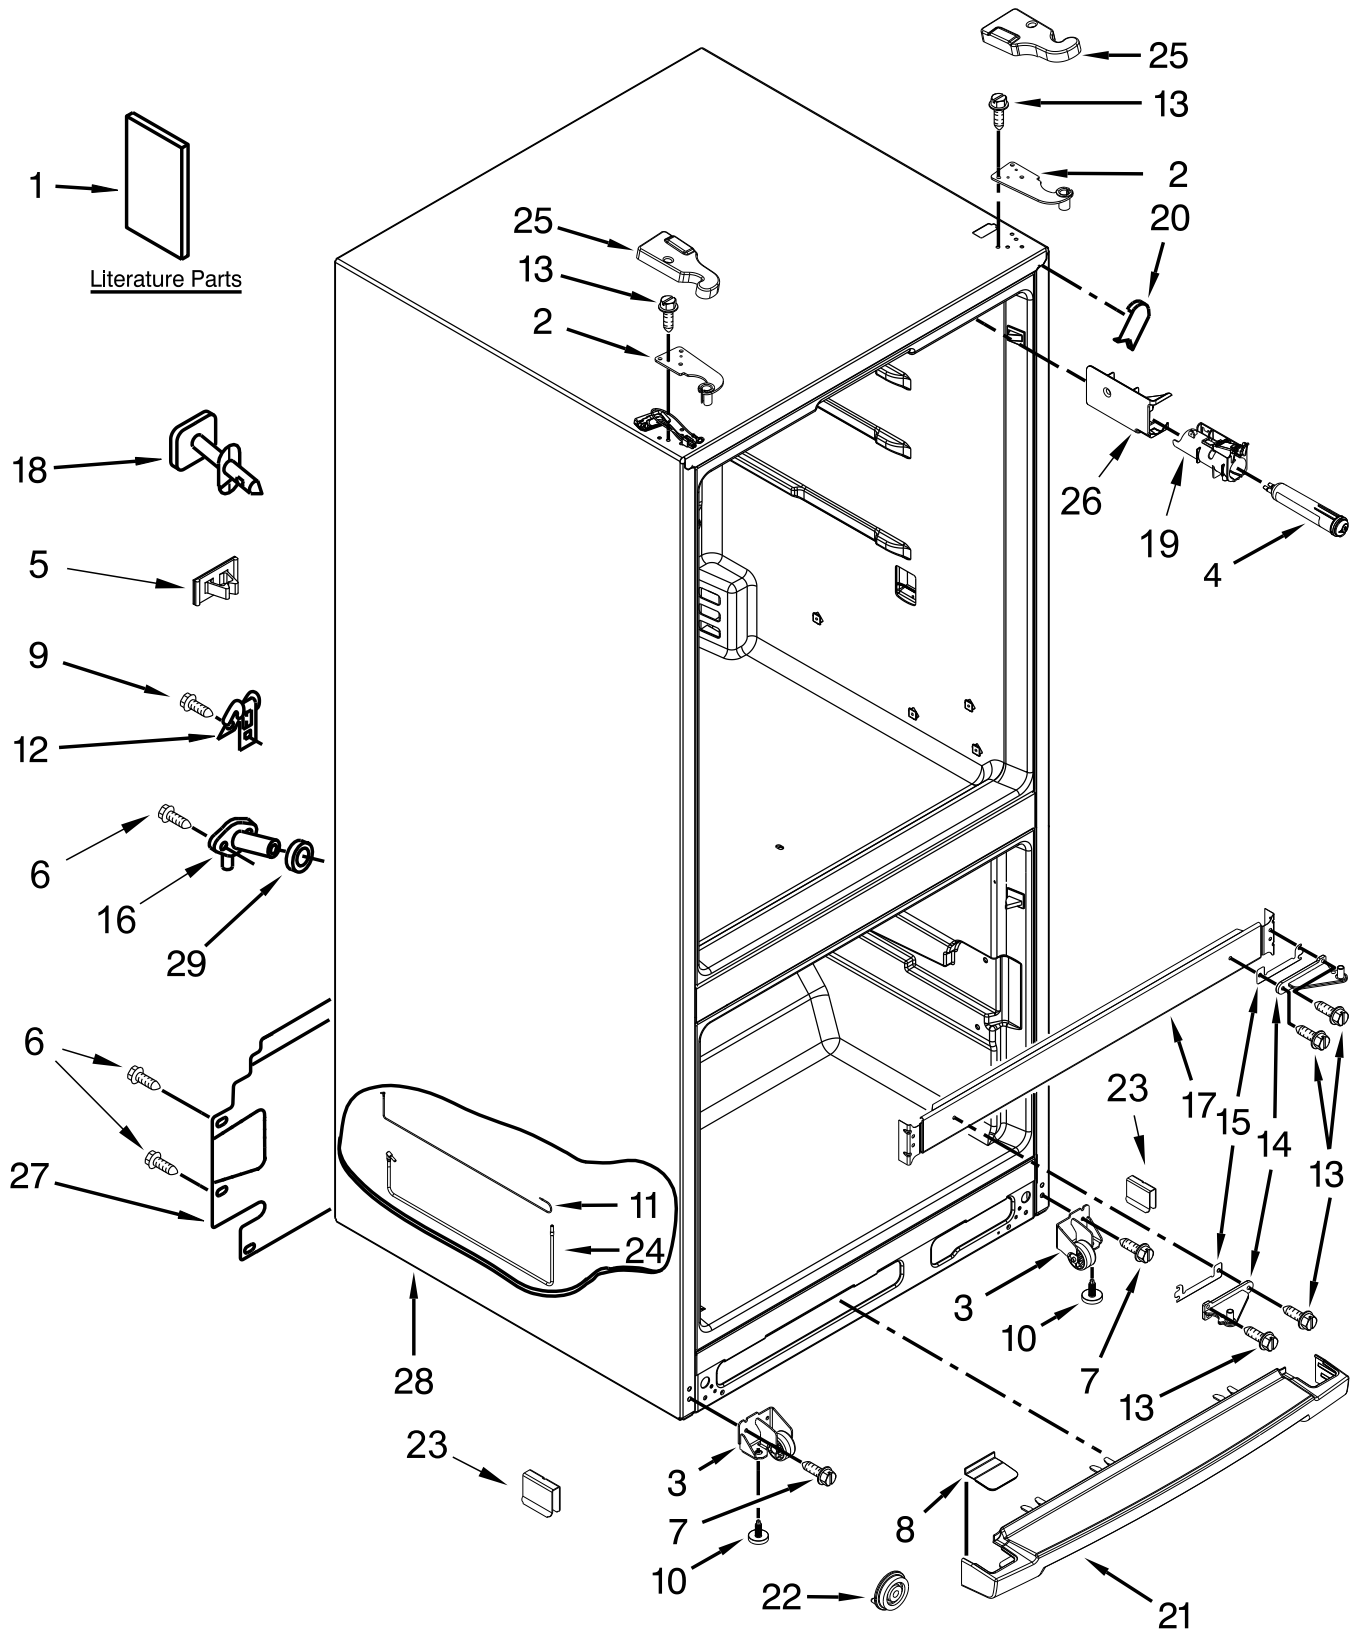

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	11	W10740689	Tube, Filter Inlet	22	W10331226	Drum, Toe Grille
	W10596096	Service & Wiring Sheet	12	549193	Clamp, Power Cord	23	2174706	Clip, Roller
	W10762977	Energy Label	13	489497	Screw	24	W10449617	Tube, Filter Outlet
	W10790750	Use & Care Guide	14		Hinge, Center	25		Cover, Hinge
	2225623	Icemaker Service Sheet		W10521411	Left Hand		W10465765	Left Hand (White)
2		Hinge, Top		W10521409	Right Hand		W10465764	Right Hand (White)
	W10546298	Left Hand	15	W10450363	Shim, Center Hinge		W10465771	Left Hand (Black)
	W10546299	Right Hand	16	W10601149	Fitting, Water Tube		W10465770	Right Hand (Black)
3		Roller, Front	17		Rail, Center (Not Serviced)		W10465768	Left Hand (Grey)
	W10359256	Left Hand	18		Fitting, Water Tube (Not Serviced)		W10465767	Right Hand (Grey)
	W10359255	Right Hand	19	W10346257	Housing, Water Filter	26	W10306392	Cover, Water Filter
4	W10569758	Filter, Water	20		Corner Filler	27	W10636716	Cover, Unit
5	W10352217	Clamp, Tube		W10283959	White	28		Cabinet (Not a Serviceable Part)
6	2262176	Screw		W10283960	Black	29	1106508	Gasket, Seal
7	489497	Screw		W10283961	Grey			
8		Cover, Toe Grille	21		Grille			
	W10339257	White		W10300127	White			
	W10353930	Black		W10353933	Black			
	W10353932	Grey		W10353935	Grey			
9	489442	Screw						
10	W10141622	Brake, Roller						


LINER PARTS

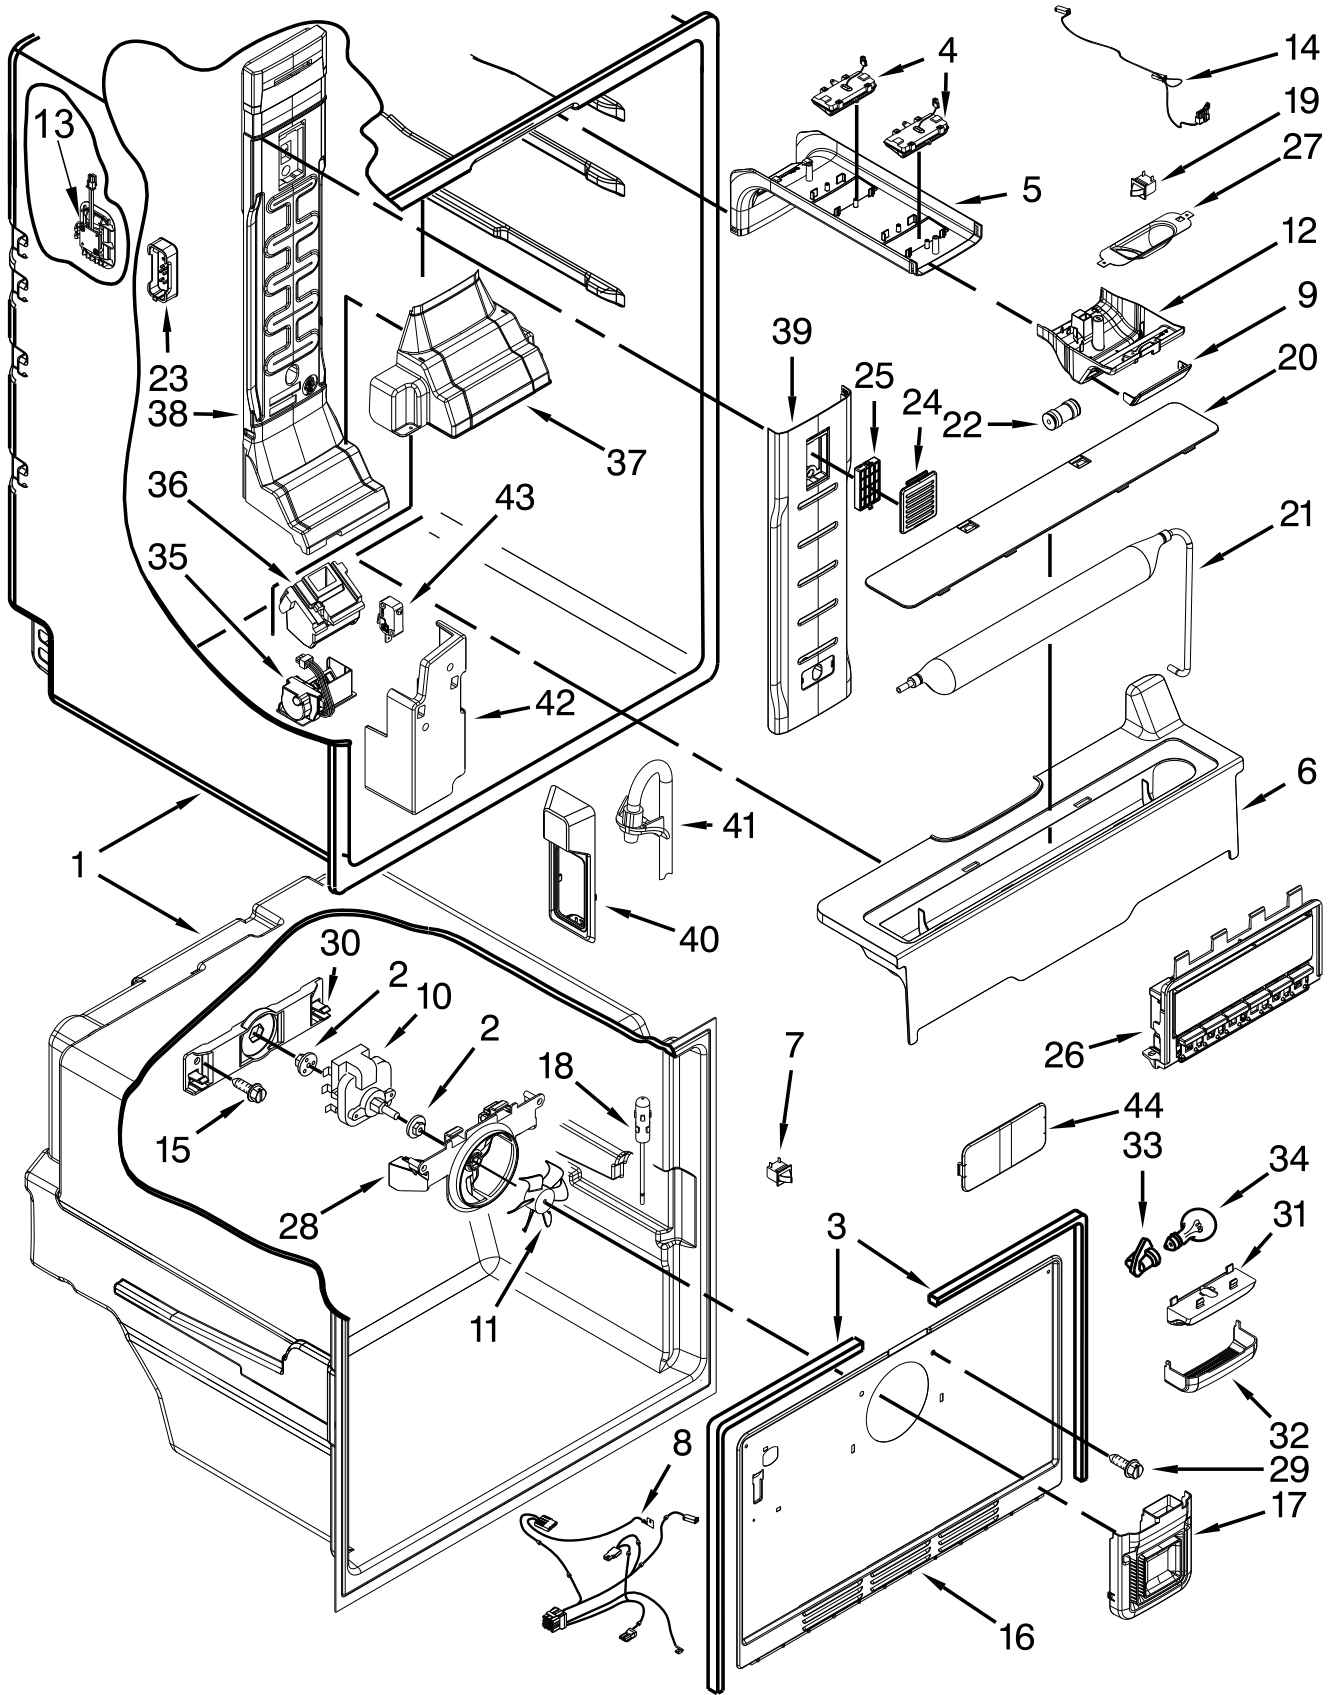

LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	18	W10383615	Thermistor, Freezer Evaporator	35	W10257451	Damper, Electronic Control
2	2197380	Grommet	19	1118894	Switch, Rocker Arm	36	W10474774	Cover, Damper Housing
3	W10468762	Gasket, Evaporator Cover	20	W10413160	Cover, Water Reservoir	37	W10314204	Housing, Damper
4	W10360497	Assembly, LED Light	21	W10426134	Reservoir, Water	38	W10448448	Assembly, Multiflow
5	W10469878	Housing, Light	22	W10271543	Connector, Water Tube	39	W10356895	Tower, Multiflow Air
6	W10326338	Container, Water Reservoir	23	W10425252	Cover, Thermistor	40	W10204292	Facade, Dispenser
7	12466105	Switch, Light	24	W10330850	Grille, Air Filter Bottom	41	W10463316	Waterline, Dispenser
8	W10487766	Assembly, Freezer Wire	25	W10315189	Filter, Air	42	W10339200	Cover, Switch
9	W10360550	Cover, Control Housing	26	W10772850	UI Assembly, Control	43	12575501	Switch, Limit
10	W10464673	Motor, Fan	27	W10314195	Shield, Heat	44	W10336009	Cup, Screw
11	2200509	Blade, Fan	28	W10321162	Bracket, Fan Motor			
12	W10772551	Housing, Control	29	489478	Screw			
13	W10279030	Assembly, LED Light	30	2254454	Bracket, Evaporator Fan Rear			
14	W10421350	Assembly, Refrigerator Lighting Wire	31	W10313917	Housing, Freezer Lighting			
15	488208	Screw	32	W10313918	Lens, Light			
16	W10300900	Cover, Evaporator	33	W10440814	Socket, Light			
17	W10317182	Tower, Freezer	34	W10473925	Bulb, Light			


REFRIGERATOR DOOR PARTS

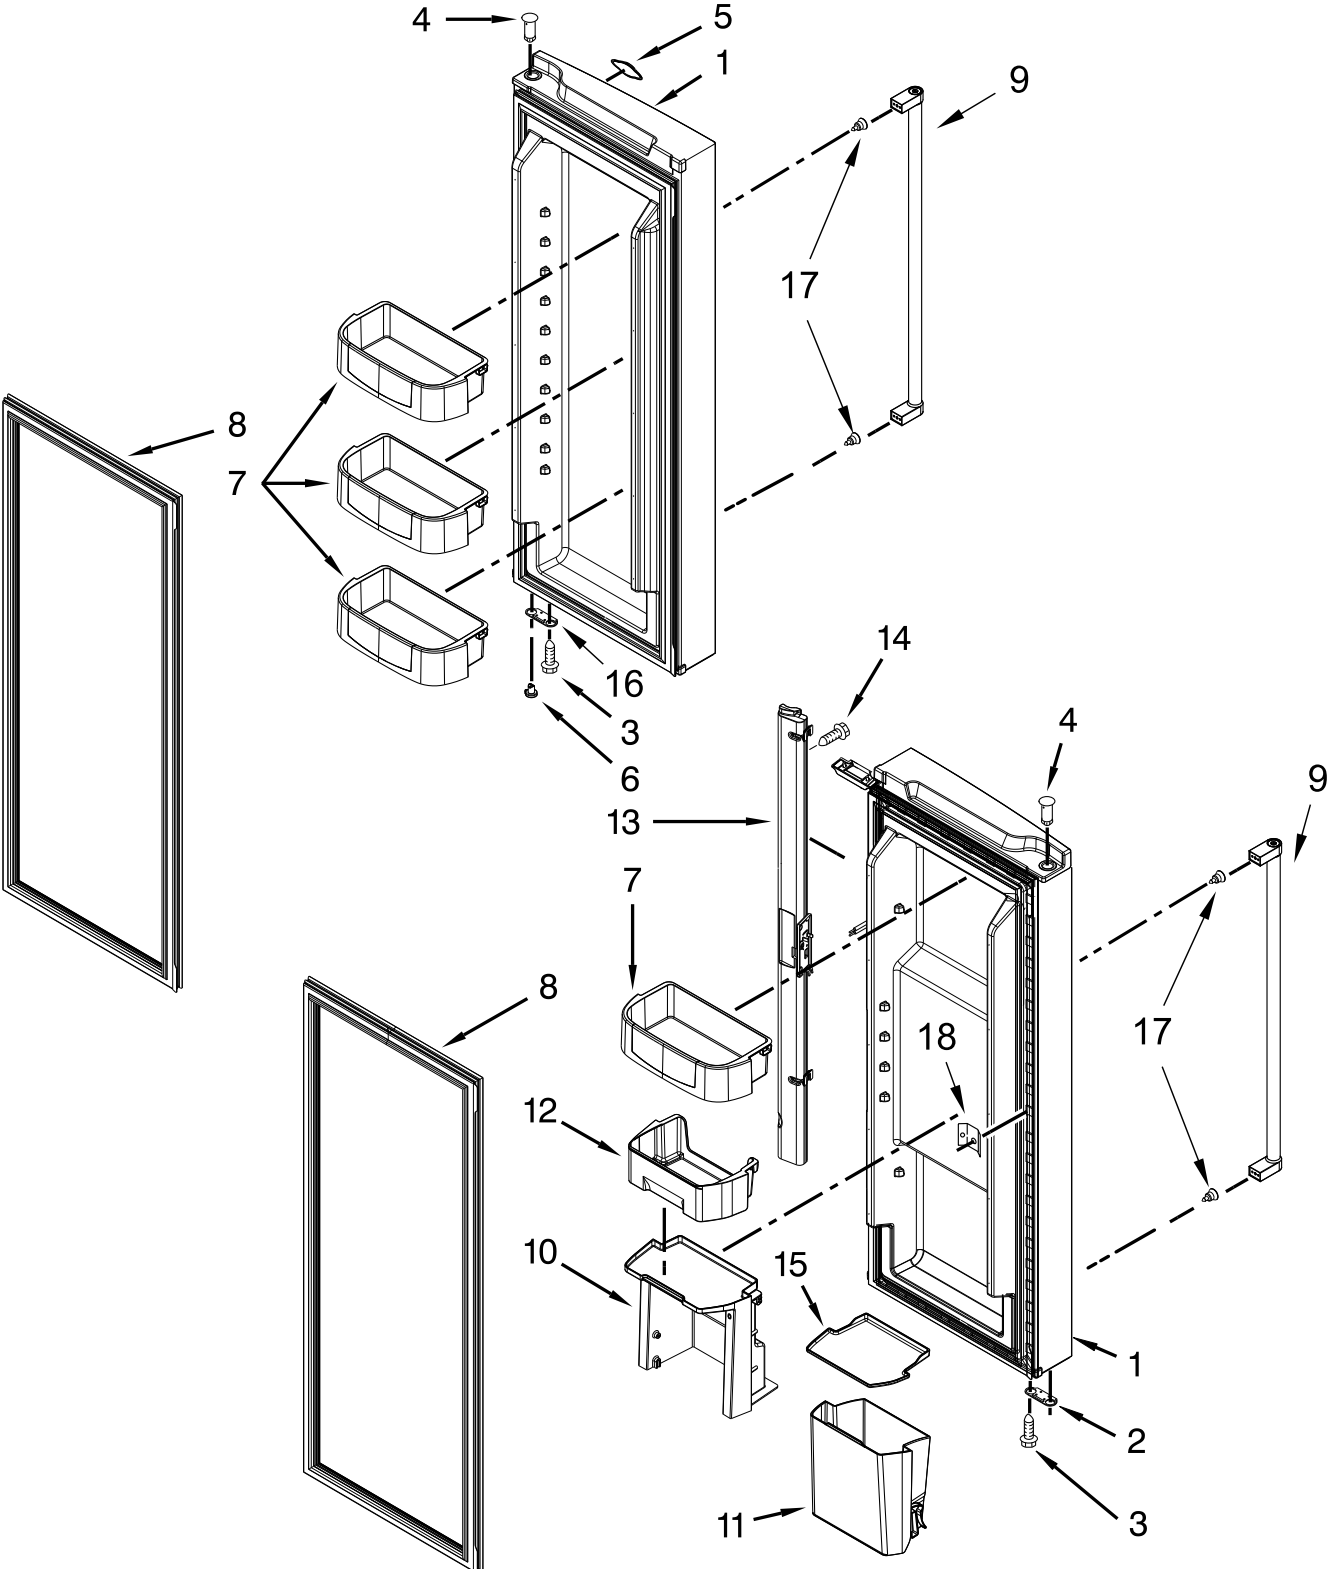

REFRIGERATOR DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Refrigerator Door (Includes #8)	5		Nameplate	13		Flipper Mullion Assembly
	W10721544	Left Hand (White)		W10765861	Grey		W10624451	White
	W10721540	Right Hand (White)	6	W10470155	Closure, Door		W10624448	Black
	W10721546	Left Hand (Black)	7	W10308869	Bin, Medium		W10624450	Grey
	W10721541	Right Hand (Black)	8		Gasket, Refrigerator Door	14	12990302	Screw
	W10721548	Left Hand (Stainless)		W10353189	Beige	15	W10317192	Bin, Door Mat
	W10721542	Right Hand (Stainless)		W10413465	Black	16	W10397055	Bracket, Door Stop
2	2189202	Bracket, Door Stop		W10413468	Grey	17	W10460893	Screw
3	489276	Screw	9		Handle Assembly	18	939101	Screw Anchor
4		Thimble, Top		W10704121	Stainless			
	W10366270	White	10	W10317224	Compartment, Utility			
	W10334042	Black	11	W10411219	Bin, Fresh & Ready			
			12	W10326335	Bin, Shallow			


FREEZER DOOR PARTS

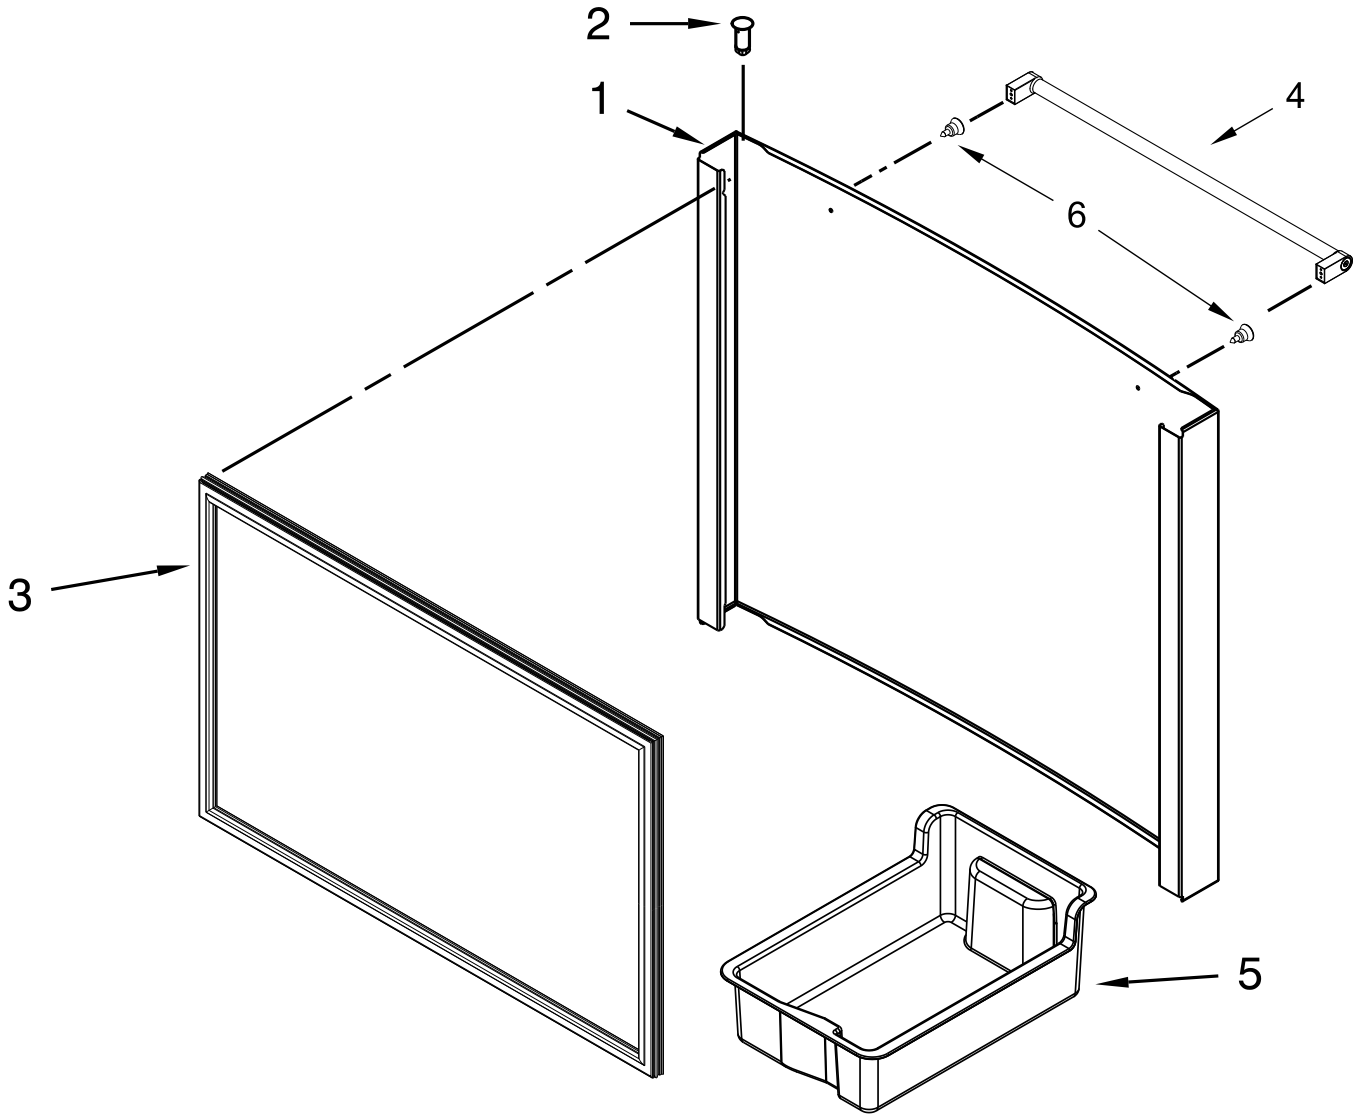

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Freezer Door (Includes Illus. 2 & 3)	3		Gasket, Freezer Door	5	W10378263	Pan, Ice
	W10353182	White		W10465758	Beige	6	W10460893	Screw
	W10413530	Black		W10465761	Black			
	W10413531	Stainless		W10465762	Grey			
2		Thimble, Top	4		Handle Assembly			
	W10334042	Black		W10772610	Stainless			



UNIT PARTS

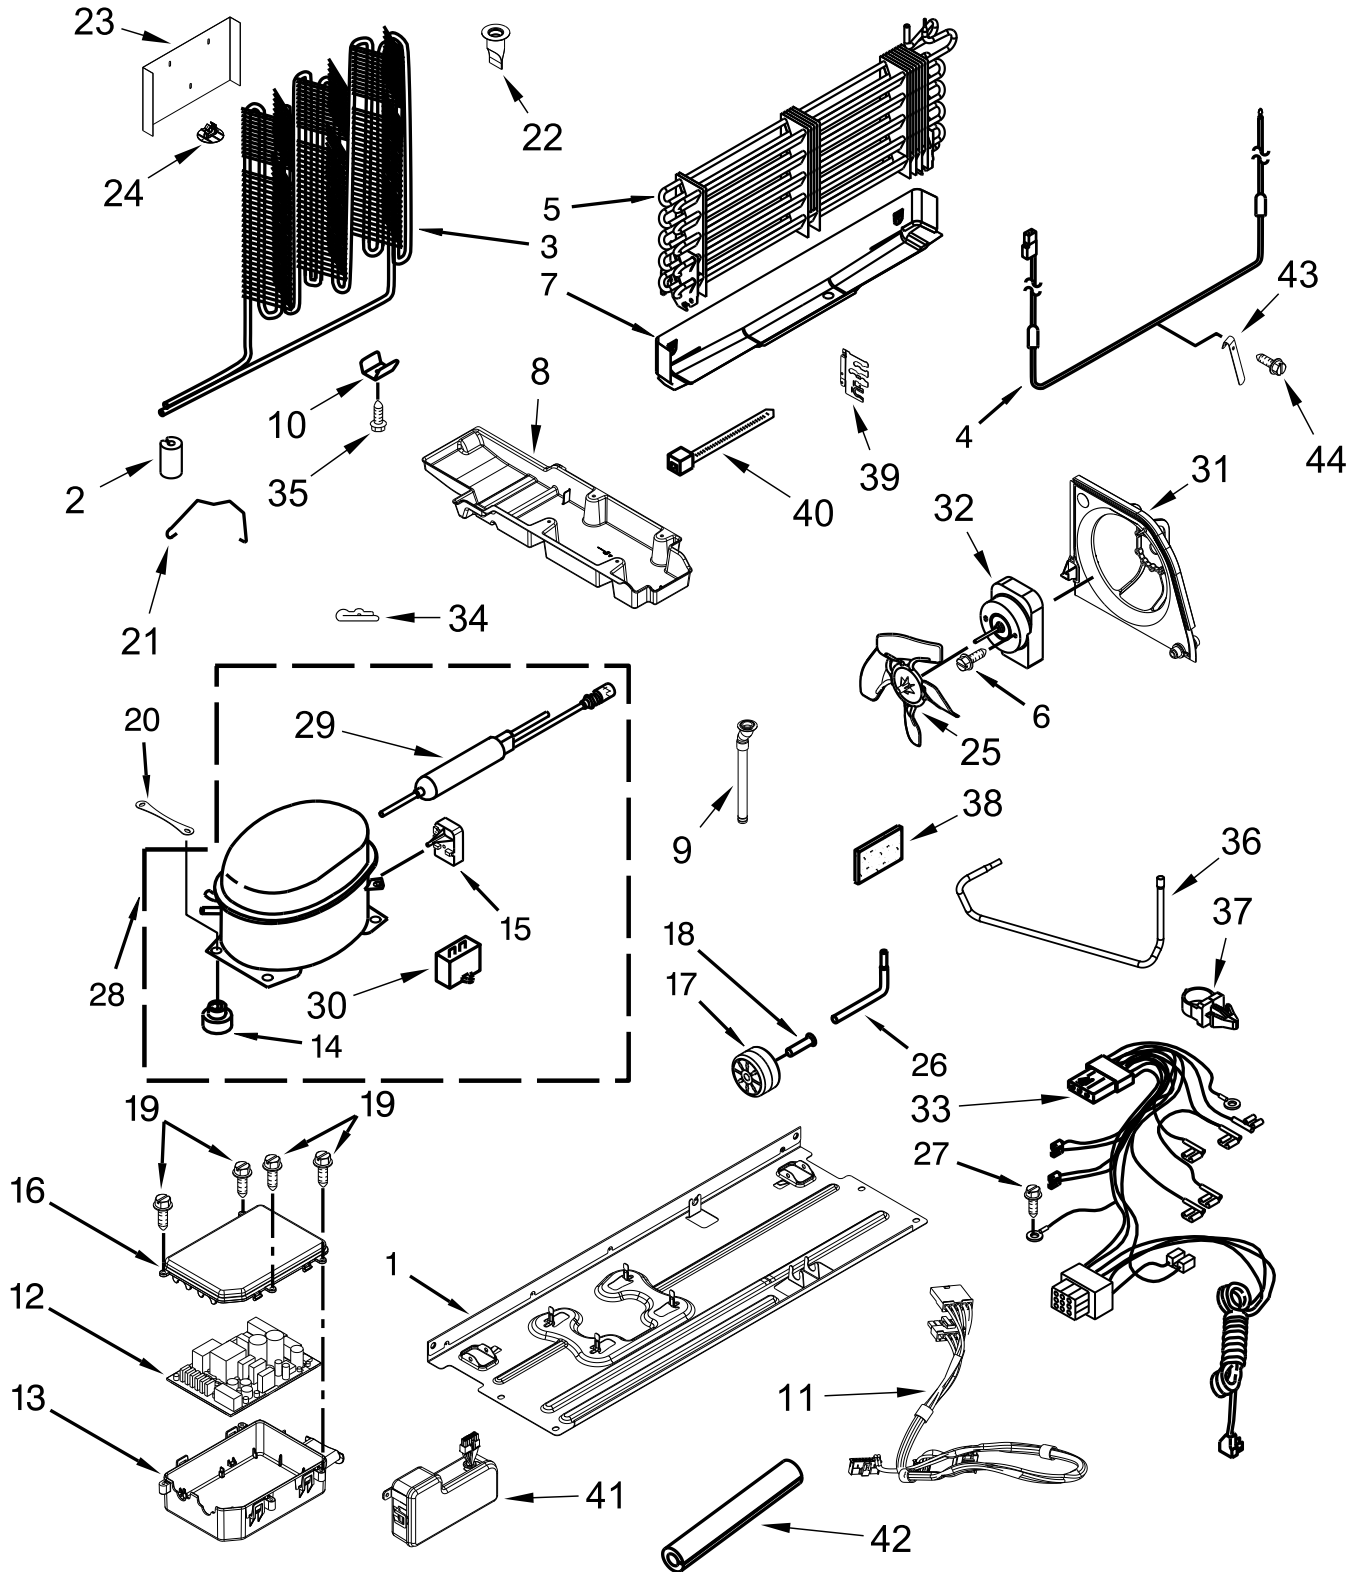

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10300116	Baseplate	20	W10236396	Strap, Compressor	40	2263990	Tie, Wire
2	2319835	Grommet, Condenser	21	W10174384	Strap, Bale	41	W10292716	LED Power Supply
3	W10342567	Condenser	22	W10519112	Valve, Drain	42	2264838	Sleeve
4	W10436849	Heater, Defrost	23	W10349514	Cover, Condenser Bottom	43	2258429	Heat Probe
5	W10321158	Assembly, Evaporator	24	W10296661	Clip, Bottom Cover	44	489478	Screw
6	8533961	Screw	25	W10139483	Blade, Fan			Following Parts Not Illustrated
7	W10314195	Shield, Heat	26	VS20001	Tube, Process		978025	Valve, Access
8	W10466213	Tray, Drain	27	488500	Screw		978026	Valve, Access
9	W10314199	Tube, Drain	28	W10445423	Compressor		978027	Valve, Access
10	W10248621	Clip, Condenser	29	W10669573	Drier		978028	Valve, Access
11	W10424230	Assembly, Low Voltage Wire	30	W10590083	Capacitor		978029	Valve, Access
12	W10547719	Control, Electronic	31	2315541	Bracket, Condenser Fan		978030	Valve, Access
13	W10370696	Enclosure, Electronic Control	32	W10530280	Motor, Condenser		876764	Valve, Access
14	10835903SP	Grommet, Compressor	33	W10390389	Wire Assembly, Unit			REFRIGERANT CHARGE 4.25 oz (R-134A)
15	W10448874	Device, Start	34	1114718	Clip, Wiring			
16	W10313215	Cover, Electronic Control	35	8281232	Screw			
17	W10475495	Roller	36	W10510988	Tube, Suction			
18	2179826	Axle, Rivet	37	2219077	Clip, Harness			
19	8533859	Screw	38	2215468	Insulation, Sound			
			39	W10314197	Bracket, Evaporator			


SHELF PARTS

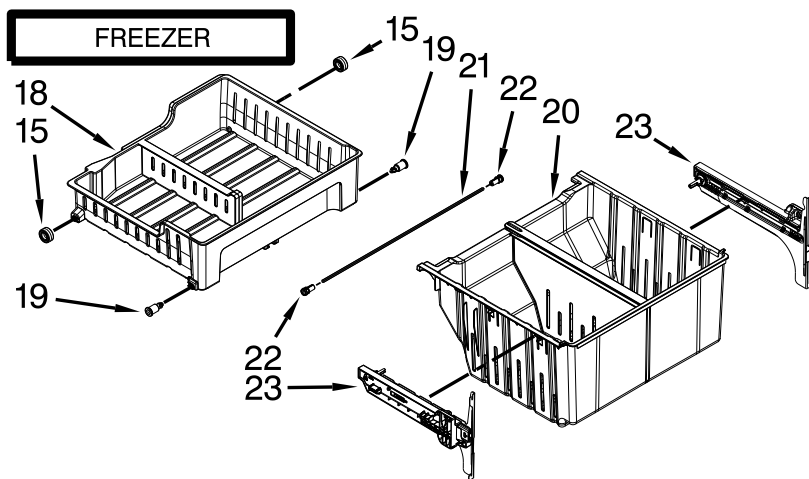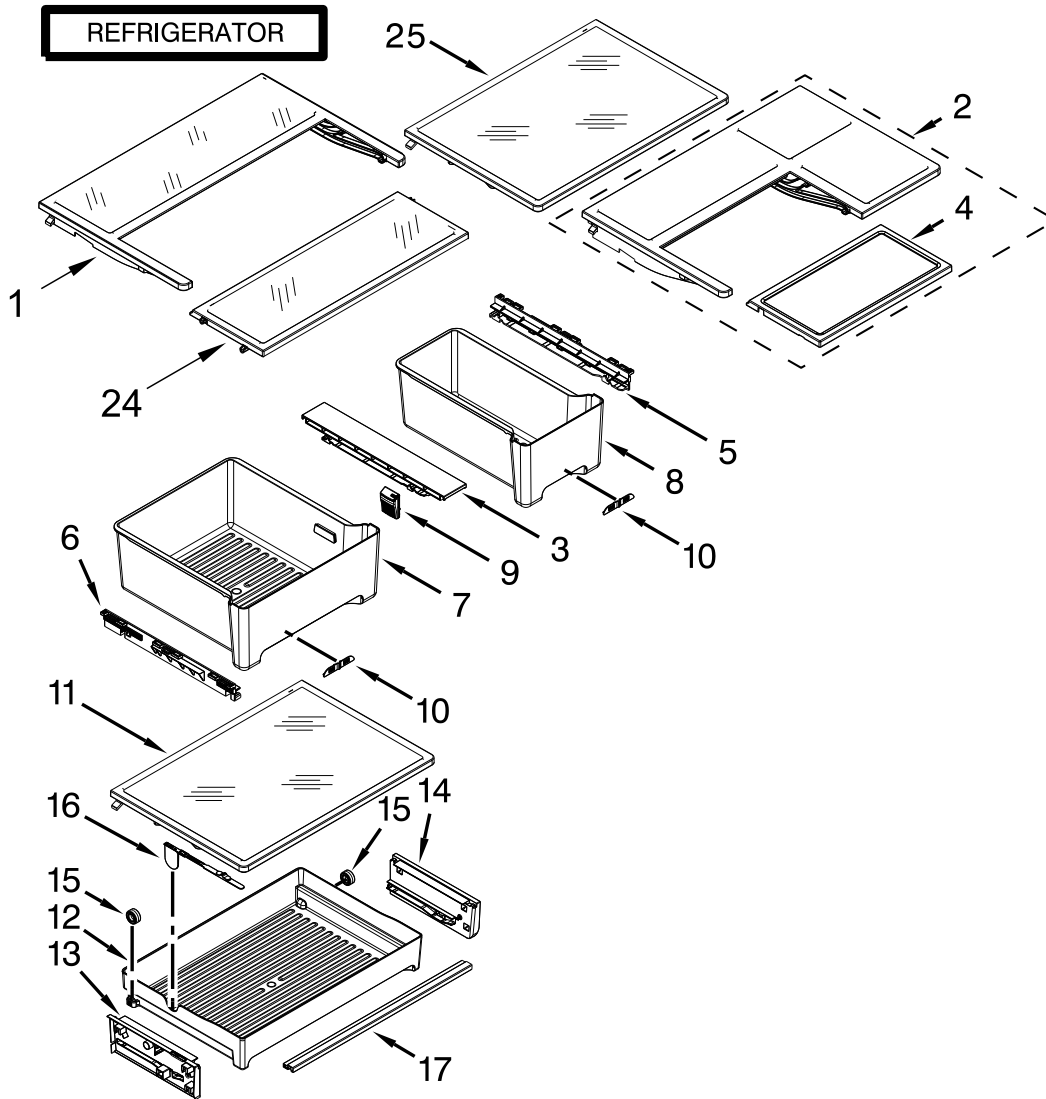

SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10476425	Flip Down Shelf Assembly	10	W10435571	Humidity Control	19	W10257246	Axle, Roller
2	W10502933	Assembly, 2/3 Flip Shelf	11	W10513681	Glass, Pantry Cover	20	W10317289	Basket, Lower Freezer
3	W10468557	Rail, Track (Center)	12	W10397907	Assembly, Pantry Deli Pan	21	W10371538	Shaft, Rack
4	W10313893	Shelf, 2/3 Flip	13	W10397908	Rail Pantry (Left Hand)	22	W10277361	Collar, Gear
5	W10468556	Rail, Track (Right Hand)	14	W10414530	Rail, Pantry (Right Hand)	23		Adaptor, Freezer
6	W10468555	Rail, Track (Left Hand)	15	W10278139	Roller		W10397636	Left Hand
7	W10370327	Pan, Crisper (16")	16	W10411411	Control, Temperature		W10397635	Right Hand
8	W10317184	Pan, Crisper (8")	17	W10507470	Assembly, Pantry Cover Support	24	W10305243	Shelf, Flip Down
9	W10593207	Assembly, Produce Preserver	18	W10555437	Bin, Upper Freezer	25	W10486290	Assembly, Full Shelf (30")

ICEMAKER PARTS

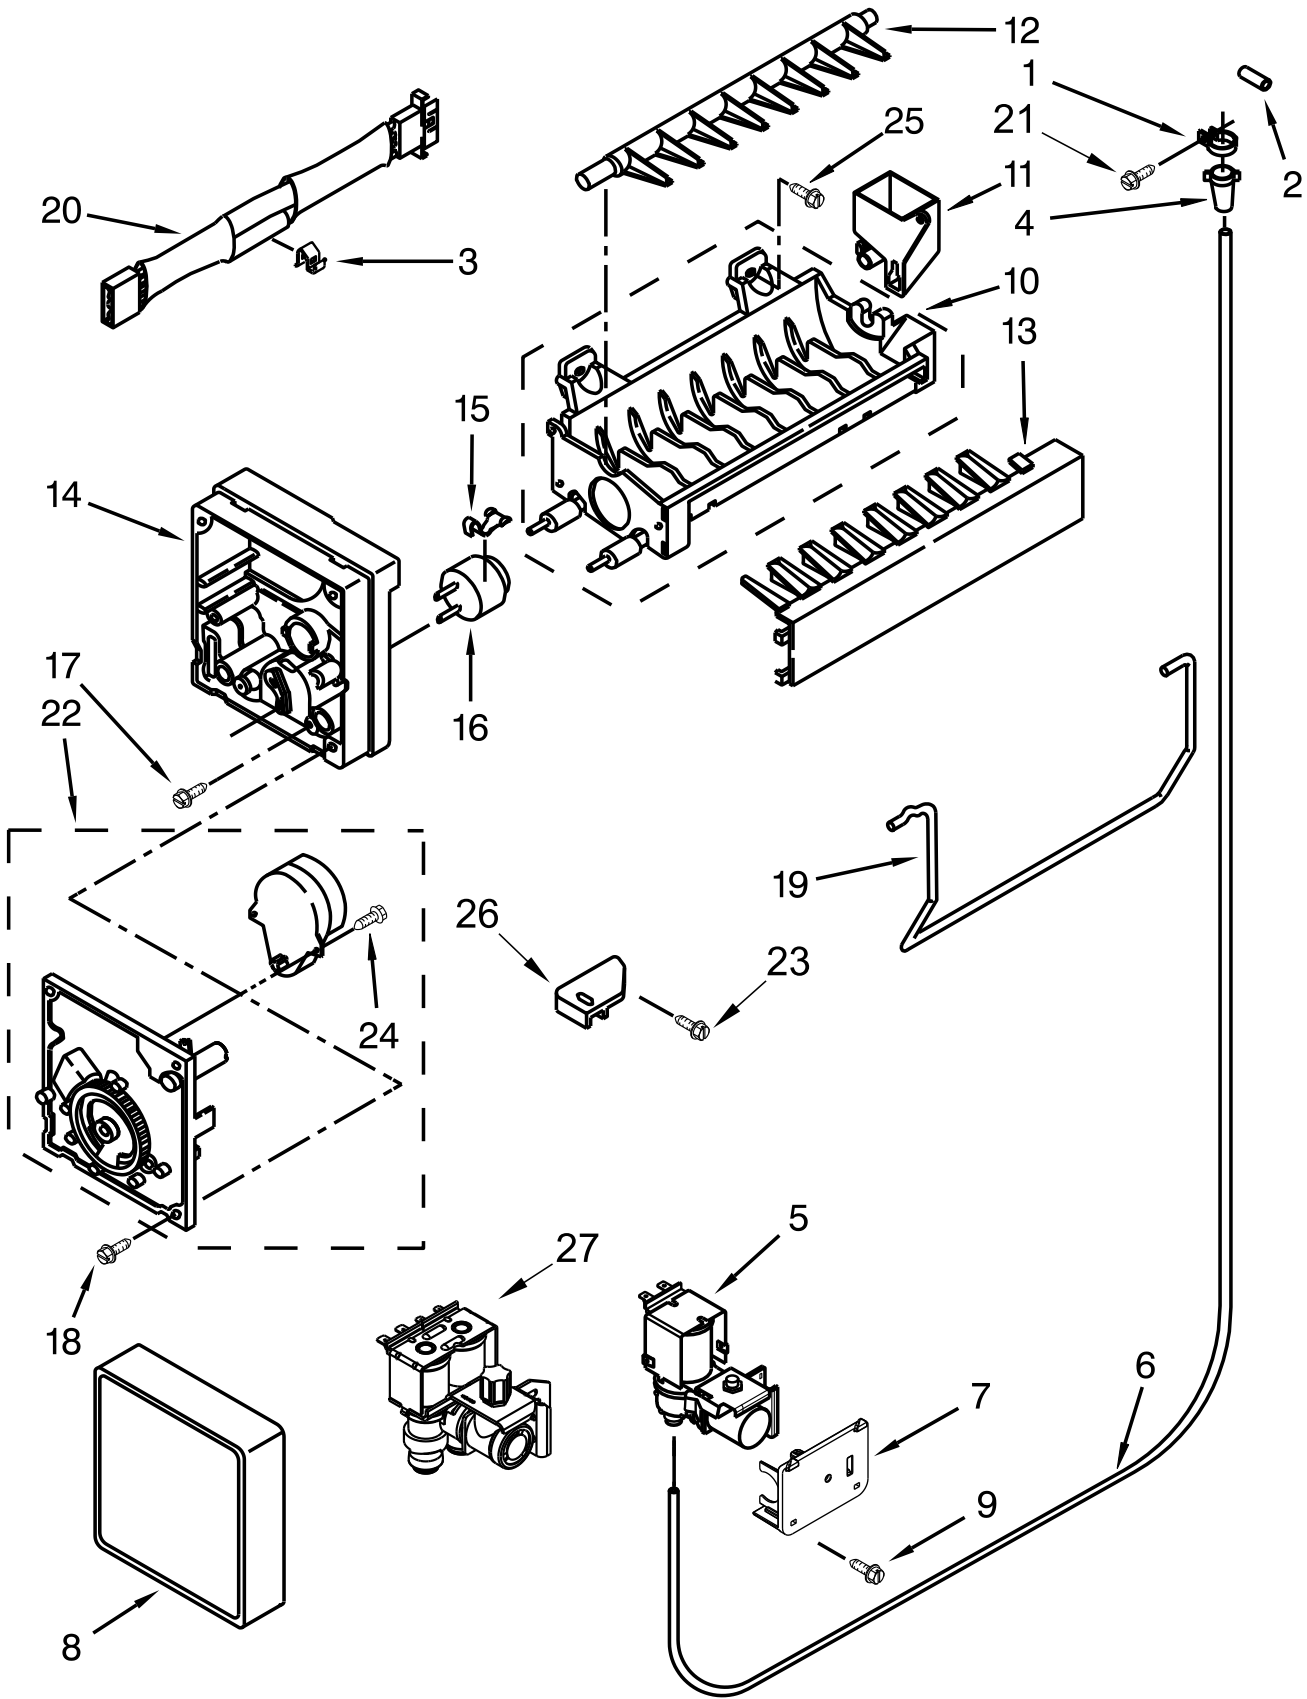

ICEMAKER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10329003	Clamp, Tube	11	W10435665	Cup, Water Fill	21	488886	Screw
2	W10496649	Tube, Water	12	627843	Ejector	22	W10223929	Assembly, Module and Motor
3	628379	Clip, Thermal Fuse	13	W10122563	Stripper, Ice	23	489478	Screw
4	2181939	Insert, Tube	14	2194712	Support, Housing	24	489136	Screw
5	W10498992	Valve, Inlet	15	2315522	Retainer, Thermostat	25	488208	Screw
6	W10664272	Tube, Water	16	628397	Thermostat (Also Order 542369 Cement Alumilastic)	26	628320	Bracket, Icemaker Mounting
7	W10237915	Bracket, Water Valve	17	W10001280	Screw	27	W10279866	Assembly, Dual Valve
8	W10289690	Cover, Icemaker	18	489276	Screw	100	W10632400	Assembly, Icemaker
9	489442	Screw	19	W10474785	Arm, Shut Off			
10	628228	Assembly, Mold and Heater (Also Order 542638)	20	W10309400	Assembly, Ice Maker Wire			

OPTIONAL PARTS

FOLLOWING PARTS NOT ILLUSTRATED

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10413645A	Filter, Water (1/4 turn)
	978941	Insulation, Fiberglass (63 1/2" x 35 1/2" x 2 5/8")
	212643	Sealer, Gum (4 Feet)
	479502	Tape, Vinyl (3/4 x 108")
	876305	Insulation Kit (14 Pieces, 3" x 24" x 48")
	876370	Insulation (2 Pieces, 3" x 24" x 48")
	876029	Kit, Foam Slab (30" x 32 1/2" x 1 1/2")
	505587	Sealer, Mastic (1 Qt)
	511873	White Porcelain (2 oz.)
	542638	Grease, Silicone (1/2 Oz.)
	542639	Cement, Alumilastic (1 1/4 Oz.)
	606755	Bag
	503695	Cork, Sealer

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350942	White Primer
	350939	Enamel, Black
	350930	White
	4392901	Biscuit/Bisque

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)
	4392900	Biscuit/Bisque

TORX SCREW WRENCH

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	1117510	Torx Key