# **INSTALLATION INSTRUCTION FOR 1421-PL**

# WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER. AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

## READ AND SAVE THESE INSTRUCTIONS

### **PREPARATION**

- Shut off power at the fuse box or circuit breaker box. If necessary. Remove old fixture and all mounting hardware from wall junction box.
- Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to loose any small parts necessary for installation.

#### **ASSEMBLING THE FIXTURE**

 Thread the pipe (G) onto nipple (F), pipe (I) onto nipple (H), pipe (K) onto nipple (J), pipe (M) onto (L), pipe (O) onto nipple (N), nipple (P) into pipe (O).

# **MOUNTING THE FIXTURE (FIG.1)**

 Thread the two mounting screws (A) part way into the mounting bar (B). Secure the mounting bar (B) to junction box (not provided) with the junction box screws (C) through slotted holes in mounting bar (B).

# **CONNECTING THE WIRES (Fig. 2)**

- 5. Connect the fixture wires to the junction box wires as shown in Fig. 2. Make sure all wire connectors are secure and do not easily pull off with a slight tug. If there is no Green Ground Wire from the junction box, connect the Fixture Ground Wire to the Circular Strap or the Mounting bar with the Green Screw provided.
- 6. Tuck these wire connections neatly into the ceiling junction box.
- Raise the canopy (D) allowing for the mounting screws

   (A) to protrude through the holes on the canopy (D), then secure with the finials (E).

#### **COMPLETING THE INSTALLATION**

- 8. Slide the glass (R) over the socket (Q) and secure with the retaining ring (S).
- Install the proper light bulbs for your fixture.
   (DO NOT EXCEED THE MAXIMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)
- 10. The ballasts in each of these models can be replaced by a qualified electrician without cutting of wires and without damage to the housing, trim, decorative elements or carpentry to which the fixture is attached. See installation steps for more detail.
- 11. The ballast and lamp are combined, to replace or install, twist pins into socket as shown on Fig.3.
- 12. The color correlated Temperature (CCT) for Replacing the enclosed lamp is (2700K).

Return the power to the junction box and test the fixture. Your installation is now complete.







