


4503-TRM, 4505-TRM, 4506-TRM Canterbury™ Trim Series

Operation & Maintenance Manual



Model Numbers		Specifications		
☐ 4503-TRM	Valve Trim with Hand Shower	Tub/shower trim with hand shower and lever handle includes wall connection, cradle for hand shower mounting, in-line vacuum breaker, flexible metal hose,		
☐ 4505-TRM	Shower Trim with Hand Shower	non-diverter tub spout (069), 3 mode hand shower (442W and 1 mode showerhead (4-163) with standard 2.5 gpm		
□ 4506-TRM	Tub/Shower with Hand Shower Trim	(9.5 L/min) flow restrictor. Shower trim with hand shower and lever handle includes all of the above less non-diverter tub spout. Valve trim with hand shower and lever handle includes all of the above less non-diverter tub spout and 1 mode showerhead. Components made from metal and plastic materials plated in standard polished chrome finish.		
Modification	s	Warranty		
□ -1.5 	1.5 gpm (5.7 L/min) flow restrictor	Limited Lifetime - to the original end purchaser in consumer installations.		
□ -2.0 	2.0 gpm (7.6 L/min) flow restrictor	5 Years - for commercial installations.		
☐ -442HSB	30" slide bar in place of wall cradle on hand shower units	Refer to www.symmons.com/warranty for complete warranty information.		
□ -STN	Satin nickel finish			
Note: Append appropriate -suffix to model number.				
Symmons Industries, Inc. ■ 31 Brooks Drive ■ Braintree, MA 02184 ■ (800)796-6667 ■ Fax: (800)961-9621				

Dimensions

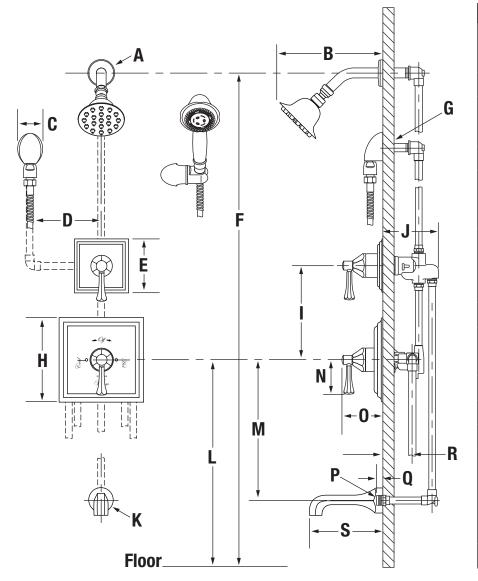


Measurements					
А	Ø 2 1/4", 57 mm				
В	8 5/8", 219 mm				
С	2 1/8", 54 mm				
D	6", 152 mm right or left				
E	5", 127 mm				
F	77", 1956 mm				
G	Male 1/2" NPT thread must be recessed 1/4" from finished wall				
Н	7 1/2", 191 mm				
I	10", 25 mm				
J	4 3/4", 121 mm				
K	Ø 2 5/8", 67 mm				
L	32", 813 mm (4506-TRM) 45", 1143 mm (4503-TRM, 4505-TRM)				
М	12", 305 mm				
N	3", 76 mm				
0	3", 76 mm				
Р	1/2" NPT				
Q	1/2", 13 mm				
R	(Rough-in) 2 3/8" ± 1/2", 60 mm ± 13 mm				
S	7 1/4", 184 mm				

Notes

- 1) All dimensions measured from nominal rough-in (see S as reference).
- 2) Dimensions are subject to change without notice.

Parts Breakdown

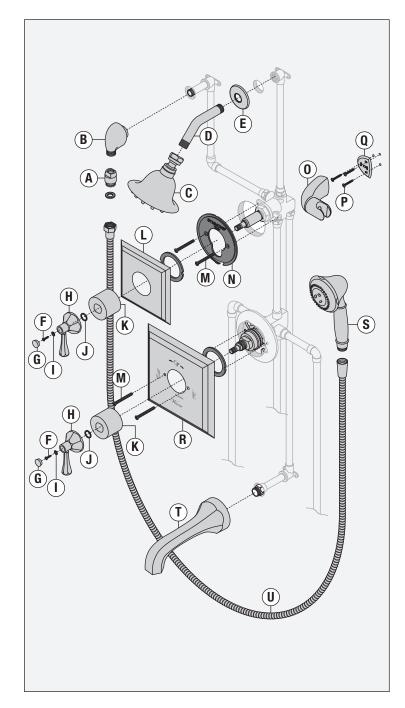

Replacement Parts					
Item	Description	Part Number			
В	Wall Elbow	EF-105			
С	Showerhead	4-163			
D E	Shower Arm Flange	300			
F G H I	Set Screw Plug Button Handle Star Washer	T-226			
J K	Lock Nut Dome Cover	T-19/20-PL			
L M N	Diverter Excutcheon Mounting Screws Mounting Plate	T-531			
O P Q	Wall Cradle Cradle Mounting Screws Cradle Mounting Plate	EF-106			
M R	Mounting Screws Shower Escutcheon	T-225			
S	Hand Shower	442W			
Т	Tub Spout	069			
A U	60" Hose with Vacuum Breaker	EF-104			

Notes:

- 1) Append -STN to part number for Satin nickel finish.
- 2) Append -1.5 or -2.0 to showerhead or hand shower for low flow.


Required for Installation				
Adjustable wrench				
Phillips head screwdriver				
Allen wrench, 3/16"				
Teflon Tape				

Installation


Note:

For valve body installation, please see valve body installation guides.


1) Install shower escutcheon (R) to shower valve. Secure with two screws (M).

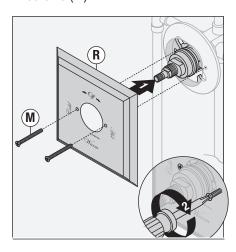

 Attach mounting plate (N) to diverter valve (4505 and 4506 only). Secure with two screws (M).

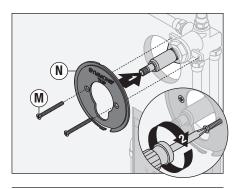


3) Attach diverter escutcheon (L) to plastic mounting plate (N).

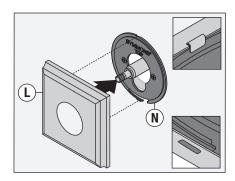


Note: Tabs should snap into place.

4) Install dome covers (K) to valves and secure with lock nuts (J).

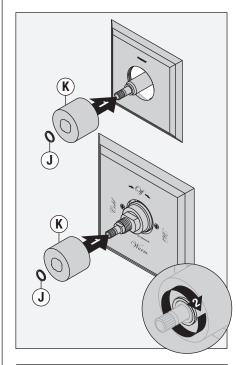


5) Install handles (H) to valves and secure with screws (F) and star washers (I). Attach plug button (G) to handle.

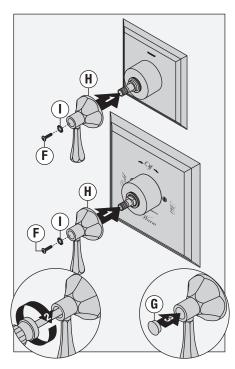


Note: Handles should be facing the 6 o'clock position.


6) Install tub spout (T) to pipe fitting. Turn clockwise to secure.

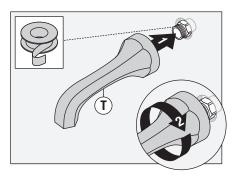

7) Install wall elbow (B) to stub out pipe. Tighten Allen screw (3 mm) to secure.

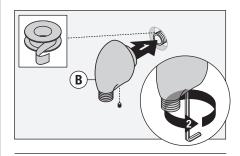


8) Place cradle mounting plate (Q) in position, mark and drill 1/8" pilot holes into stud.

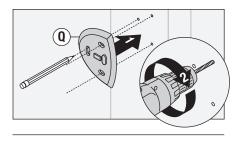


Installation


Option: Place cradle mounting plate (Q) in position, mark and drill 3/16" holes into wall. Install anchors.

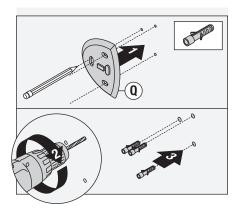


9) Remove cover of hand shower cradle (O). Install cradle and mounting plate (Q). Secure with three screws (P). Replace cover on hand shower cradle.

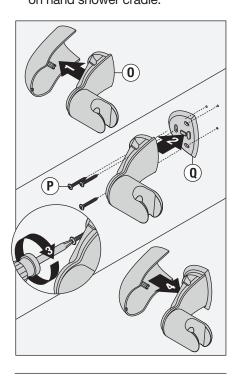


10) Attach shower arm (D) and flange (E) to vertical shower pipe turning clockwise to tighten.

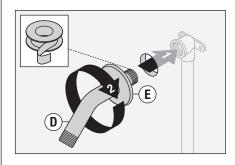

11) Install showerhead (C) to shower arm (D) turning clockwise to tighten.

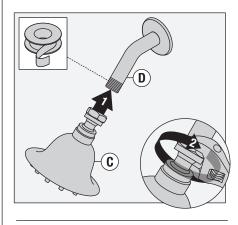

12) Attach large end of hand shower hose (U) to hand shower (S). Attach small end of hand shower hose (U) and gasket to in-line vacuum breaker (A). Connect in-line vacuum breaker to wall elbow (B). Turn clockwise to tighten.

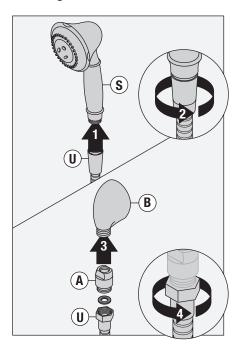


Operation

Temperature Control

1) Turn shower handle counterclockwise approximately 1/4 turn to put valve in cold position.



2) Turn shower handle counterclockwise approximately 1/2 turn to put valve in warm position.

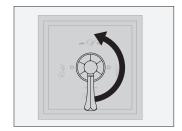


3) Turn shower handle counterclockwise approximately 3/4 turn to put valve in hot position.




Diverter Control

1) Diverter handle facing straight down is for diverter function 1.

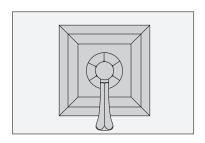


 4503-TRM & 4505-TRM: Turn diverter handle counterclockwise one full revolution for diverter function 2.

4506-TRM: Turn diverter handle counterclockwise 1/4 turn for diverter function 2.

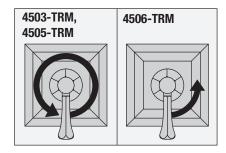

3) **4706-TRM:** Turn diverter handle counterclockwise 3/4 turn for diverter function 3.

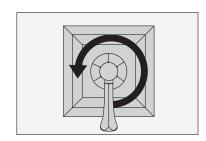

Care and Cleaning

1) Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.

Troubleshooting Chart

Problem	Cause	Solution
Finish is spotting.	Elements in water supply may cause water staining on finish.	Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.