Е	PROBLEM	POSSIBLE CA	USE	CORRECTIVE ACTION											
GUIDE		a. Water supply valv	e closed.	a. Open valve and allow water to fill tank.								TOP	ARM		
اجا	Does not	b. Supply line blocke	d.	b. Shut off water supply, disconnect supply line and inspect all gaskets and washers.								1 '°' _	/ NIPPLE	REFILL TUBE	
اق	flush			Reassemble. Also, see Fluidmaster maintenance.						. I \₹		X	V≺nn	/	/ <u> </u>
ত			too loose or disconnected.	c. Readjust chain length as required.							\ )	<b>-</b>	<del></del>	1 /	
I € I.		<ul> <li>d. Sand or debris loc</li> </ul>		d. Shut off water supply. Remove cap and clean.							$\sim$		₩ 🖶		\ 8-7
161				Check that refill tube is connected to water control and inserted into tank overflow without						-			T I	ANK	\8/
۱ŏ۱			11	being kinked or damaged.  b. Open supply valve fully. Be sure that proper supply tube size is used.								CAL LEVEL /		EVER	
ᅜ		b. Supply valve parti		D. Open supply valve fully. Be sure that proper supply tube size is used.     Remove obstruction. Consult a plumber if necessary.						1 11		IK ("C.L.")			<u> </u>
lül	ilusii	d. Supply pressure to	rapway and/or drain pipe and/or vent.	d. Normal supply pressure must be at least 20 psi.						111	1"	ABOVE	╙┷┪║╵	's' /)	
ᆔ		a. Poor supply line connection.		a. Review Step 9 of installation procedure.						1 II	OVER	FLOW PIPE	FLOAT   III	& CLIP	
OUBLESHOOTING	Toilet leaks	b. Poor bowl to tank/floor connection.		b. Review Step 4 through 7 of installation procedure.						1 11	١		CUP	ŏ.	
<u>0</u>	Toilet does	a Eluch valvo chain too tight, holding fluch valvo open		a. Readjust chain length as needed. Review Step 10.						1 \'	1			ğ	
Ĕ	not chut off	b. Flush valve seat a	nd/or flapper worn or deformed.	b. Shut off water supply. Replace flush valve. for detailed						1 \	1		'ਛੋ'	<del>-                                    </del>	
Ι' Ι	not snut on	<ul> <li>c. Sand or debris lod</li> </ul>	ged in water control.	c. Shut off water supply. Remove cap and clean per Step 13. corrective actions.							1	_		→ /	
П	Danaisaa		TANK NUMBER							١١	FILL	paracocacaca	8 FLUSH /		
	Repair parts are determined by toilet tank number which can be fou				4   8	3   8	4	8	▲ WARNING: Use of in	١ ١	١١	VALVE		8 VALVE	
l L	NOTE: "XXX" represents color or trim finish options. Specify when			n ordering.	00   10	3   8	[응]	8	WARNING: Use of in tank cleaning products		11	VALVE		8 I	
П	PART	NO	DESCRIPTION		4003.016	4003.800	4006.016	4006.800	voids warranty as they	l	11	BODY 1		§	
나	735129-400.XXX TANK COVER						4	4	may damage parts and	l	11	L	WATER LEVEL ADJUSTMENT	×	l l
I≝ŀ	738565-431.0070A FLUIDMASTER 400A VALV			_		777	$\vdash$	$\vdash$	cause leakage that may	l	11	1	ROD	MAN	-O-1)
ι <sub>σ</sub> Ι-			FLUIDMASTER 400A VALV		V .	Ť	$\vdash$		lead to property damage.	l	11	ADJUSTABLE HEIGHT	$\square$		<u>ٿ</u> ا
I ⊭l-		0-1030A FLUIDMASTER REFILL TU				_		_		l	11		FLAPPE		<u></u> _
ᆘ					V 1					l	11	اعر	SHANK		Щ
	7381009			VV		~	~	FOR FURTHER ASSISTANCE	l	11		SHANK WASHER			
≝	7381007		VE	V	1			DI FACE CALL.	l						
ا≾ا	7381007		VE				~	VALL	I						
曲	730512-0070A TANK COUPLING KIT #232 7381008-4000A FLUIDMASTER FLAPPER ASS					7 7		4	In the USA (800) 442-1902	l			THREADED	. `———	
۳.					7 7		7	~	www.americanstandard-us.com	l		LOCK NUT	SHANK	' <u> </u>	
ı	7381004		TRIP LEVER ASSEMBLY L		V V		1			l	CONI	E WASHER —			
I		300.0070A	TRIP LEVER ASSEMBLY RH BOLT CAP KIT #128			1		<u>~</u>	In Canada (800) 387-0369	I	CON		PARTS FOR V		
I	034783-2			V V	1 1	14		www.americanstandard.ca	l	COLIE	PLING NUT —	CONNECTION	ı		
I I	735132-4		TANK COVER	_		$\perp$	1	~		l		D TIGHT ONLY)			
I I		430.0070A	FLUIDMASTER 400A VALV				~	~		I	,		П	7004	450 400 D D
	738570-	1000A	FLUIDMASTER REFILL TU	BE			<u></u>	~					<u> </u>	/301	153-100 Rev. D