Mounting Instructions

Item No.: 421.68.441



Flat TV Lift

Parts included with your Flat Lift

Lift unit (#1)


Power supply (#2)

R.F. Module (#3)

Rocker switch (#4)

Remote Control (#5)

Load: Min. 5 kg / Max. 50 kg Reverse function setting; Lift configured for standard vertical mounting – see possibilities in Remote system instruction.

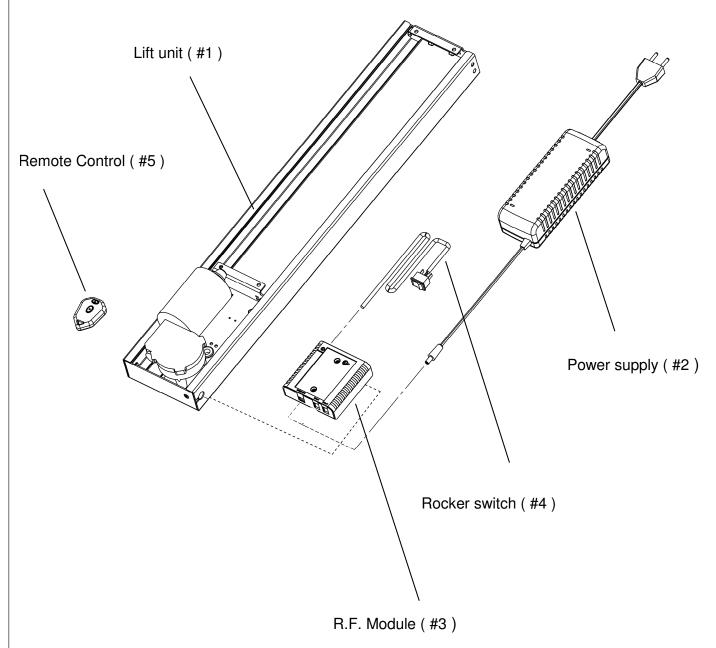

Important safety Instructions

CAUTION: Before you begin any of the Installation procedures on page 4, read and follow the warnings and safety instructions on this page.


WARNING! THIS IS NOT A TOY!

WARNING! CHILDREN SHOULD NOT OPERATE LIFT OR REMOTE CONTROL!

Use the following safety guidelines to help protect your lift from potential damage and to ensure your own personal safety.

- Read all the installation instructions before testing or installing your lift.
- Read and follow all safety instructions.
- Keep remote control out of reach of children.
- To prevent bodily injury keep hands and clothing away from the lift while the lift is in operation.
- Before installing the lift or working with its connections, unplug the lift from the electrical shock.
- Do not install the lift, power supply or R.F. module in places subject to extreme temperatures for example near a radiator, or heating vent.
- To avoid damaging the power supply, R.F. module and power cord, do not put anything on it or place it where it could become damaged.
- Unplug the lift in the following conditions:
 - When the power cord or plug is damaged or frayed.
 - If liquid has spilled into the lift, power supply or RF module.
 - If the lift, power supply or RF module has been exposed to rain or wa-

Main measures

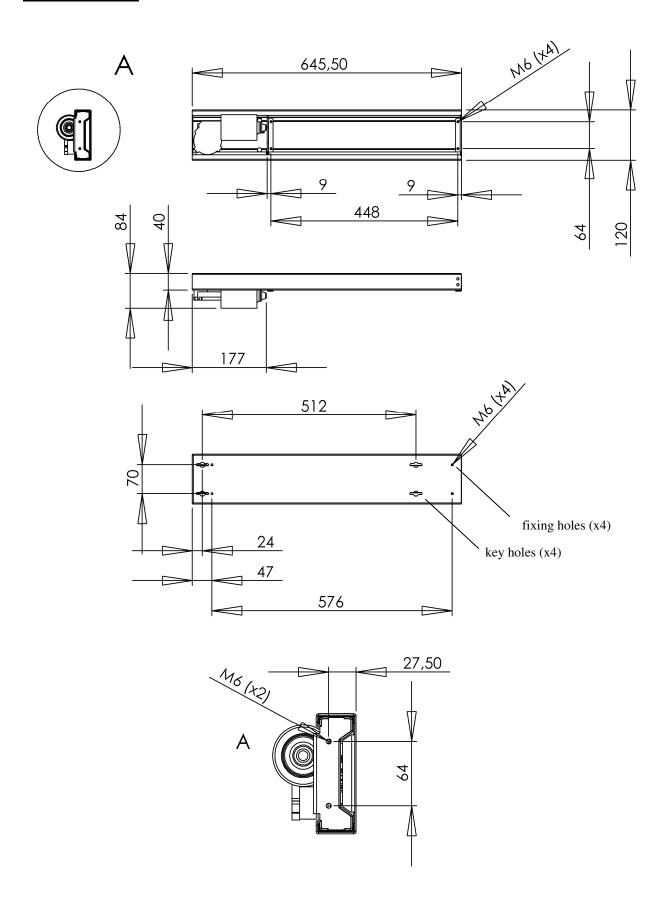


Mounting guideline

- 1) Remove all contents from packaging and compare with parts list.
- 2) Place the lift unit (#1) on e.g. the back panel of cabinet in a location that will allow full up and down movement of the lift.
- 3) Fasten the unit securely to the cabinet. Screws must be appropriate for the material being used.
- 4) Connect the plugs from lift unit (#1) and power supply (#2) to R.F. Module (#3). Please also refer to the user instruction packed along with the remote unit.
- 5) Mount rocker switch (#4) on wanted location by cutting a hole and pressing the switch into place. Secure excess wire to keep away from moving parts.
- 6) Plug the power cord into wall outlet and test the lift. If the unit doesn't work, check all connections and retry. If still not working, refer to trouble shooting guide.

User instruction, RF remote system

Installation

- connect the power supply and the motor unit to the remote receiver. 2 different plug sizes make this connection only possible to make in the right way
- after having connected the plugs, the blue light will be lightning
- push the emitter buttons and the motor unit will move up and down
- for stopping the motion one of the buttons need to be pushed

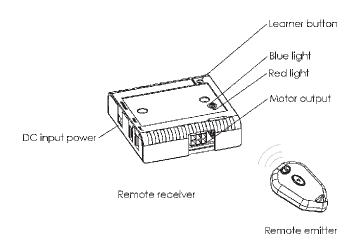

Learning

o if the remote receiver do not respond when pushing the emitter buttons, reset the receiver. After that, code the emitter and receiver together again

Coding

- o push the learner button on the receiver for less than 1 sec.
- o push one of the emitter buttons
- o the red light will start flashing
- o push one of the emitter buttons again and the red light will turn off
- o the units now are coded together with a unique code

