

**INSTRUCTIONS: LEDme 2" DOWNLIGHT WITH REMOTE DRIVER**  
**MODEL: HR-LED231R/232R/271R/272R**




**Caution:**

To reduce the risk of fire, electrical shock and injuries to persons:


- Turn off power at main switch prior to installation.
- Use only with Class 2 Power supplies unit.
- Contact Manufacturer for LED replacement.
- Contact customer service, better to use the recommended Class 2 power supplies unit.

**Mounting and wiring:**

1. Cut a 2 1/4" diameter hole on the ceiling.
2. Feed the fixture wires through the hole, and connect to wires from the Power Supply with connector.
3. Compress the springs on either side of the fixture and insert into the ceiling until the trim ring is flush to the ceiling.

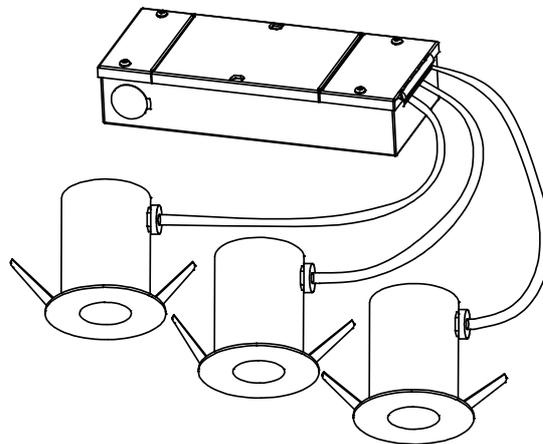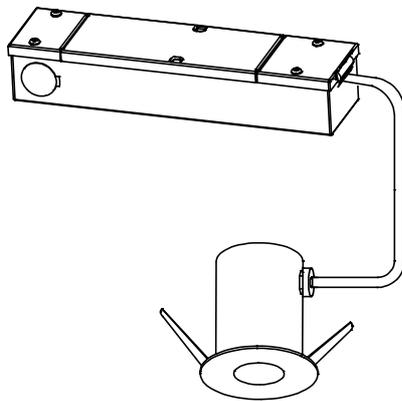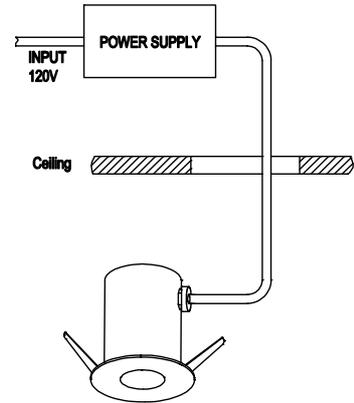

INPUT 120VAC 60Hz

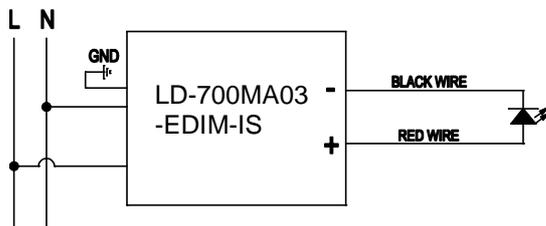

INPUT 120VAC 60Hz

