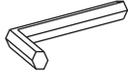# Coronado Post (Model 5515)
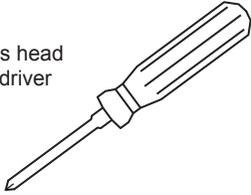# Installation and Assembly Instructions

Thank you for purchasing this premium mailbox post. We know you'll be satisfied with the years of service it will provide. If you have any questions about how to mount or use this post, or if you need any replacement parts, please call us directly at (800) 464-7491 or contact us at www.architecturalmailboxes.com.
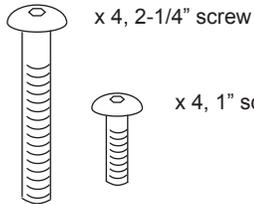
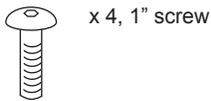## Tools

Allen wrenches (included)
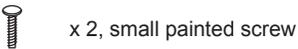
Phillips head screwdriver
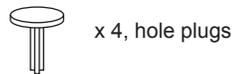
Hardware

x 4, 2-1/4" screw

x 4, 1" screw

x 2, small painted screw

x 4, 1/4" lock washer
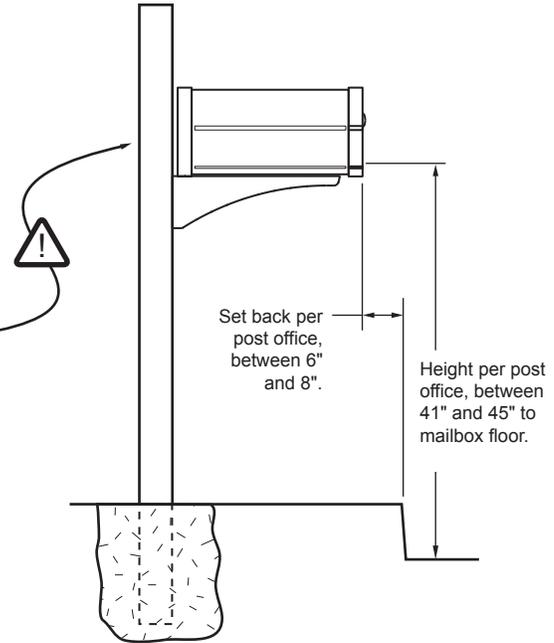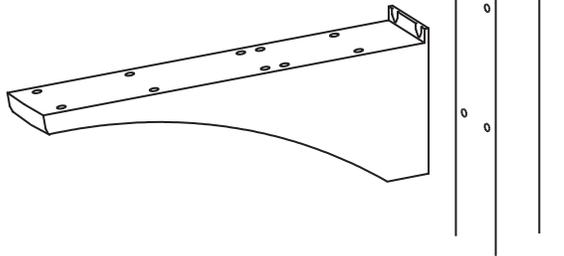
x 4, 5/16" flat washer

x 4, hole plugs

1

Dig a hole deep enough to allow the box to sit at the specified height. The height from the road level to the mailbox floor is between 41 and 45 inches. Make sure the hole is set back from the road such that the distance from the curb to the mailbox handle is between 6 and 8 inches.

Insert the post with one set of holes facing forward for a single mailbox assembly. For multiple mailbox assemblies, the post must be mounted with the holes facing to the sides. Pour the concrete (at least 1 cubic foot recommended) completely around the post, making sure the post remains level and correctly positioned. Allow the concrete to set.
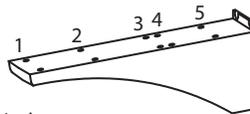
Set back per post office, between 6" and 8".

Height per post office, between 41" and 45" to mailbox floor.

2 After the concrete has set, attach the support bracket to the post as shown using the 1" screws and lock washers.
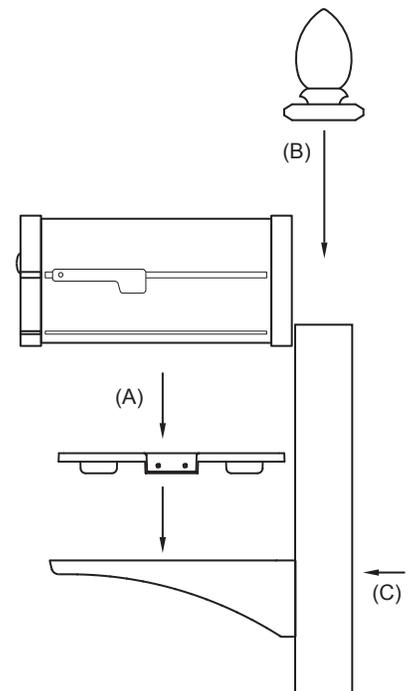
(B)

(A)

(C)

3 (A) Place the adapter plate onto the support arm and place the mailbox onto the adapter plate. Screw the mailbox onto the support arm using the 2-1/4" screws and flat washers. The adapter plate is trapped between the mailbox and the support arm. Use the hole sets marked "2" and "4" in the drawing below.

1 2 3 4 5

(B) Secure the finial to the top of the post with the small painted screws.

(C) Push the hole plugs into the holes on the back of the post. If you are installing multiple mailboxes on this post, discard the hole plugs.

ARCHITECTURAL MAILBOXES®