


# INSTALLATION AND WIRING DIAGRAM

USA

## LEDRA SERIES LEDS

### LEDRA™ KEPLER SCONCE

ART. NO. 135 451-1ch/m chrome, white, 3000k  
135 451-1mc/m matte chrome, white, 3000k

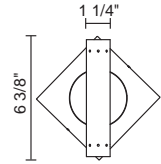

## IMPORTANT SAFETY INSTRUCTIONS



1. THIS PRODUCT MUST BE INSTALLED BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED, IN ACCORDANCE WITH THE LOCAL NEC CODE.
2. This product must be wired in series to a Class 2 LED driver only with 700mA output.
3. DRY LOCATIONS ONLY.
4. SUITABLE FOR SUSPENDED CEILING.
5. Turn off power prior to any work on the systems.
6. Warranty is void in case of unauthorized modifications and/ or improper use.

READ ALL OF THESE INSTALLATION INSTRUCTIONS BEFORE INSTALLING THE FIXTURE

### Contents of Delivery: LEDRA KEPLER SCONCE - qty. (1)

- Begin by connecting the two wires from the transformer (A) to the power cables in the wall.

- Insert the screw (C) into the mounting plate (D).

- Place the canopy cover (F) over the mounting plate (D) and secure it with the allen screw (G) located on the side of the base.

