




www.todaysdesignhouse.com

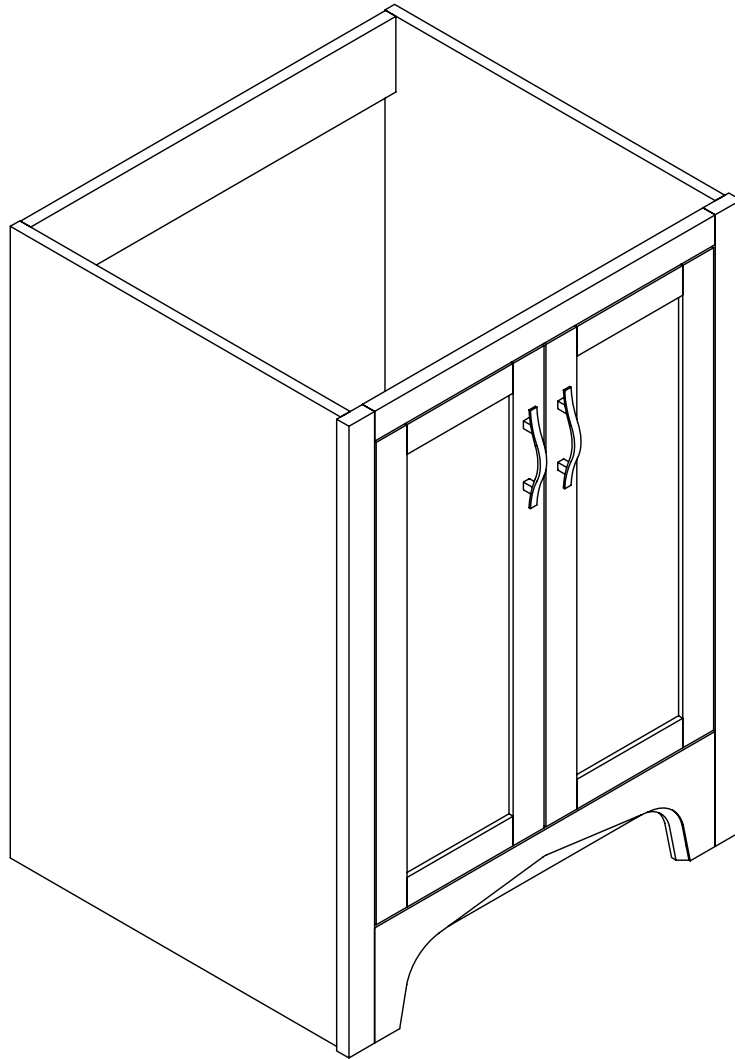


541227 • 541243 • 541268
541235 • 541250 • 541276


ASSEMBLY INSTRUCTIONS

DHI Corp. • 5205 W. Donges Bay Rd. • Mequon, WI 53092 • 800.558.8700


PARTS LIST:

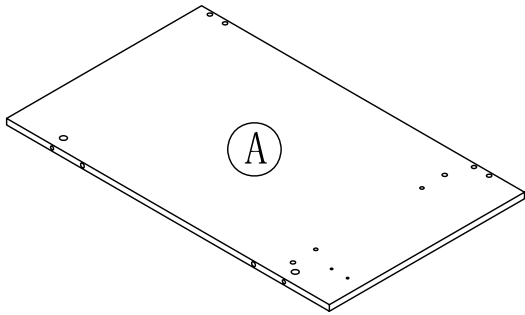


LEFT SIDE PANEL 1PC

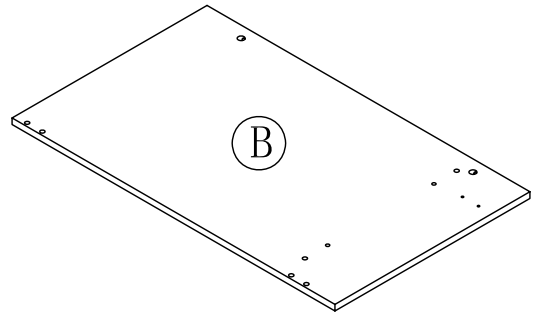


RIGHT SIDE PANEL 1PC

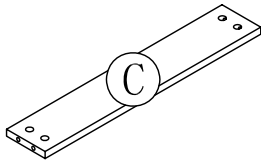


BACK CROSS BRACE 2PCS

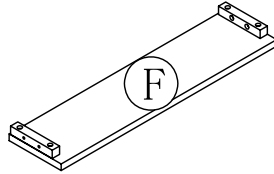


TOE KICK PANEL 1PC

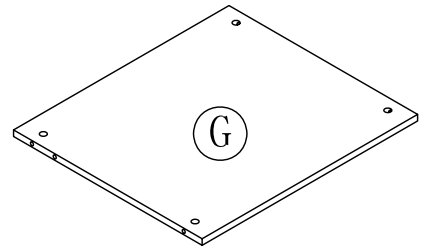

BOTTOM PANEL 1PC

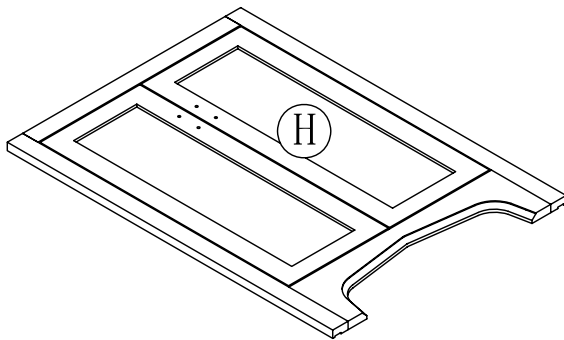

FRONT FRAME 1PC

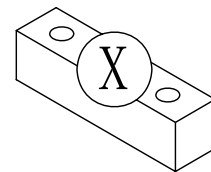


STOPPER 1PC

HARDWARE LIST:




a. WOOD DOWEL 8PCS




b. CAM LOCK SCREW
16PCS




c. CAM LOCK 16PCS




d. 1" L FLAT HEAD
SCREW 6PCS

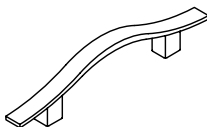

m. HANDLE 2PCS



n. HANDLE BOLT 4PCS

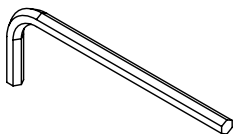

o. WRENCH 1PC





p. GLUE 1PC





z. PLASTIC COVER 16PCS



STEP 1

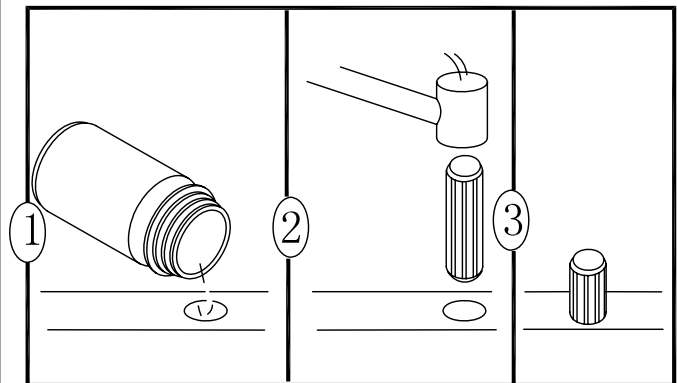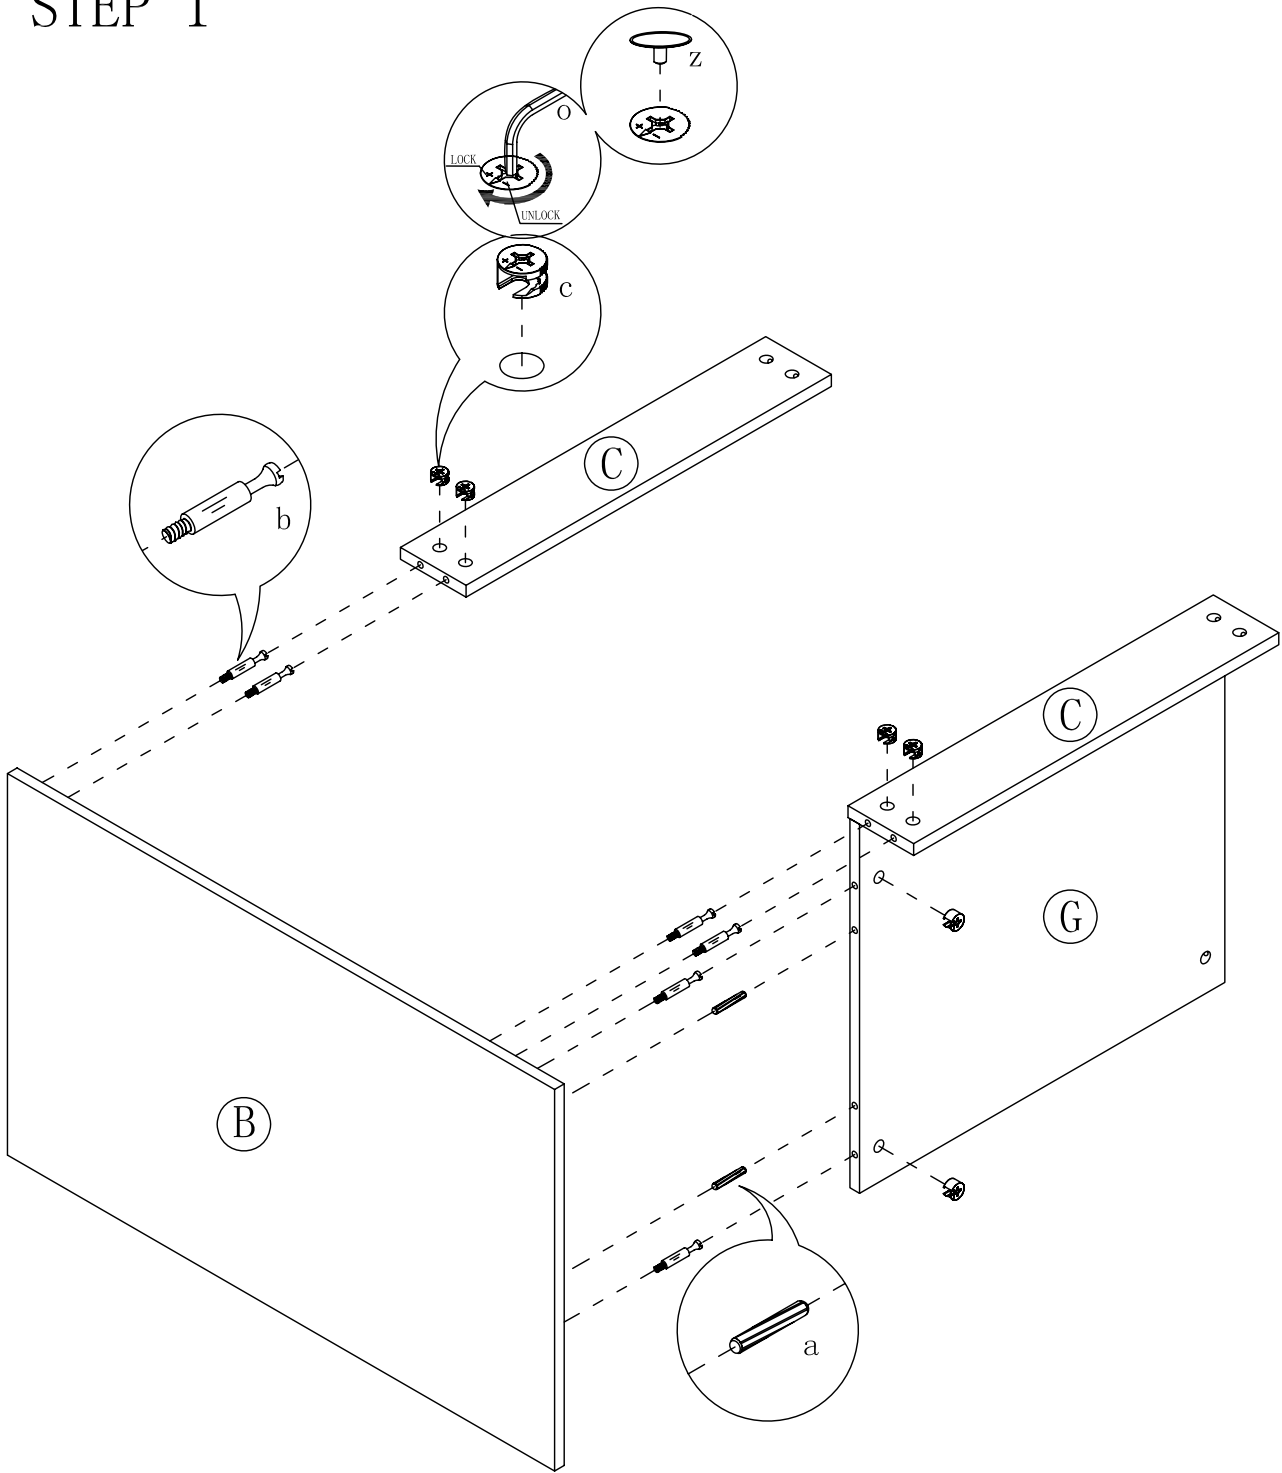


STEP 2

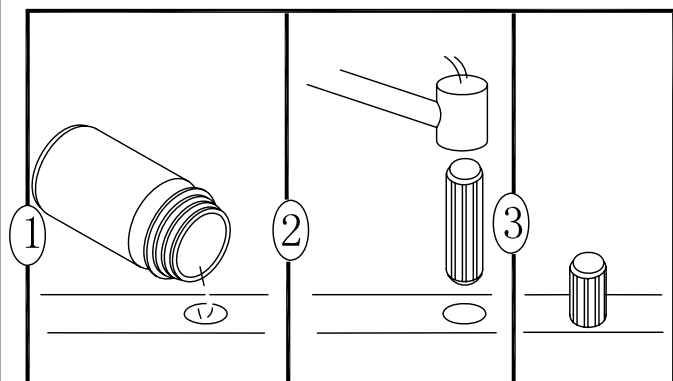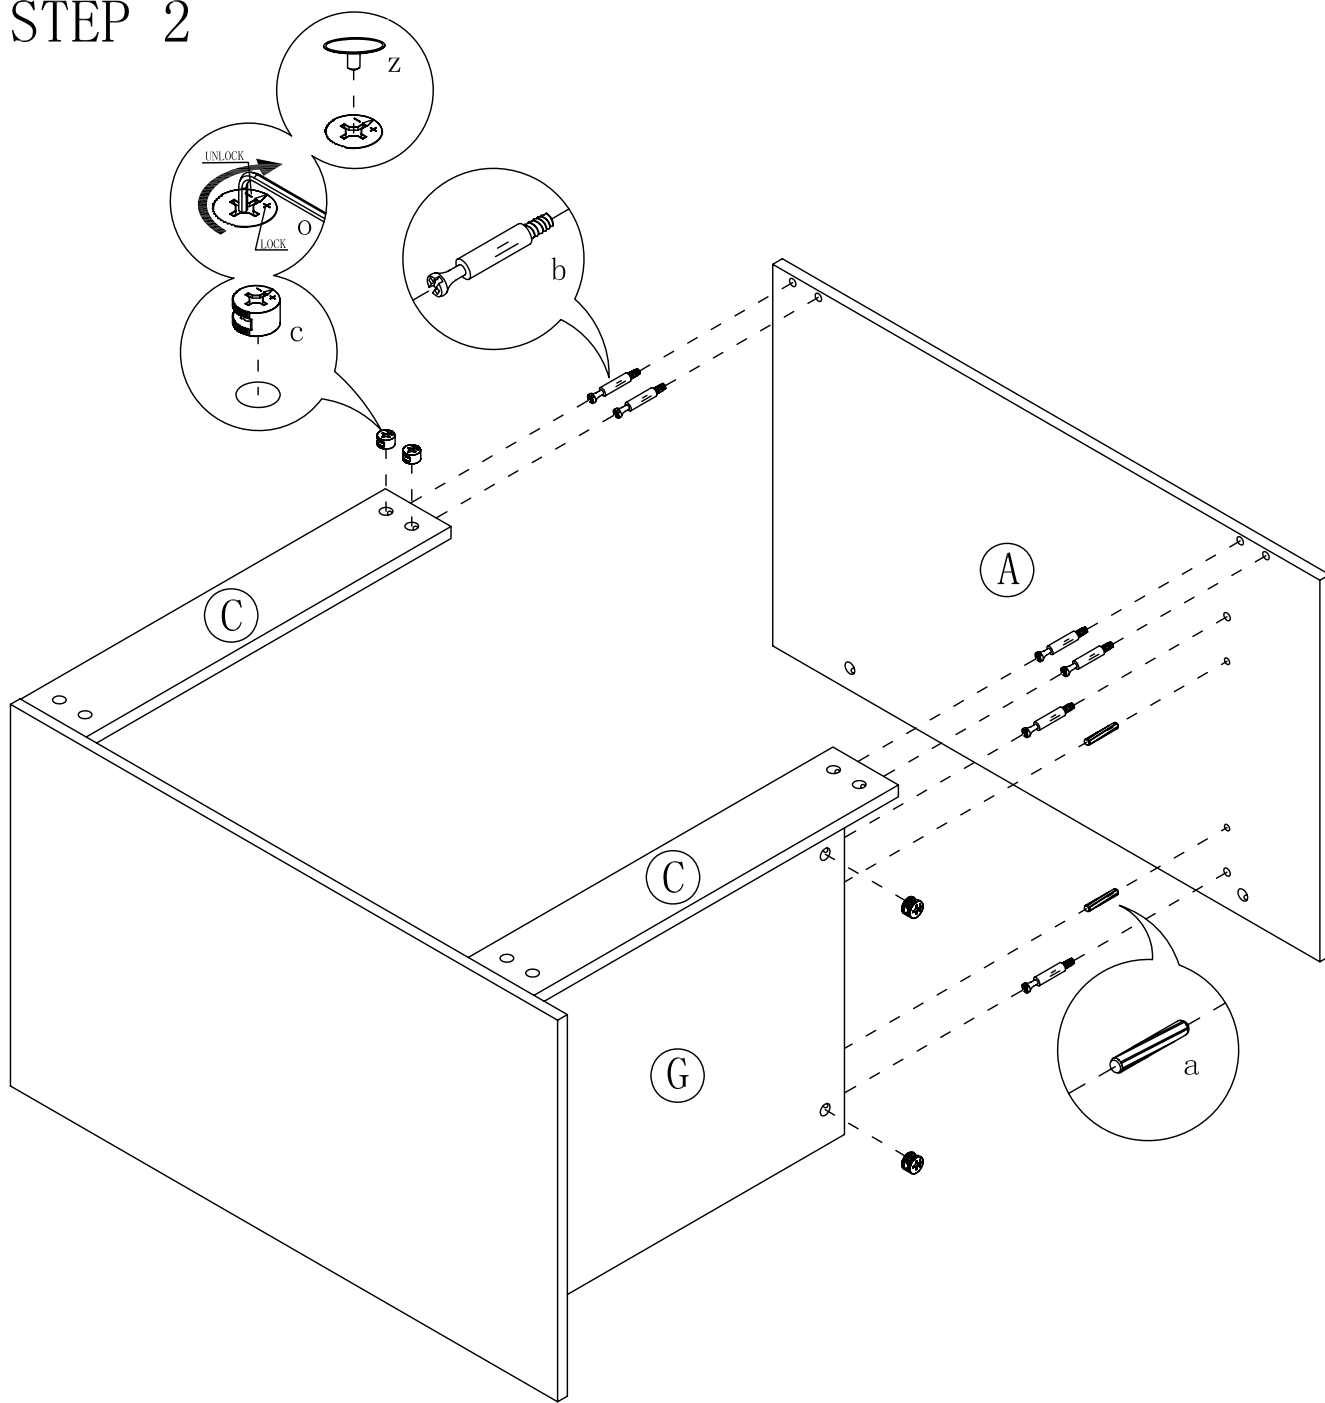

STEP 3

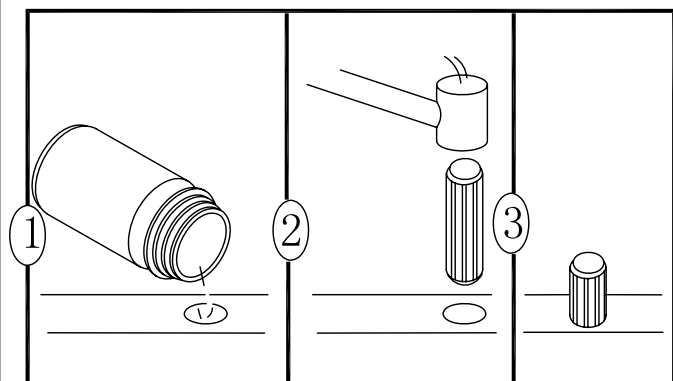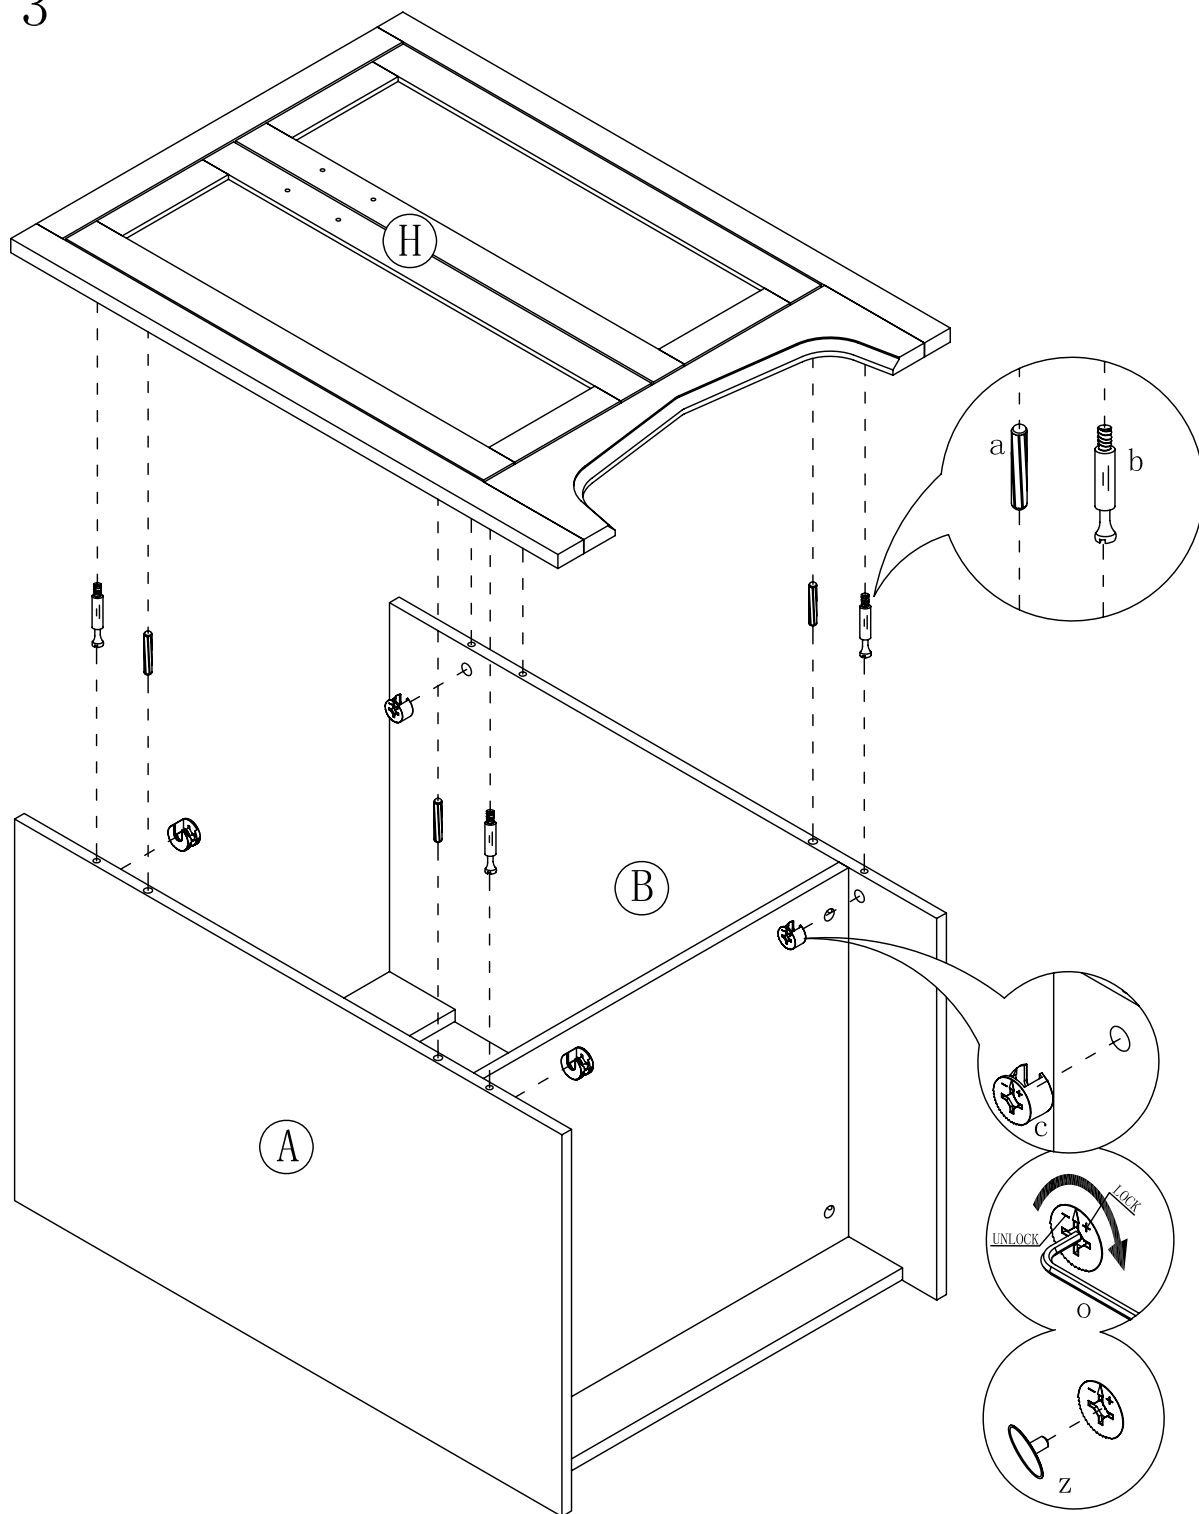

STEP 4

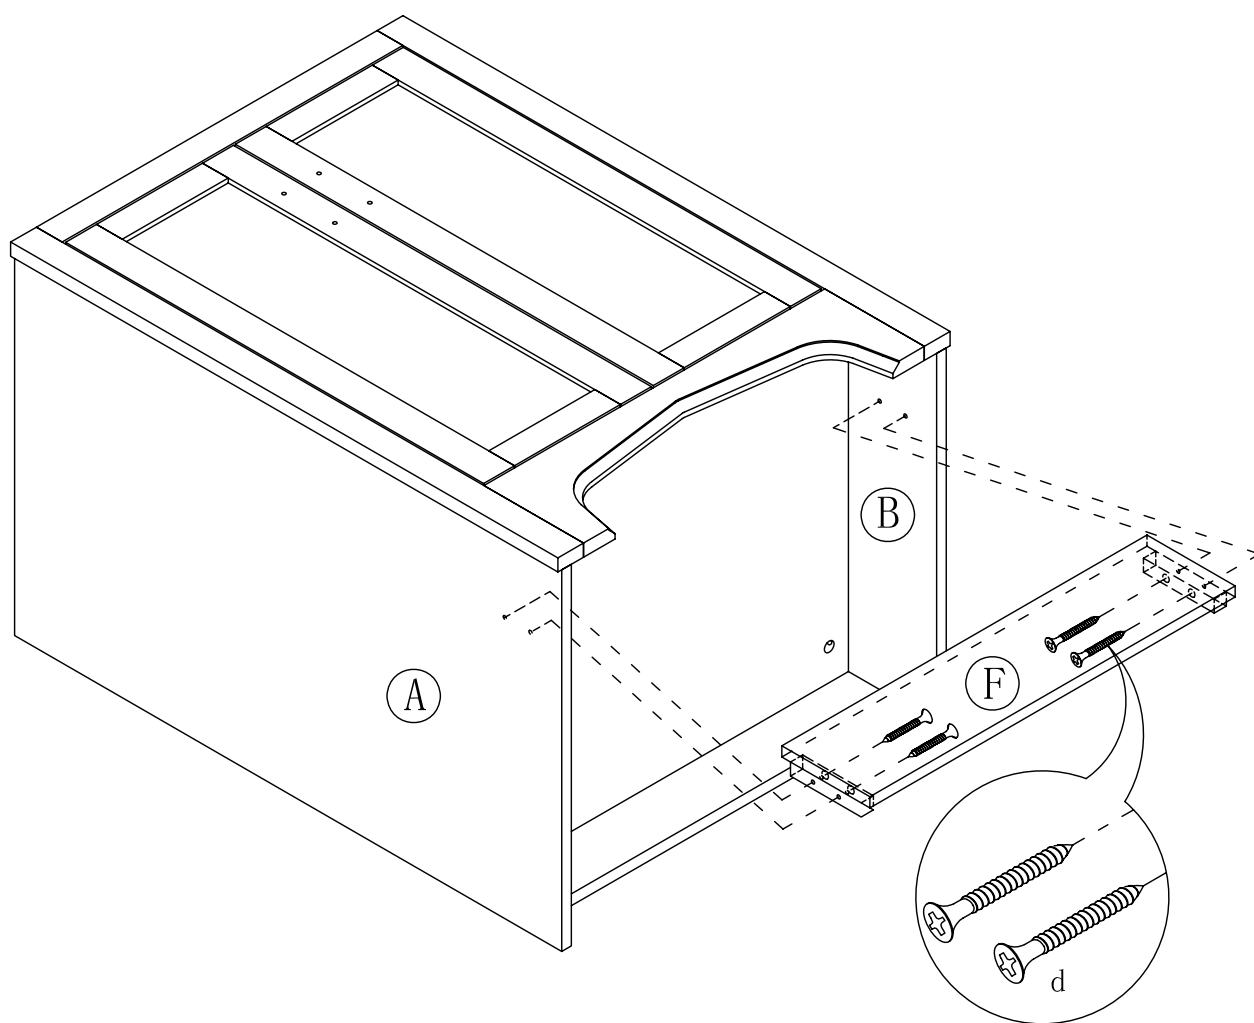

STEP 5

