

# DRS54PW Decorative Downrod Sleeve Installation Instructions

## READ AND SAVE THESE INSTRUCTIONS


Weight: 7.5 lbs (3.4 kgs)

**NOTES:** This Accessory is to be used for the Celano™ Ceiling Fan only.  
Requires 18" downrod or longer to use this sleeve.



### CAUTION


Turning off wall switch is not sufficient. To reduce the risk of fire and electrical shock, be sure electricity is turned off at the main fuse box to the fan before installing the accessory.

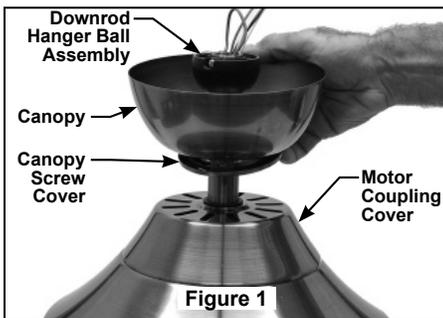

1. Remove downrod hanger ball assembly, Canopy, Canopy Screw Cover, and Motor Coupling Cover.

#### ▲ WARNING

It is critical that the clevis pin in the downrod support is properly installed and the setscrews are securely tightened. Failure to verify that the pin and setscrews are properly installed could result in the fan falling.

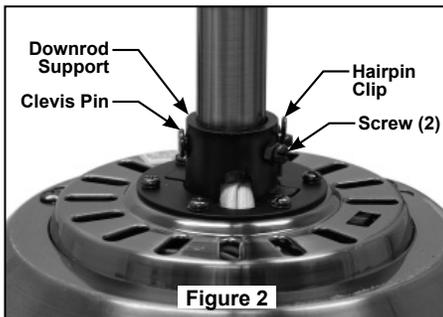

2. Change down rods by dis-assembling / re-assembling hairpin clip, clevis pin and screws.



3. Carefully install the decorative sleeve by seating it onto the top of the motor housing.



4. Re-assemble the Canopy Screw Cover, Canopy, and downrod hanger ball assembly. Reinstall the Hanger Ball (Figure 4) on the Downrod as follows. Position the Pin through the two holes in the Downrod and align the Hanger Ball so the Pin is captured in the groove in the top of the Hanger Ball. Pull the Hanger Ball up tight against the pin. Securely tighten the setscrew in the Hanger Ball. A loose setscrew could create fan wobble.

5. Carefully hang and re-wire the fan. Re-install the Canopy and the Canopy Screw Cover.

6. Restore electrical power.

---

## DRS54PW Decorative Downrod Sleeve Service Parts



**Before discarding packaging materials, be certain all parts have been removed**

### **How To Order Parts**

When ordering repair parts, always give the following information:

- Part Number
- Part Description
- Fan Model Number

Contact your retail store for repair parts.

