

# Installation Instructions for Accessories for Series: A, B, C, F

**ACC1**



**Step 1-** Secure **mounting brackets(AA12)** to wall using **sheet metal screws(AA08)** and **plastic anchors(AA10)** supplied, or use **toggle bolts (not supplied)** for hollow walls. Measure **center to center distance for towel bars and paper holder before mounting to wall making sure brackets are level.**

*Towel bars can also be cut if shorter lengths are needed.*

**Step 2-** Adjust height of **mounting stud(AA07)** to fit **escutcheon(AA05)** being used and tighten height adjustment nut(AA09).



**Step 3-** Place **escutcheon(AA05)** and **escutcheon ring(AA06)** (if applicable) over **mounting brackets(AA12)**. Place **both towel bar posts(AA01)** (loosen set screws(AA03) if necessary) on towel bar(AA02) and place over **mounting stud(AA07)** tight against **escutcheon(AA05)**.


**Step 4-** Tighten **set screws(AA03)** with supplied **allen wrench(AA04)** in both towel bar posts(AA01).

**Note-** *Paper holder, towel ring, robe hook, soap dish and glass cup and holder mount in the same way.*



MOUNTING BRACKET (AA12)

WALL

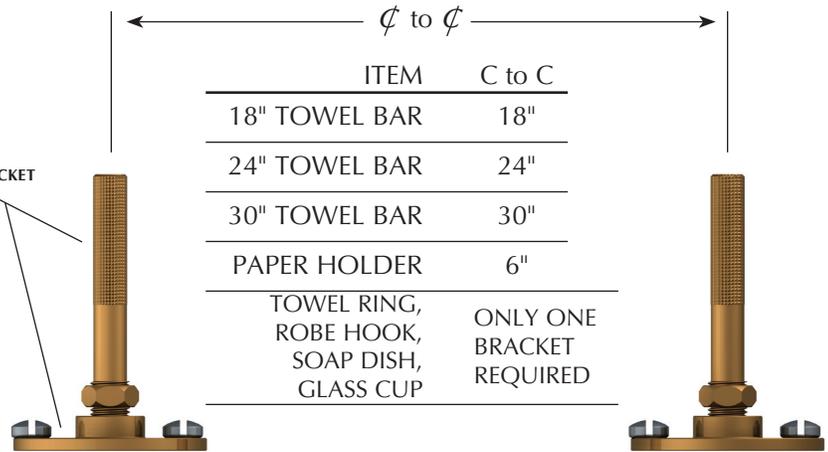

**IMPORTANT CLEANING NOTICE**

To maintain your accessories use only mild soap and water

*Never use acids, harsh abrasives or detergents.*



**for more information call**

888.560.5222 FAX 888.560.8727 Monday - Sunday 8:00am to 6:00pm EST

**ACC1**