

INSTALLATION INSTRUCTIONS


HKK-01 SERIES

1-800-355-0157


NOTE: To view video installation instructions, visit our website at the following address: <http://www.morningindustry.com/installvideos.php>

NEW DOOR PREPARATION

1-800-355-0157

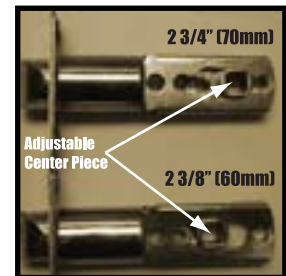

Step 1
Press & Slide Adjustable Center Piece to required backset (See above settings).

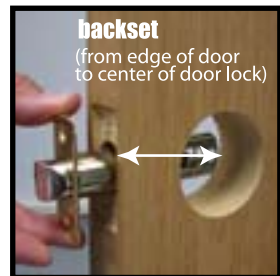


Step 2
Install latch into the side of door.



Step 3
Mount Front Assembly on door, routing wire loom UNDER latch and assuring Square Tube is face up.




Step 4
Install Back Mounting Plate (arrow showing) & route wire loom through rectangular hole.

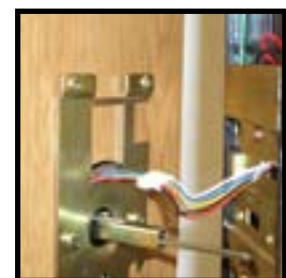

Step 5
Connect wire loom from Front Assembly to Back Module.



Step 6
Fasten Back Module to the Back Mounting Plate. DO NOT OVER TIGHTEN. Install premium alkaline batteries.

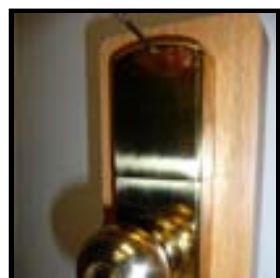

Step 7
Fasten Battery Cover to Back Module.

1 MARK DOOR
Select 2 3/8" (60mm) or 2 3/4" (70mm) backset as desired and mark center of hole on door face.
USE TEMPLATE BELOW.

2 DRILL HOLES
Drill 2" (51mm) hole on door face. Drill 1" (25.4mm) hole for the latch.

3 INSTALL LATCH
(A) Insert latch in hole and keep it parallel to door face. Mark outline of face plate and remove latch.
(B) Chisel 1/8" (3mm) deep or until face plate is flush with door edge.
(C) Insert latch and tighten screws.

5 VERIFY BACKSET
(1) Verify that backset is a distance from door edge to center of hole on door face.
(2) All locks are supplied with adjustable latches which fit 2 3/8" (60mm) or 2 3/4" (70mm) backsets.
NOTE: Default latch setting is for 2 3/8" (60mm) backset.

6 ADJUST LATCH FOR 2 3/4" (70mm) BACKSET
(A) Latch set for 2 3/8" (60mm) backset.
(B) Push up adjustable center piece in direction of arrow 1 then pull in direction of arrow 2.
(C) Latch is now set for 2 3/4" (70mm) backset.
(D) To reset latch for 2 3/8" (60mm) backset, reverse procedure B.
NOTE: Be sure to keep adjustable center piece in correct position as illustrated before pushing spindle cam to the left.

4 INSTALL STRIKE PLATE

(A) Close door and mark latch center-line on door frame. Extend mark through door frame thickness. Mark at the center of door frame.

(B) Drill 1" (25.4mm) hole 1/2" (13mm) deep in door frame.

(C) Outline the strike plate on door frame then chisel 1/16" (1.6mm) deep for a flush fit. Mount strike plate on door frame.

(D) Adjustable tang on strike permits bending in or out to eliminate too loose fit between door and door stop.

CAUTION: To insure proper lockset function, hole jamb must be drilled a full 1/2" (13mm) deep.



Morning Industry thanks you for your business and invites you to check out the new and exciting products on our web site <http://www.morningindustry.com>.

Morning Industry thanks you for your business and invites you to check out the new and exciting products on our web site: <http://www.morningindustry.com>.