
INSTALLATION INSTRUCTIONS EAST LINEAR PULL DOWN KITCHEN FAUCET

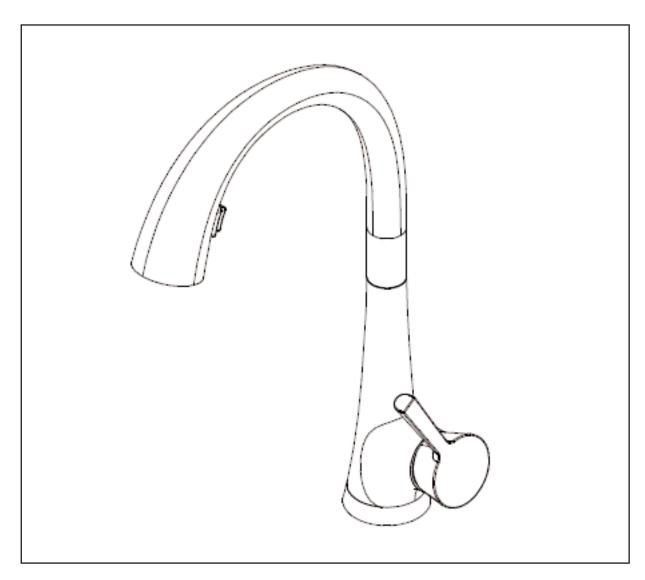

Model No's: 2500-5103




Congratulations on the purchase of your Newport Brass product, an excellent choice, that will give you years of quality service and enhance the look and style of your home.

Recommended Installation by a Professional Plumbing Contractor

Note: The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.

If mounting faucet to stainless steel rim, an under-mount support, (e.g. wood, appropriate size \times 1/2" thick), should be utilized.

- 1. Drill hole in mounting surface. Recommended deck hole Ø1.350", not to exceed Ø1.562".
- 2. Place O-ring (2) on underside of base RING (1). **See** Figure 1a.
- 3. Insert Hoses through hole in mounting surface. Secure into place with MOUNTING KIT (3). **See Figure 1**.
- 4. Attach hot/cold spout supply directly to valves in the wall. **See Fig. 2.**
- 5. DO NOT remove the HOSE (6) from SPOUT (4). SEE Figure 3.
- 6. Remove SPRING (9) from support and slide onto HOSE (6).

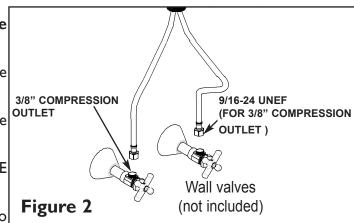



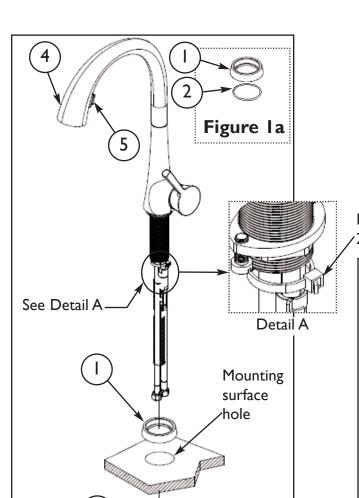


Figure I

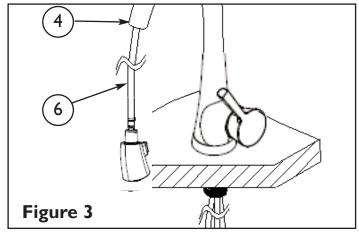

DO NOT REMOVE ZIP TIE

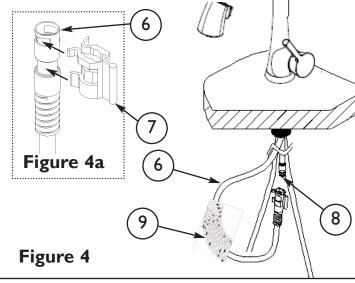

7. Attach CLIP (7) to HOSE (6) as shown. **See Figure 4a**. Connect to valve OUTLET (8) by firmly pressing together until it clicks into place. **See Figure 4**.

- 8. With faucet in the OFF position, open water supply valves. Inspect connections under sink for leaks. **DO NOT** turn faucet on yet.
- 9. Pull SPRAYHEAD (5) out from SPOUT (4). While holding HOSE (6), unscrew SPRAYHEAD (5). Aiming HOSE (6) into sink, turn on faucet to center position (mixed) and flush for one minute to remove debris from lines.
- Turn OFF faucet and reattach SPRAYHEAD (5) to HOSE (6). See
 Figure 5.
- 11. Check the SPRAYHEAD (5) by operating the trigger from aerator to spray.

