


INSTALLATION OF SHELF SUPPORTS, SHELVES,  
AND HOLE PLUGS.

Note: Carefully review the shelf location desired.  
The hole plugs are difficult to remove once  
inserted.

1. Select where you want the shelves to be placed.
2. Insert two (2) shelf supports at each end of the shelf location. (Figure 1)
3. Set shelves in place on the shelf supports, gently pressing down on shelf to lock in place. (Fig. 2)
4. Remove hole plugs from hardware bag and place in remaining holes. (Figure 2)

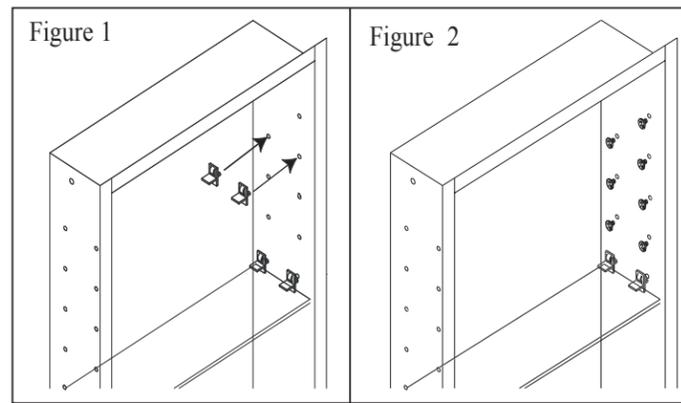

**MIRROR CARE**

Use only clean warm water and a clean, soft, lint-free cloth.  
DO NOT USE cleaners that contain solutions of ammonia, vinegar, or chlorine.  
DO NOT USE powered cleansers or steel wool.  
Never spray cleaning agents directly on the mirror, especially on exposed edges and mirror backing. Apply cleaner to soft cloth and wipe mirror. Dry mirror thoroughly. Keep mirror dry. A well ventilated bathroom is important.

**ONE YEAR LIMITED WARRANTY**

Broan-NuTone Storage Solutions warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workmanship for a period of one (1) year from the date of original purchase. **THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

During this one year period, Broan-NuTone Storage Solutions will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service. This warranty does not cover (a) normal maintenance and service or (b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by Broan-NuTone Storage Solutions), faulty installation or installation contrary to recommended installation instructions. Labor to remove and replace products is not covered.

The duration of any implied warranty is limited to the one year period as specified for the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

**BROAN-NUTONE STORAGE SOLUTIONS' OBLIGATION TO REPAIR OR REPLACE, AT BROAN-NUTONE STORAGE SOLUTIONS' OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. BROAN-NUTONE STORAGE SOLUTIONS SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties.

Date of Installation

Model No and Product Description

**BROAN** STORAGE  
**NuTone** SOLUTIONS

INSTALLATION INSTRUCTIONS


Model:

S368184OVWH- 18" Beveled Edge Mirror (WH)

S368244OVWH- 24" Beveled Edge Mirror (WH)

Recessed or Surface Mounted Oval Bath Cabinet

Size	WALL OPENING			OVERALL SIZE	
	W	H	D	W	H
18"	14 1/4	18	4	21 1/4	31 1/4
24"	14 1/4	24	4	24	35 7/8

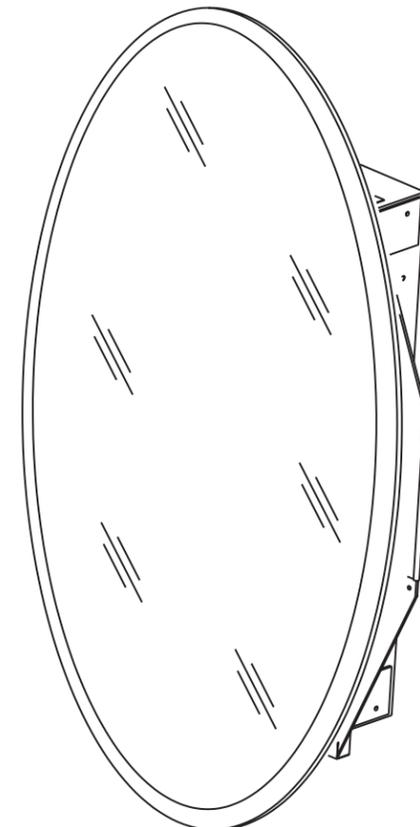

Surface Mount  
Shown

This Medicine Cabinet was designed to be either Recessed or Surface Mounted. Please decide which version you would like to use and install according to that style.

Note:

Carefully remove all packing material from the carton. Place Door, Glass Shelves, and Side Mirrors in a safe area to prevent any accidents.

PLEASE: Read the instructions before beginning the installation process.

List of Required Tools:

1. Safety Glasses
2. Measuring Tape
3. Pencil
4. Level
5. Screwdriver (Phillips head)
6. Wrench (11/32" or 9mm)
7. Wall Stud Locator

IF YOU NEED ASSISTANCE OR SERVICE- CONTACT

Broan-NuTone Storage Solutions, 501 S. Wilhite Cleburne TX 76031 www.nutone.com (1-800-325-8351)

# Surface Mount Installation



Refer to the "Assembly Diagram" attached to find the "[Item Numbers]" referred in the following instructions. Before Installation, determine which side the door will open on, left or right.

- Determine where you want your cabinet to be installed and which way the door to swing open. Identify where the wall stud is inside the wall and mark it. Use Wall Anchors [Item Number 14] on any screws that don't screw directly into the wall stud.
- Install the Bottom Mounting Bracket. Line up the bottom bracket at the desired location. With the screws provided (1 3/4 No.8 PPH) [Item Number 6], attach the bottom bracket to the wall stud that you have marked. Level the bracket (See Figure 1) and attach the opposite end of the bracket to the wall using the wall anchor provided. Note: Bracket should be a MINIMUM of 7" above faucet; this will provide a 1" clearance.
- Before you install the Top Mounting Bracket  
Lift the cabinet body into position on the bottom bracket by aligning both the bracket holes and the body mount holes. Place the Top Bracket on the top of the body and carefully mark the appropriate position of the Top Bracket. Make sure that the body hole is flush with the bracket hole. Remove the cabinet body and install the top bracket, again catching the wall stud as described above. (See Figure 1)
- Install the Body. Place the enclosed screws (8-32 x 5/8 PPH) [Item Number 12] through the Clear Washer [Item Number 11] per Figure 2 and attach the body to the mounting brackets. Install the Screw Cap when completed.
- Install the Spacers provided with double sided tape. Remove the vinyl coating from the adhesive tape on ONE side of the spacer. **IMPORTANT PLACEMENT:** Place the spacers on the cabinet body, so that the spacer is flush to the back of the body, per Figure 3.  
**Do not place the spacer on the hinge bracket.** Repeat on both sides, until all 6 spacers (three on each side) are placed.
- Install the Side Mirrors. Remove the remaining vinyl coating from the adhesive tape. **IMPORTANT TECHNIQUE:** Install the Side Mirrors per Figure 4.
- Install the Door. Attach the door with the screws provided (8-32 x 1/4 Phillips Flat Head) [Item Number 1].  
**NOTE:** To secure screws, it is **RECOMMENDED** the use of **LOCKTITE**.
- Install the Shelf Supports, Shelves, and Hole Plugs provided. See page 4 for installation instructions.

# Recessed Mount Installation




Refer to the "Assembly Diagram" attached to find the "[Item Numbers]" referred in the following instructions. Before Installation, determine which side the door will open on, left or right.

- Preparation for the Installation of the Body  
Determine desired location of cabinet on wall. Mark the wall to show wall opening size (see Figure 1).  
Note: Height should be a MINIMUM of 7" above faucet. This will allow a minimum of 1" clearance when door opens. Cut wall opening, being careful not to damage the surrounding wall surface. **CAUTION:** Wall studs, plumbing, or electrical lines that interfere, must be removed or relocated **BEFORE** installation. Insert framing to support all plaster board edges (if required).
- Install the Flange Bracket  
Attach Flange Bracket according to Figure 3 using screw #6-32 x 3/16" [Item Number 8], Qty. 2 screws (top and bottom).
- Install the Body  
Prepare the mounting screws by placing the screws into the clear plastic base (see Figure 2). Position the body inside the opening. Ensure the cabinet is plumb and level. If necessary, use a carpenter's level and shim corners of cabinet. Secure to wall the studs through four (4) mounting holes inside the cabinet, using the screws provided inside the assembly bag (see Figure 4). **NOTE:** When mounting cabinet, the side with the Bracket should be screwed in first.  
**DO NOT OVER TIGHTEN THE MOUNTING SCREWS.**
- Install the Screw Covers  
Snap the screw covers over the screw bases (see Figure 5).
- Install the Door.  
**IMPORTANT NOTE:** Secure door while fastening screws on the bracket. Attach the Door with the screws provided. Screw 8-32 x 1/4" Phillips Head. [Item Number 1]
- Install the Shelf Supports, Shelves, and Hole Plugs. See page 4 for installation instructions.

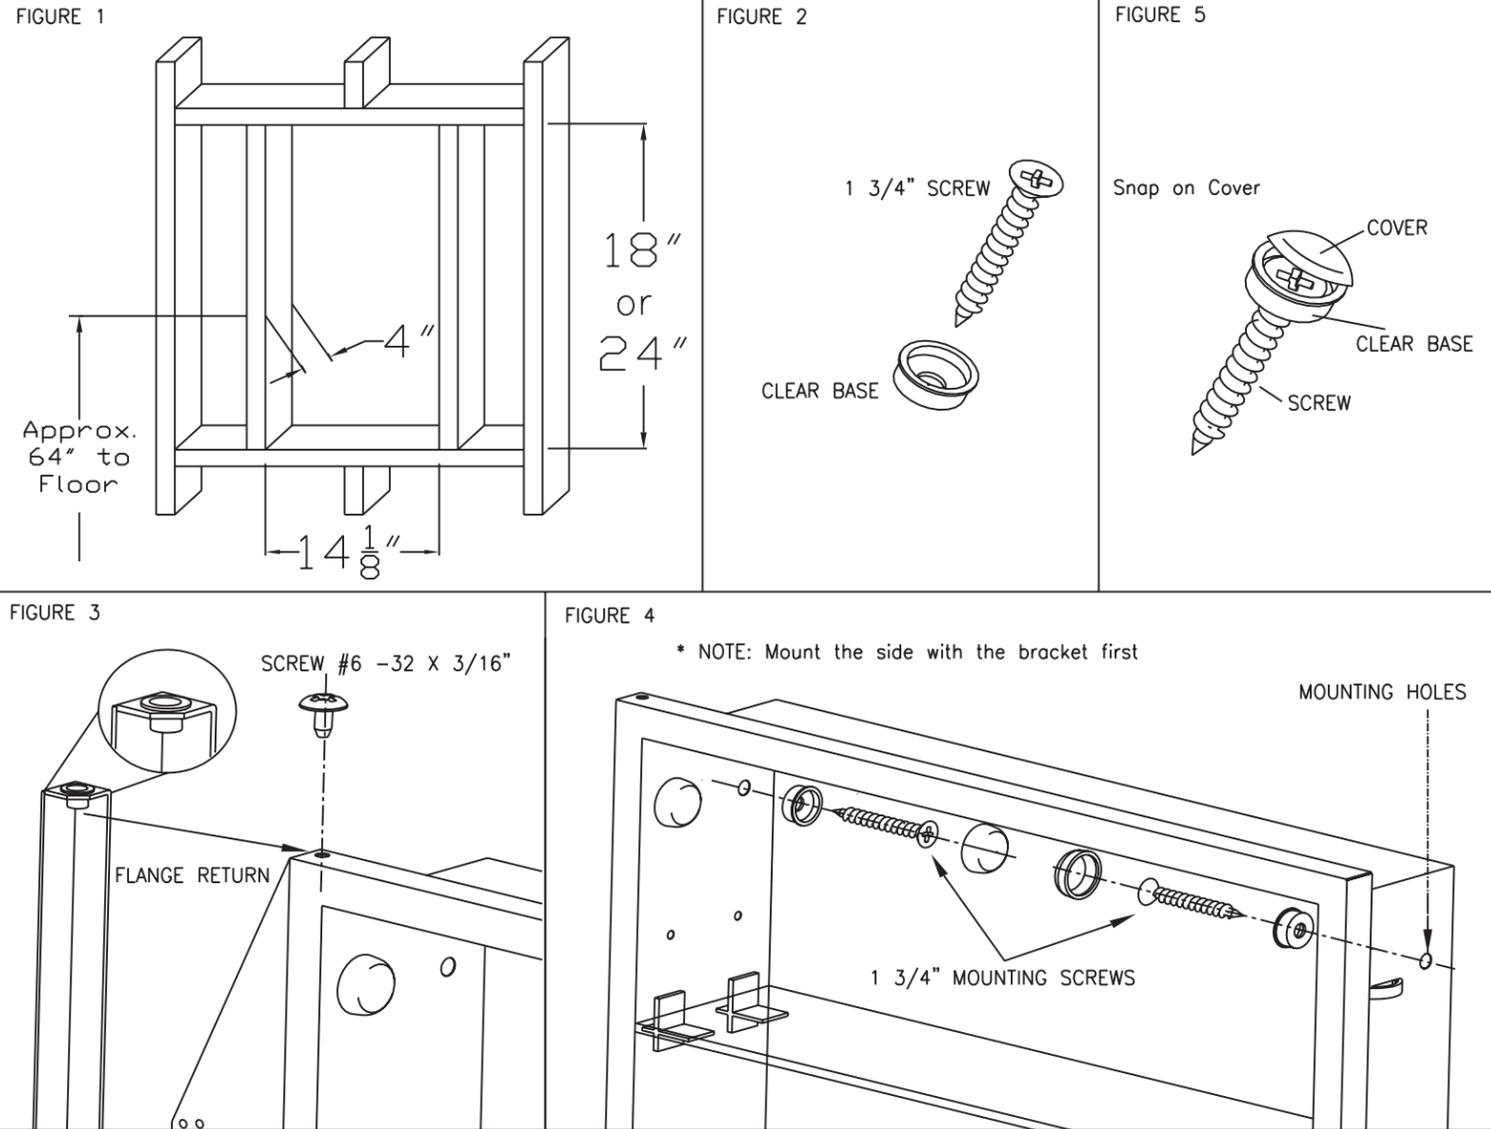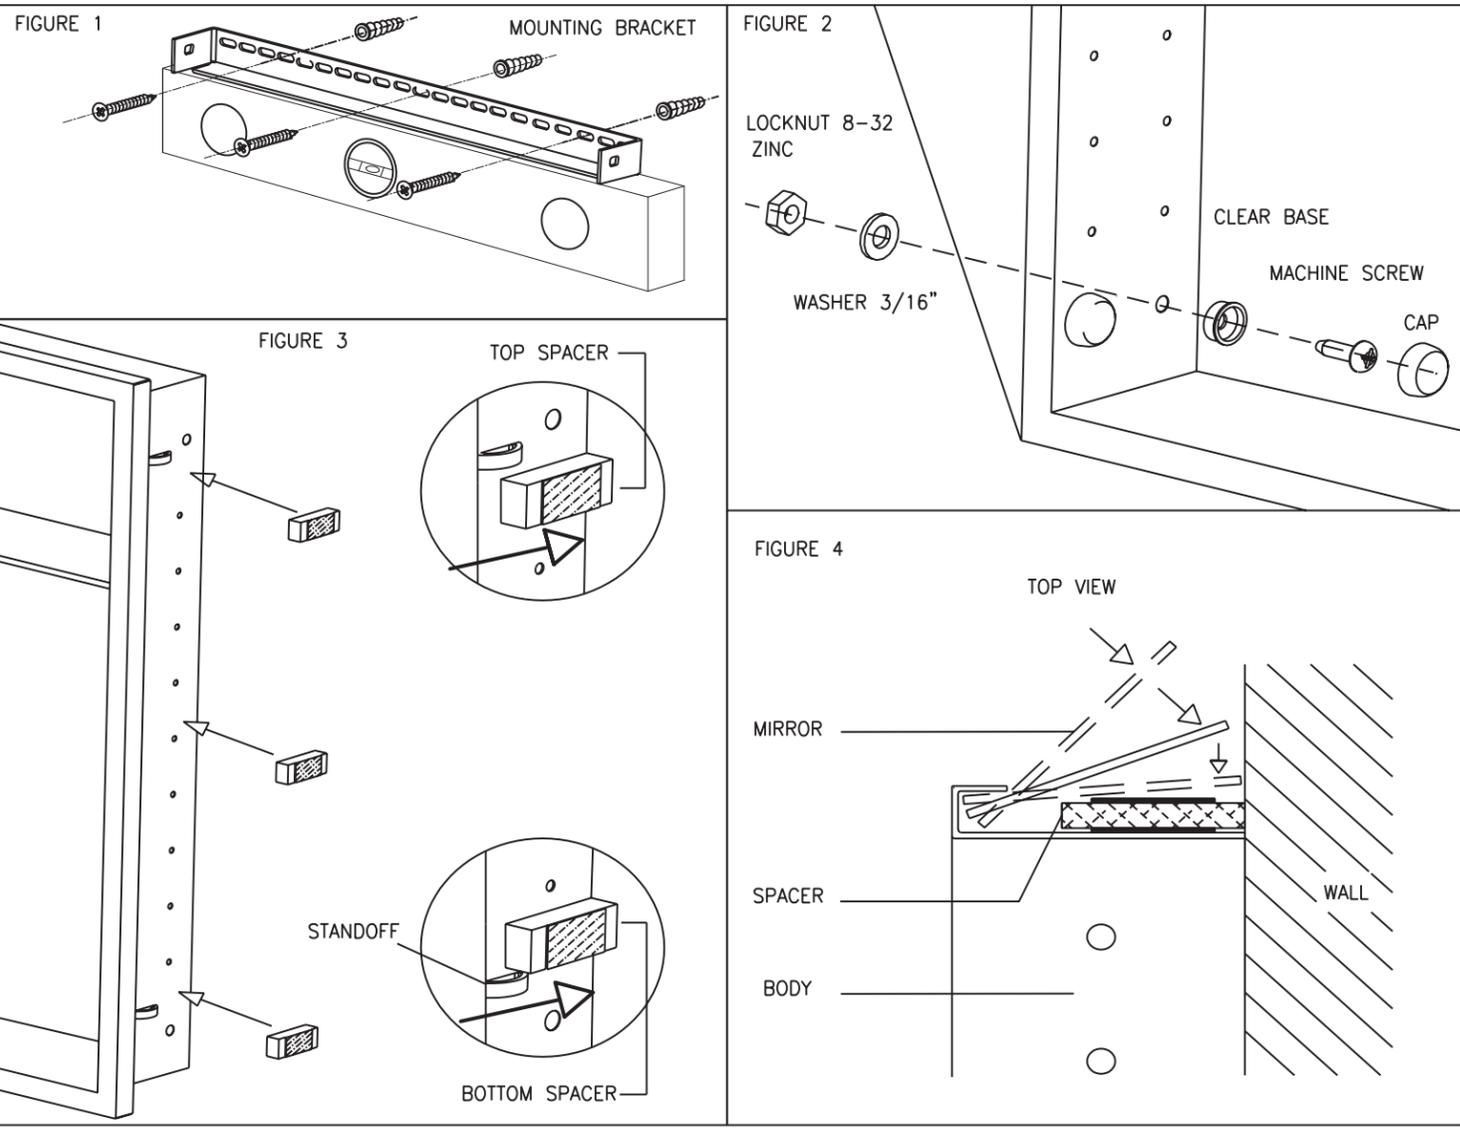

# Recessed Mount Assembly Diagram

Item No	Part Description	Qty	Part Number
1	Screw (8-32x1/4PFHMS, TRUSS)	5	10-168-01
2	Door, Oval Mirror Bevel*	1	107-680-01
3	Screw (8-1 3/4 PPH)	4	10-231
4	Shelf, Glass	3	31-185-01
5	Shelf Support	20	29-842-01
6	Screw Washer, Clear	6	29-827-03
7	Screw, Cap White	6	29-827-01
8	Screw (#6-32 x 3/16")	2	10-260-01
9	Flange Return (WH)	1	111-739-01WH

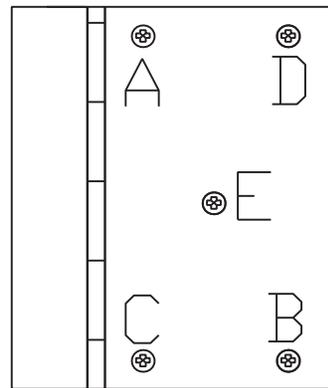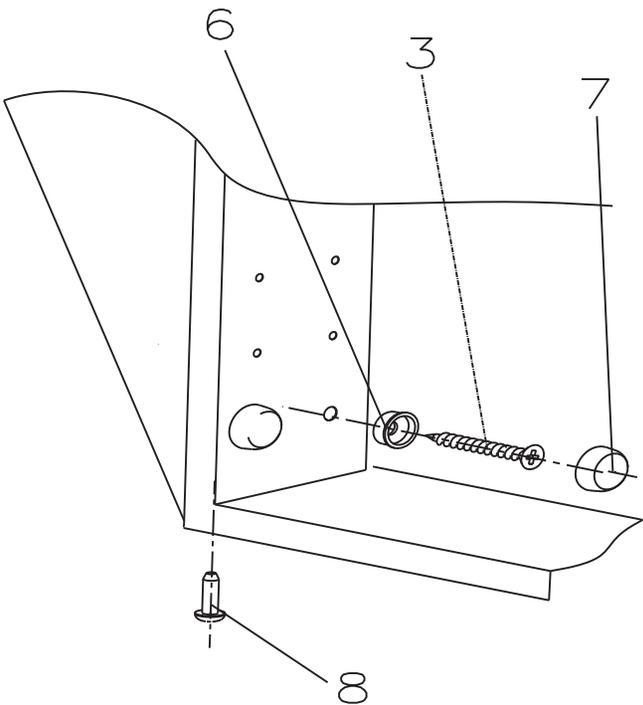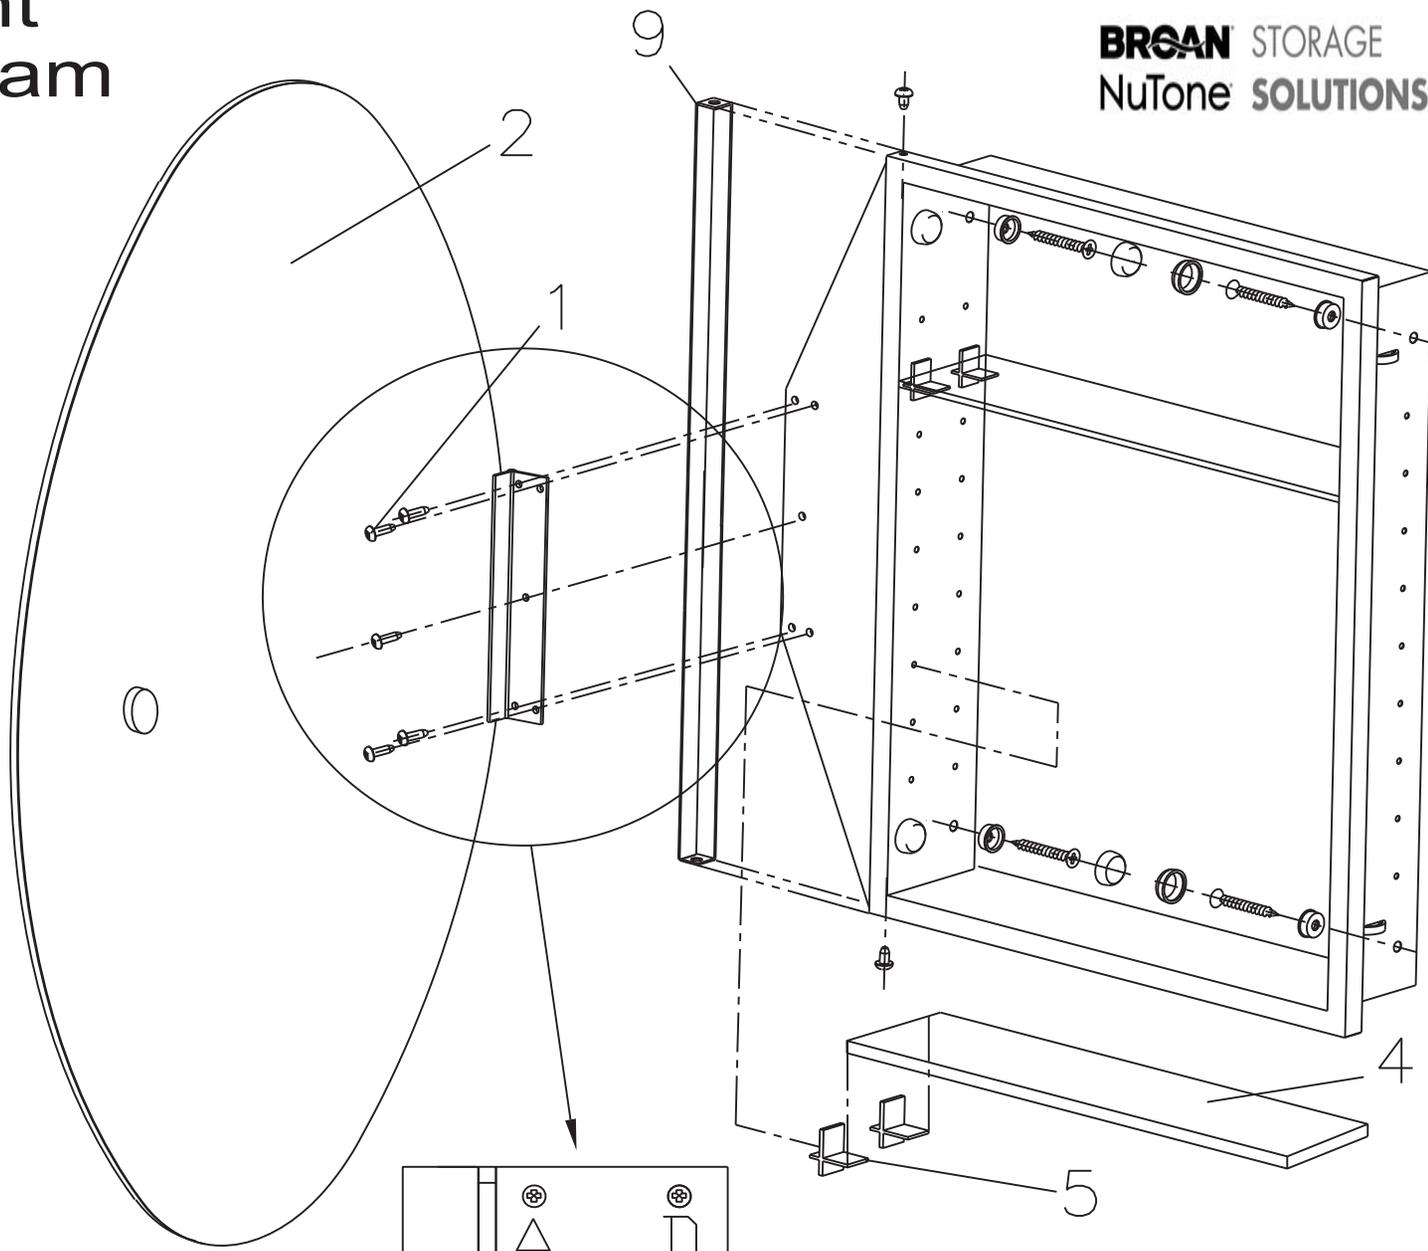

Attach Door by following Sequence above.