920BCCORVACF

Corva Bath (Compact Fluorescent)

700WSCRVW_-CF   1.2

TECH LIGHTING®

WALL COLLECTION

GENERAL PRODUCT INFORMATION:

This product can mount to either a 4" square electrical box with round plaster ring or an octagon electrical box.

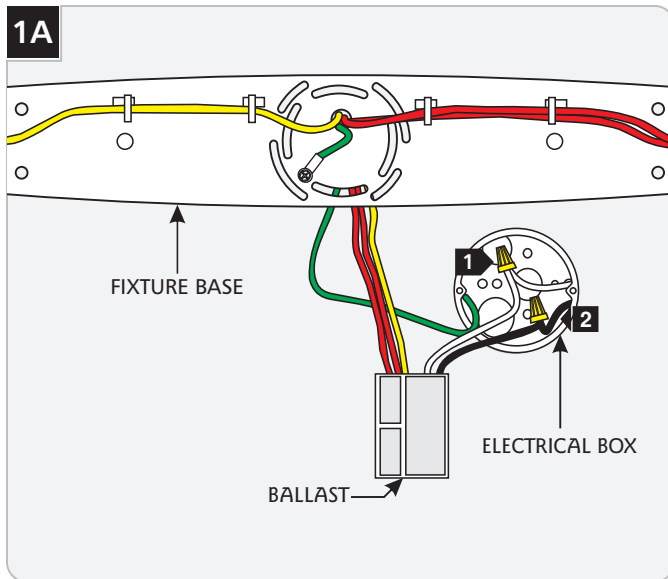This product is suitable for damp locations.

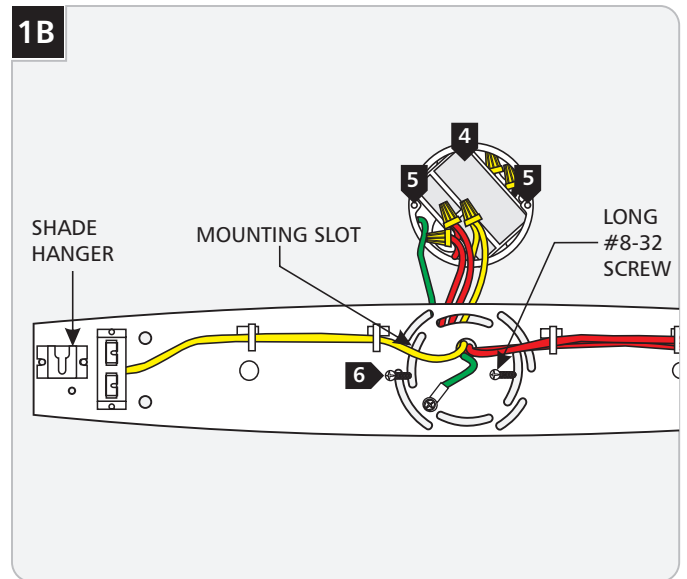This product can be mounted horizontally or vertically.

CAUTION—RISK OF FIRE

This product requires installation by a qualified electrician. Before installing be sure to read all instructions and TURN THE POWER TO THE ELECTRICAL BOX OFF.
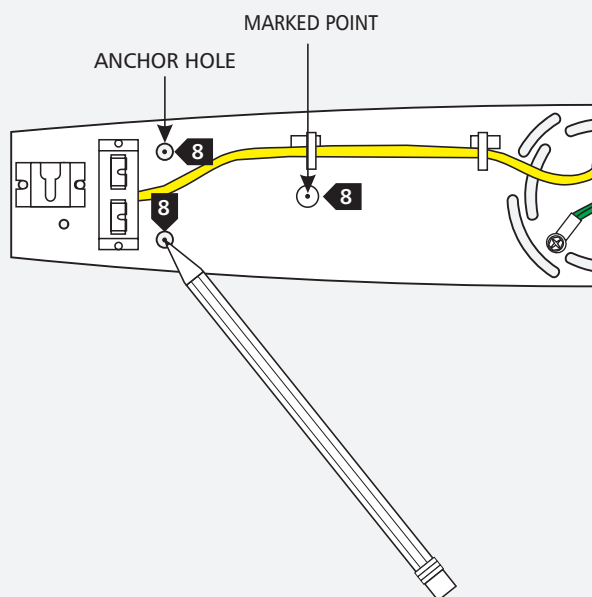

Install the Fixture Base

FIXTURE BASE

BALLAST

ELECTRICAL BOX
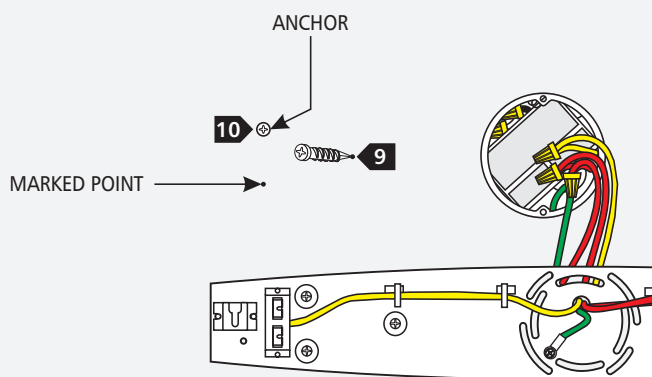
SHADE HANGER

MOUNTING SLOT

LONG #8-32 SCREW

1 ▸ Connect the ballast white wire to the neutral power line wire with a wire nut.

2 ▸ Connect the ballast black wire to the hot power line wire with a wire nut.

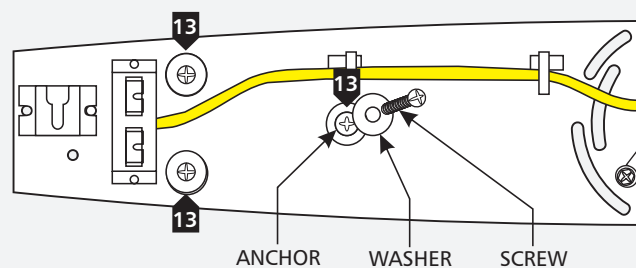**3** ▸ Connect the green ground wire to a suitable ground in accordance with local electrical codes.

4 ▸ Place the ballast, all wires and wire nut connections inside the electrical box.

5 ▸ Line up two mounting slots with the two electrical box holes.

6 ▸ Level the mounting plate and secure it to the electrical box with the two Long #8-32 screws provided.

1C

MARKED POINT

ANCHOR HOLE

8

8

8

7 ▸ Verify that the fixture is level before continuing.

8 ▸ Mark points on the wall at the center of all six anchor holes.
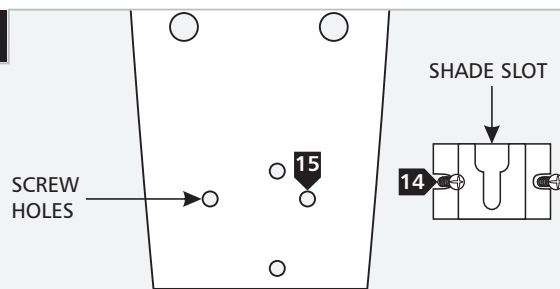
1D

ANCHOR

10

9

MARKED POINT

9 ▸ Line an anchor tip with a marked point, and push the anchor into the wall up to the threads.

10 ▸ Screw the anchor in the rest of the way with a Phillips-head screwdriver.

11 ▸ Repeat for all six marked points.

1E

13

13

13

ANCHOR   WASHER   SCREW

12 ▸ Remount the fixture base to the electrical box.

13 ▸ Slide a #8 screw through a washer, and screw it into an anchor to secure the fixture base to the wall. Repeat for all six anchors.
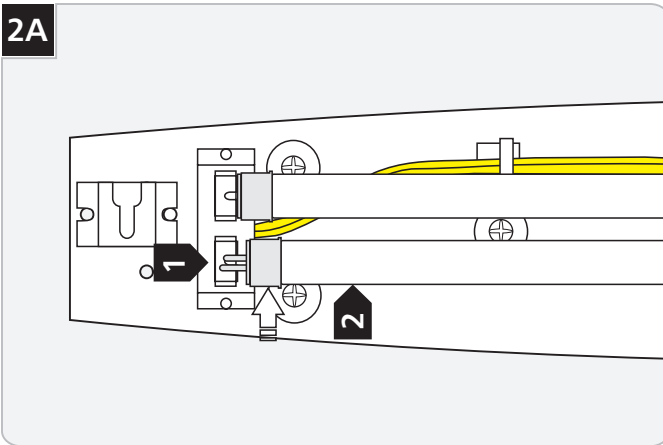
If Mounting Vertically

1F

SHADE SLOT

SCREW HOLES

15

14

14 ▸ Unscrew the shade hangers from the fixture base.

15 ▸ Screw the shade hangers into the other screw holes, making sure the shade slots point upward.

Install the Lamps and Glass Shade

2A

CAUTION: To reduce the risk of a burn or electric shock during relamping, disconnect the power to the fixture.
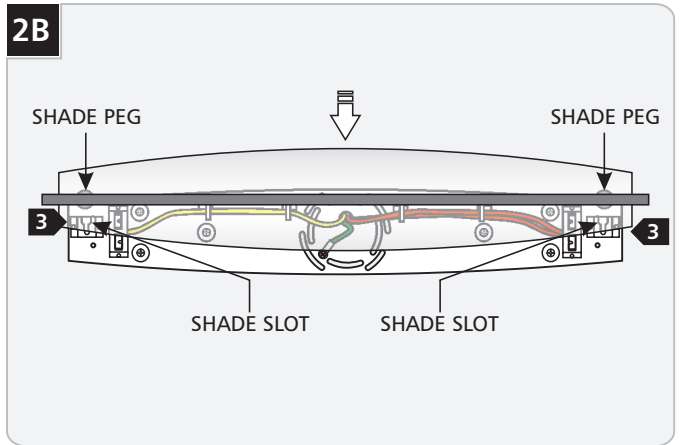
NOTE: Use only your fingers to replace the lamp.

Use **MAX 14 W** type T5 Linear fluorescent lamp.

1 ▷ Line up the lamp pins on both sides with the opening on the sockets.

2 ▷ Insert the pins all the way into the sockets and turn the lamp to lock it in place. Repeat this step for the other lamp.

2B

SHADE PEG   SHADE PEG

3   **3**

SHADE SLOT   SHADE SLOT

3 ▷ Carefully slide the shade pegs into the slots.

NOTE: The shade pegs can be adjusted if they don't align properly with the slots.

SAVE THESE INSTRUCTIONS!