


Uttermost

Assembly Instruction ITEM#23006

UNPACK CARTON ON A SOFT,SMOOTH SURFACE-INVENTORY ALL PARTS.


Component List:

- A. Back Frame.....1 pc.
- B.Seat Box.....1 pc.
- C.Left Arm Frame.....1 pc.
- D.Right Arm Frame....1 pc.
- E.Seat Cushion.....1 pc.
- F.Dust Cloth.....1 pc.
- G.Leg.....4 pcs.

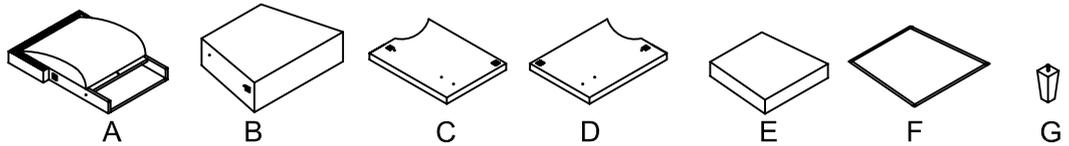


Hardware List:


- 1.Long Bolt.....1 pc.
- 2.Short Bolt.....6 pcs.
- 3.Metal Pin.....2 pcs.
- 4.Flat Washer.....9 pcs.
- 5.Spring Washer.....7 pcs.
- 6.Plastic Washer.....4 pcs.
- 7.Wrench.....1 pc.
- 8.Wood Dowel.....2 pcs.

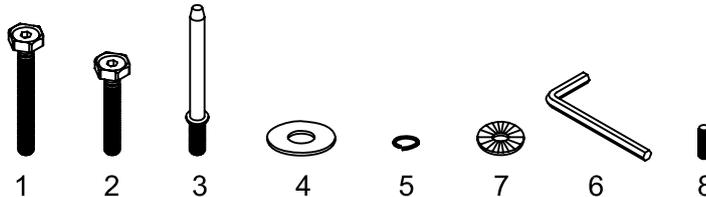

Step 1. Put the **Back Frame (A)** on a soft, clean place as shown. Connect the **Seat Box (B)** to the **Back Frame (A)** using the **Flat Washer(4)**, **Spring Washer(5)** and **Long Bolt(1)**. Turn **Long Bolts(1)** with **Wrench(7)** properly. Do not tighten.

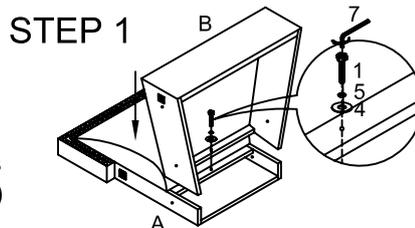


Step 2. Put the **Arm Frames(C&D)** on a soft, clean place as shown. Turn the **Metal Pin (3)** along with **Flat Washer(4)** into the hole which has a green color square mark. Insert the **Wood Dowel (8)** into the hole which has a red color ring mark.

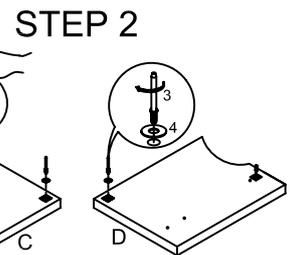


Step 3.Connect the arms to the body as shown following below instruction.

- A. Insert the **Arm Frames(C&D)** to the end of the body by means of the **Metal Pin (3)** and **Wood Dowel (8)**.The body has both green square mark and red ring mark against the marks on the **Arm Frames(C&D)**.
- B. Push the **Arm Frames(C&D)** up properly to make both seat bottom and arm bottom at the same level.
- C. Attach the **Arm Frames(C&D)** and the body together by using **Flat Washer(4)**,**Spring Washer(5)** and **Short Bolt(2)**.Turn **Short Bolts(2)** with **Wrench(7)** properly. Do not tighten.

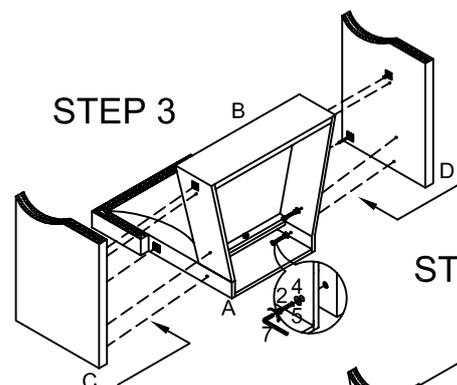


- D. Tighten all **Bolts(1&2)** with **Wrench(7)**. We suggest you tighten the bolt which is in the position of centre first, and then attach the other two bolts.


Step 4. Stick the **Dust Cloth (F)** onto the seat bottom as shown.

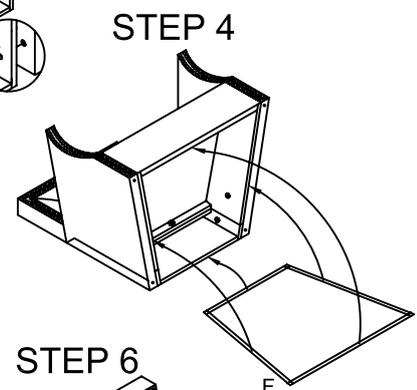

Step5. Turn the **Legs(G)** along with **Plastic Washer(6)** to the bottom of arms as shown

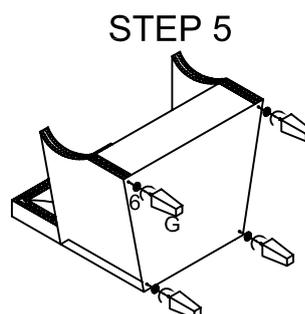

Step 6. Turn your upholstery to the right position and put the **Seat Cushions(E)** on it as shown.

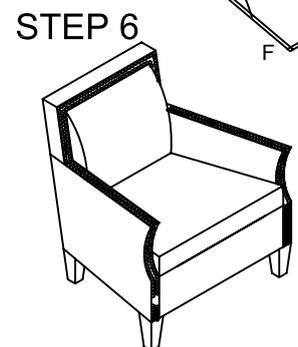

Assembly is complete now.
Thank you for your purchase.