


MODEL NUMBER

**2175.502**

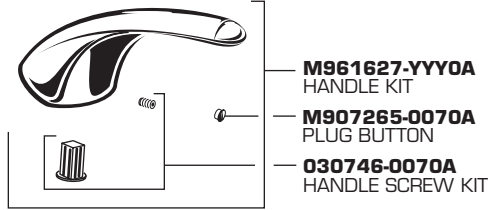

- M961627-YYY0A**  
HANDLE KIT
- M907265-0070A**  
PLUG BUTTON
- 030746-0070A**  
HANDLE SCREW KIT



- M907301-YYY0A**  
CAP




- M918506-0070A**  
CARTRIDGE SCREWS



- A951470-0070A**  
CARTRIDGE

Replace the "YYY" with appropriate finish code

CHROME	002
BRASS	099

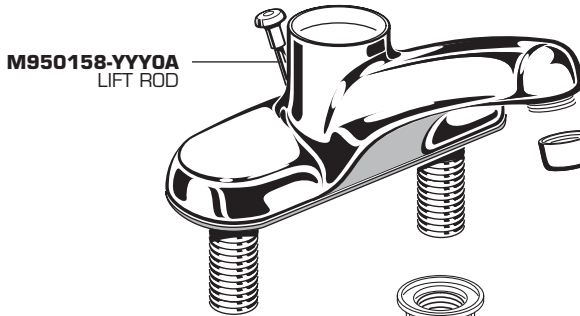

- M950158-YYY0A**  
LIFT ROD

- M922880-YYY0A**  
AERATOR




- 065800-0070A**  
ATTACHMENT NUT



- 024220-0070A**  
SUPPLY NUT

- M952425-YYY0A**  
DRAIN ASSEMBLY

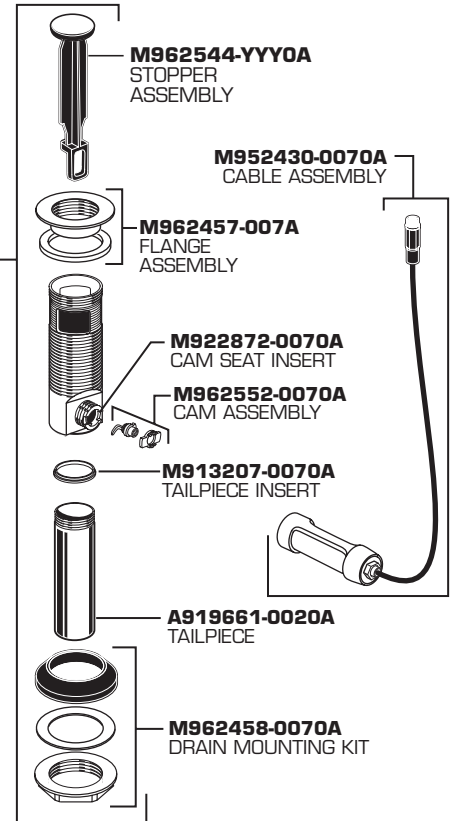

- M962544-YYY0A**  
STOPPER ASSEMBLY

- M952430-0070A**  
CABLE ASSEMBLY

- M962457-007A**  
FLANGE ASSEMBLY

- M922872-0070A**  
CAM SEAT INSERT


- M962552-0070A**  
CAM ASSEMBLY

- M913207-0070A**  
TAILPIECE INSERT

- A919661-0020A**  
TAILPIECE

- M962458-0070A**  
DRAIN MOUNTING KIT

- M919660-0020A**  
6" TAILPIECE  
(NOT INCLUDED WITH FAUCET)

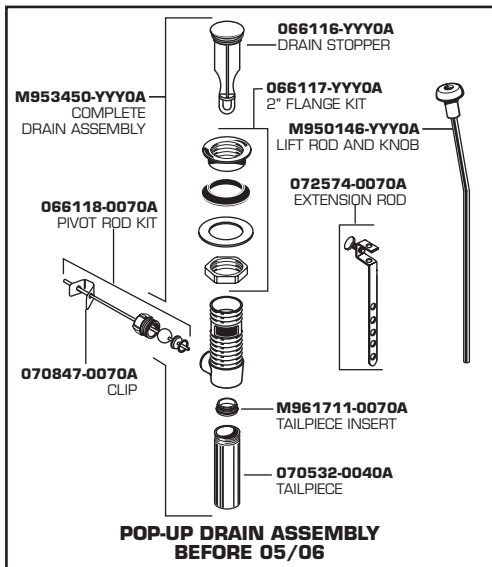

- M953450-YYY0A**  
COMPLETE DRAIN ASSEMBLY

- 066118-0070A**  
PIVOT ROD KIT

- 070847-0070A**  
CLIP

- 066116-YYY0A**  
DRAIN STOPPER

- 066117-YYY0A**  
2" FLANGE KIT

- M950146-YYY0A**  
LIFT ROD AND KNOB

- 072574-0070A**  
EXTENSION ROD

- M961711-0070A**  
TAILPIECE INSERT

- 070532-0040A**  
TAILPIECE

**POP-UP DRAIN ASSEMBLY  
BEFORE 05/06**

M968881 Rev. 1.3

**HOT LINE FOR HELP**

For toll-free information and answers to your questions, call:  
1-800-442-1902  
Weekdays 8:00 a.m. to 6:00 p.m. EST  
IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)  
Weekdays 8:00 a.m. to 7:00 p.m. EST  
IN MEXICO 01-800-839-12-00



Product names listed herein are trademarks of American Standard Inc.  
© AS America, Inc. 2008