

# PARTS & ASSEMBLY SHEET

Fixture Name: Lancaster 6005-M1L PW/RBZ/AB

Thic fixture	assembled PO:	Doto	
ITHS HXITHE	assembled PU	Date:	
TI III TIME CALC	assertible a t e t		

**Notice:** Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

PARTS LIST		Company Name:Co. Account #:			
		to be filled out by retailer			
Mounting strap (circular)		Wire connecto	ors 🤝	Deco nut	
1ea 4" x 3"		2ea P3 Orange	e	2ea 9 x 9.5mm	
Canopy		Junction box screw	(	Canopy loop (I)	
1ea 6"dia x 7/8"E		2ea 8/32" x 1"	, (	1ea 3/8 x 66mm x 5mm	
Chain		Mounting screv		Top loop (L)	
2ea 6ft x 3.8mm		2ea 8/32" x 1"		1ea 3/8 x 66mm x 5mm	
Chain connector		Hex nut		Nipple	
2ea 4 X 55mm		3ea 5/32 x 3.5m	nm 💮	1ea 3/8 x 15mm	
Spring washer		Rod	0	Rod	
15 x 3mm		3ea 1/2" x 12"		1ea 1/2" x 6"	0
Socket Ring		Socket Ring		Green Ground	
(AB only)		(PW, RBZ only)		screw	
1ea 51 x 23mm		1ea 50 x 9mm		1ea 8/32" X 10mm	
Part Needed				Quantity	
Part Needed				Quantity	
Reason why Comments	(missing, scratche	ed, broken glas	ss, bent, bad finish)		
Comments					


### FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

ASSEMBLING THE FIXTURE (Fig.1)

- 1. By measuring, determine correct number of rods and chain needed for proper hanging height. There are 2 ft of chain and 2 optional 12" rods included.
- 2. To shorten the fixture, slide the excess 12" rods off the wire.
- 3. To lengthen the fixture thread the additional rods onto the wire or substitute longer chain for the 2 ft length of included chain.

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

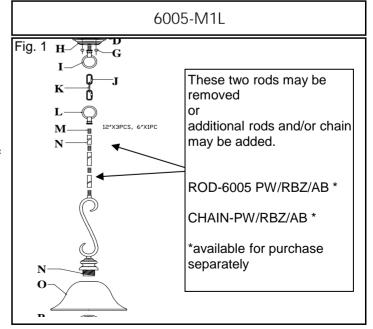

For Customer Service, contact the place of purchase to arrange for replacement parts.


# PARTS & ASSEMBLY SHEET

Fixture Name: Lancaster 6005-M1L PW/RBZ/AB

### ASSEMBLING THE FIXTURE (Fig.2)

- 4. Pull the fixture's wire through the Rods until taut.
- 5. Thread Rod (N) into frame until tight.
- 6. Thread additional Rods (N) together using the Nipple (M) between rods until tight. Repeat for any additional rods.
- 7. Feed the fixture wires through the Top Loop (L) and pull the wires until taut. Then, screw the Top loop (L) to the rod on the top of fixture until tight.
- 8. By measuring, determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (K) then remove the excess Chain (K) and discard it.
- 9. Use a chain connector (J) to attach one end of the chain to the Top Loop (L). Close the chain connector.
- 10. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 11. Slip Canopy (H) over the chain.
- 12. When ready to complete the installation, use remaining chain connector to attach the loose end of chain to the Canopy Loop (I). Close the chain connector.
- 13. Make sure the weight of the chandelier will be supported by the chain not the electrical wire.
- \* You may now install the fixture.
- 14. Place the glass shade (O) over the threaded socket (N).
  Secure by threading the Socket Ring (Q) over the socket washer (P) until tight.
- 15. Install the light bulb in accordance with the fixture's specifications.

(DO NOT EXCEED MAXIMUM WATTAGE RATING!)

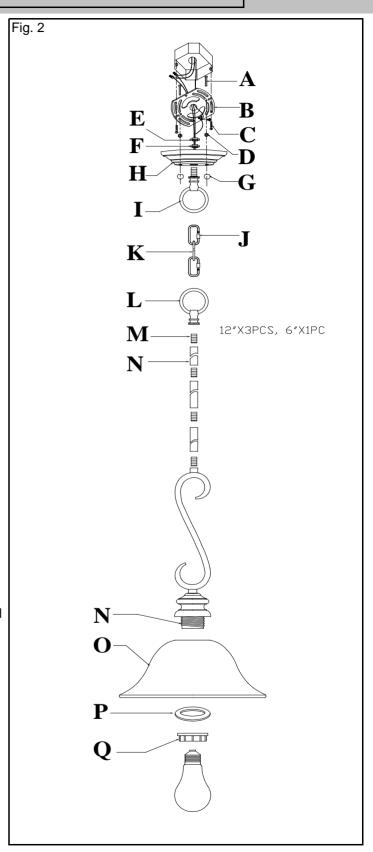

For Customer Service, contact the place of purchase to arrange for replacement parts.



## INSTALLATION INSTRUCTIONS

Fixture Name: Lancaster 6005-M1L PW/RBZ/AB

For Pendant Light Fixture

### WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

### HANGING THE FIXTURE (Fig. 1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all your parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off power at the circuit breaker and remove the old fixture from ceiling, including the old mounting strap.
- 3. The Mounting Strap (B) contains several pairs of threaded holes. Find the pair of holes that matches the hole spacing in your Canopy (H) and thread the two Mounting Screws (A) halfway into the Mounting Strap (B).
- 4. Place the Mounting Strap (B) over the Junction Box so the Mounting Screws (A) are vertical.
- 5. Attach the Mounting Strap (B) to the Junction Box by using the two mounting screws (C). Tighten the screws with a screwdriver.
- 6. Secure Canopy Loop (I) to the Canopy (H) with two hexnuts (E), tightening until locked.
- !! Before connecting the wires, See reverse side for fixture assembly!!

#### **CONNECTING THE WIRES** (Fig. 2)

- 7. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED). NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
- 8. Attach the GROUND wire (GREEN or COPPER) from the junction box and the fixture ground wire to the green ground screw on the mMounting Bracket (B). Or, connect both wires together using a wire connector.
- 9. Tuck these wire connections neatly into the Junction Box.

#### FINISHING THE INSALLATION (Fig. 3)

- 10. Place the fixture's Canopy (H) over the Mounting Strap (B) and over the Mounting Screws (A). Adjust the fixture Canopy until the Mounting Screws (A) protrude out from the Canopy (H) and secure the fixture against the ceiling by threading the decorative nuts on (G) until tight.
- 11. Install the light bulbs and glass shade according to the fixture assembly sheet.

YOUR INSTALLATION IS NOW COMPLETE. RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.

