


- Place decorative metal trim up against edge of glass as illustrated.
- Align holes in decorative metal trim with holes in glass.
- From outside of glass, slip screws through holes in trim and glass.
- Pass rubber washers over ends of screws and thread finials onto end of screws. (DO NOT over tighten.)
- Pass bottom end of arm through hole in top of decorative trim.
- Screw ball knob onto end of arm to secure glass to arm. (DO NOT over tighten.)
- Screw center stem(s) onto top of fixture body.
- Turn off power.
- Install canopy mounting screws, finger tight.
- Apply thread locking compound to threaded pipe from parts bag approximately 1/2" into stem.
- Slip canopy then mounting strap over stem(s) assembled to fixture.
- Apply thread locking compound to threads in ball swivel. Secure in place by threading a hexnut onto threaded pipe inside ball. threaded pipe inside ball.
- Lift mounting strap up against ball swivel, aligning slot in ball with tab in strap. Snap ball retainer into place. Placing one side of ball retainer in place and then snapping the other in is suggested.
- Attach assembled fixture/mounting strap to outlet box. Assemble mounting strap to ceiling with ball slot and tab towards lower portion of slope in ceiling. (REF: Illustration A)
- Attach ground wire from outlet box between cupped washer and green ground screw and thread ground screw into mounting strap. If fixture is provided with ground wire, connect fixture ground wire to outlet box ground wire with wire connectors (not provided). Never connect ground wire to black or white power supply wire.

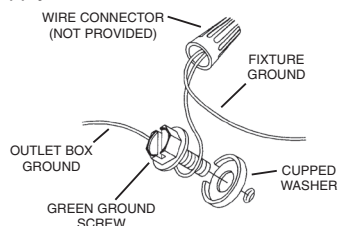

- Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.



Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

\*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

- Carefully slip canopy up stem and secure to ceiling using lockwashers (Canadian installations only) and ball knobs.

**NOTE:** Thread locking compound must be applied to all stem threads as noted with symbol ( ▶ ) to prevent accidental rotation of fixture during cleaning, relamping, etc.

- Ponga la guarnición decorativa de metal arriba contra el borde del vidrio como se ilustra.
- Alinee los agujeros de la placa decorativa de metal con los agujeros en el vidrio.
- Desde fuera del vidrio, resbale los tornillos a través de los agujeros en la guarnición y en el vidrio.
- Pase las arandelas de caucho encima de los extremos de los tornillos y atornille los capuchones al extremo de los tornillos (NO apriete excesivamente).
- Pase el extremo inferior del brazo a través del agujero en la parte superior de la guarnición decorativa.
- Atornille la perilla redonda al extremo del brazo para sujetar el vidrio al brazo. (NO apriete excesivamente.)
- Atornille el (los) vástago(s) central(es) en la parte superior del cuerpo del artefacto.
- Apague la alimentación eléctrica.
- Instalar los tornillos de montaje del escudete, apretando con los dedos.
- Aplique un compuesto para el sellado de roscas (suministrado en la bolsa de las partes) al tubo roscado aproximadamente 1/2" dentro de la varilla.
- Deslizar el escudete y luego la abrazadera de montaje sobre el (los) vástago(s) montados al artefacto.
- Aplique el compuesto para sellar las roscas, a las roscas de la bola de giro. Fije en su lugar colocando y atornillando una tuerca hexagonal en el tubo roscado dentro de la esfera.
- Levantar la abrazadera de montaje contra el pivote a rótula, alineando la muesca en la rótula con la orejeta en la abrazadera. Instalar rápido el retenedor redondo en su lugar. Se sugiere colocar un lado del retenedor redondo en el lugar y luego enganchar el otro.
- Acoplar la abrazadera de montaje/artefacto ensamblados a la caja de salida. Montar la abrazadera de montaje al cielorraso con la muesca y orejeta hacia la porción más baja de la inclinación del cielorraso. (Ref: Ilustración A)
- Acoplar el alambre de tierra de la caja de salida entre la arandela cóncava y el tornillo de tierra verde, y roscar el tornillo de tierra en la abrazadera de montaje. Si el artefacto está provisto con un alambre de tierra, conectar el alambre de tierra del artefacto al alambre de tierra de la caja de salida, con los conectores de alambre (no se proveen). Nunca se debe conectar el alambre de tierra al alambre de alimentación negro o blanco.

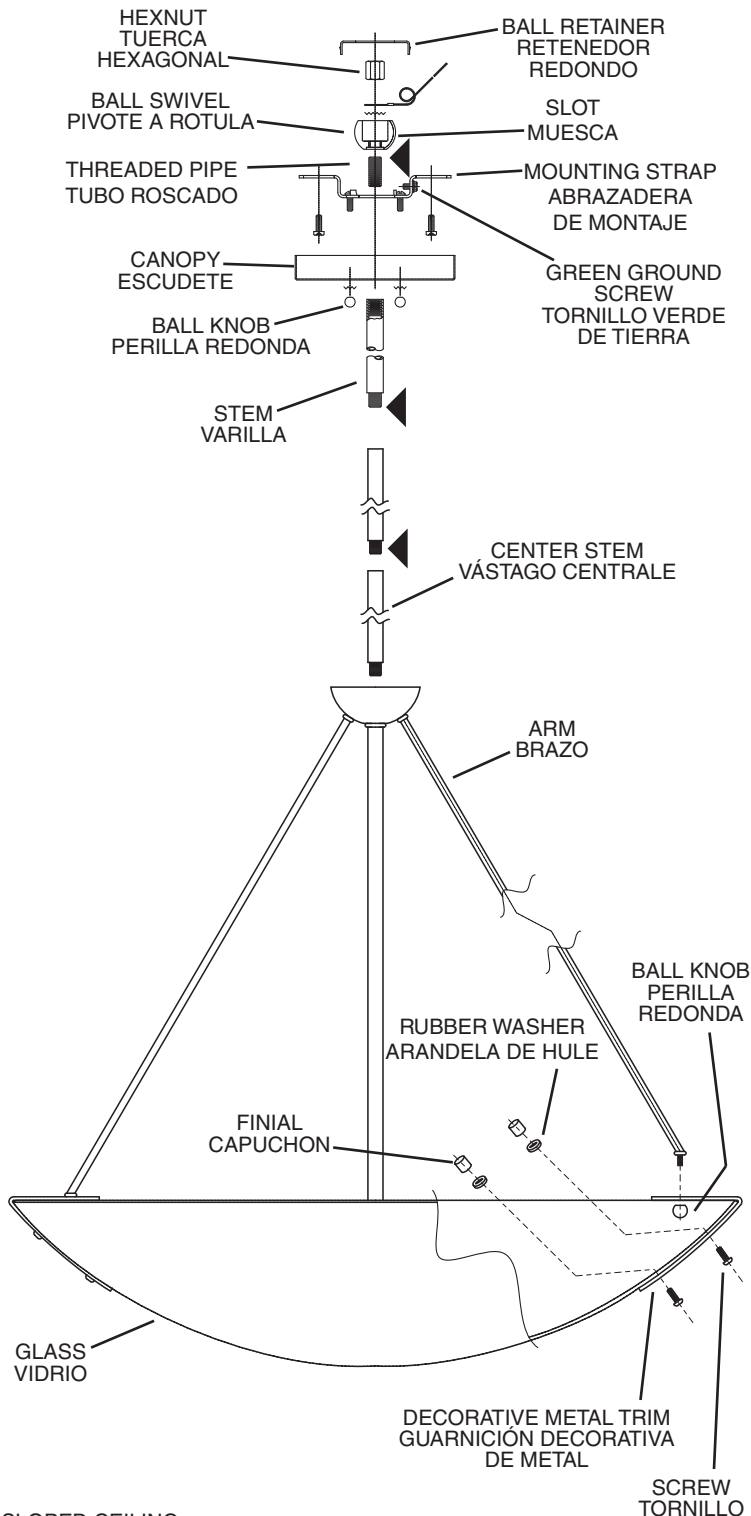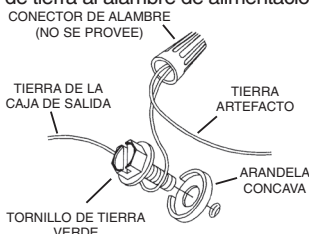

**ILLUSTRATION A**

- Hacer las conexiones de los alambres (conectores no incluidos.) Ver el cuadro más abajo para las conexiones correctas y alambrear de acuerdo a esto.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

\*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

- Cuidadosamente deslizar el escudete arriba en el vástago y asegurar al cielorraso usando las arandelas de seguridad (Sólo en instalaciones canadienses) y las perillas redondas.

**NOTA:** Debe aplicarse un compuesto para el sellado de roscas en todas las roscas de las varillas indicadas con el símbolo ( ▶ ) para evitar la rotación accidental del artefacto durante su limpieza, cambio de bombillas, etc...