


RIGGED STEM MOUNT

- 1) Pass wire from fixture through center stems and screw center stems to couplings on top of fixture body.
NOTE: Thread locking compound must be applied to all stem threads as noted with symbol (◄) to prevent accidental rotation of fixture during cleaning, relamping, etc.
- 2) Lower top trim over center stems passing holes in top trim over ends of center stems.
- 3) Pass fixture wire through remaining stems and screw stems to top of center stems.
- 4) Lower canopy down over top of stems passing holes in canopy over ends of stems.
- 5) Thread lockwashers then hexnuts onto ends of stems. Tighten hexnuts to secure canopy to fixture.
- 6) Turn off power.
- 7) Attach mounting strap to outlet box. (Screws not provided.)
- 8) Thread hexnut onto threaded pipe so that 5 threads are exposed above hexnut. Thread that end of the threaded pipe into mounting strap and tighten hexnut against mounting strap.
- 9) Grounding instructions: (See Illus. A or B).
A) On fixtures where mounting strap is provided with a hole and two raised dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.
B) On fixtures where a cupped washer is provided. Attach ground wire from outlet box under cupped washer and green ground screw, and thread into mounting strap.


If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector (not provided.) after following the above steps. Never connect ground wire to black or white power supply wires.

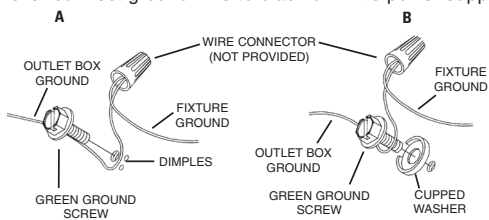

- 10) Make wire connections (connectors not provided). Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor


*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)



- 11) Push fixture to ceiling, carefully passing threaded pipe through hole.
- 12) Secure fixture to ceiling with finial.
- 13) Raise bottom trim up to fixture passing holes in bottom trim over threaded pipes on bottom of fixture body.
- 14) Screw finials onto ends of threaded pipes.
- 15) Lower shades down over harps passing threaded stud on top of harp through hole in top of shade.
- 16) Screw finials onto threaded studs to secure shades in place.

LOOP/CHAIN LINK MOUNT


- 1) Follow steps 1, 2 and 3 from Stem Mount Instructions.
- 2) Screw threaded pipe into end of each stem.
- 3) Screw loops onto end of each threaded pipe.
- 4) Add one chain link to each loop and add second loop to each chain link.
- 5) Screw threaded pipe into end of each loop.
- 6) Pass each threaded pipe on loops through holes in canopy.
- 7) Slip one lockwasher over end of each threaded pipe and screw one hexnut onto threaded pipes.
- 8) Follow steps 6 - 16 from Stem Mount Instructions.

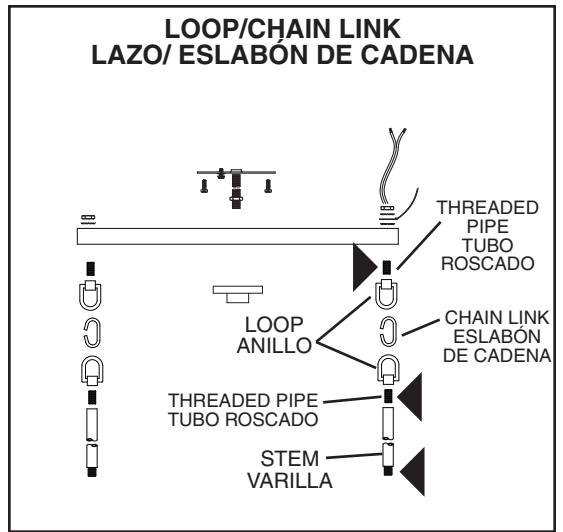

MONTAJE DEL VÁSTAGO NERVADO

- 1) Pase el alambre del artefacto a través de los vástagos centrales y atornille los vástagos centrales a los acoplamientos arriba del cuerpo del artefacto.
NOTA: Se debe aplicar compuesto para rosca estanca a todas las roscas de los vástagos como se nota con el símbolo (◄) para impedir la rotación accidental del artefacto durante la limpieza, cambio de bombilla, etc.
- 2) Baje la guarnición superior encima de los vástagos centrales pasando los agujeros en la guarnición superior encima de los extremos de los vástagos centrales.
- 3) Pase el alambre del artefacto a través de los vástagos restantes y atornille los vástagos a la parte superior de los vástagos centrales.
- 4) Baje el escudete encima de la parte superior de los vástagos pasando los agujeros en el escudete encima de los extremos de los vástagos.
- 5) Rosque las arandelas de seguridad, luego las tuercas hexagonales en los extremos de los vástagos. Apriete las tuercas hexagonales para sujetar el escudete al artefacto.
- 6) Desconecte la corriente.
- 7) Una la barra de montaje a la caja de salida. (no se suministran los tornillos).
- 8) Enrosque la tuerca hexagonal en el tubo roscado de tal forma que 5 roscas esté expuestas sobre la tuerca hexagonal. Enrosque ese extremo del tubo roscado en la barra de montaje y apriete la tuerca hexagonal contra la barra de montaje.
- 9) Instrucciones de conectar a tierra (Vea la ilustración A o B).
A) En artefactos provistos de abrazadera de montaje con un agujero y dos depresiones onduladas. Arrolle el alambre de tierra de la caja de salida alrededor del tornillo de tierra, verde y rosque en el agujero.
B) En artefactos donde se provee una arandela cóncava. Una el alambre de tierra desde la caja de salida, debajo de la arandela cóncava, y el tornillo de tierra, verde y rosque en la abrazadera de montaje.


Si el artefacto está provisto de alambre de tierra. Conecte el alambre de tierra del artefacto al alambre de tierra de la caja de salida con el conector de alambre (No se provee). Después de seguir los pasos de arriba, nunca conecte el alambre de tierra a los alambres de alimentación de corriente negro o blanco.

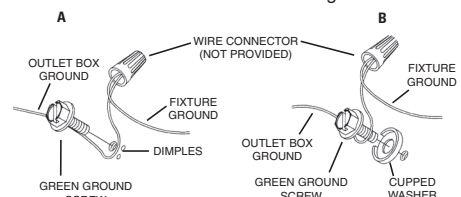

- 10) Haga las conexiones de alambres (no se provee conectores). Vea el cuadro de referencia de abajo con las conexiones correctas y alambres correspondientes.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)



- 11) Empuje el artefacto contra el techo, pasando cuidadosamente el tubo roscado a través del orificio.
- 12) Fije el artefacto al techo usando el capuchon.
- 13) Levante la guarnición inferior hasta el artefacto pasando los agujeros en la guarnición inferior encima de los tubos roscados, en la parte inferior del cuerpo del artefacto.
- 14) Atornille los capuchones en los extremos de los tubos roscados.
- 15) Pase cada tubo roscado en los lazos a través de los agujeros en el escudete.
- 16) Atornille los capuchones en los vástagos roscados para sujetar las pantallas en el lugar.

MONTAJE DE LAZO/ESLABÓN DE CADENA

- 1) Siga los pasos 1, 2 y 3 de las Instrucciones de montaje del vástago.
- 2) Atornille el tubo roscado en el extremo de cada vástago.
- 3) Atornille los lazos en el extremo de cada tubo roscado.
- 4) Agregue un eslabón de cadena a cada lazo y agregue un segundo lazo a cada eslabón de cadena.
- 5) Atornille el tubo roscado en el extremo de cada lazo.
- 6) Pase cada tubo roscado en los lazos a través de los agujeros en el escudete.
- 7) Resbale una arandela de seguridad encima de cada tubo roscado y atornille una tuerca hexagonal en los tubos roscados.
- 8) Siga los pasos 6 al 16 de las Instrucciones de montaje del vástago.