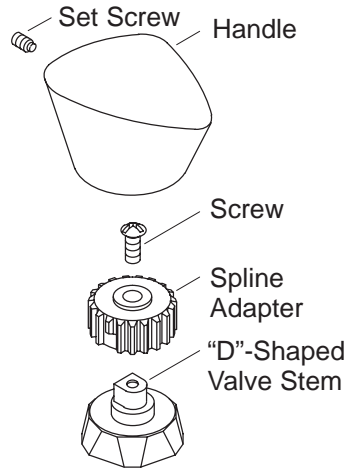


INSTALLATION INSTRUCTIONS

TO INSTALL HANDLE:

1. **See Fig. #1.** Close valves. Position "D"-shaped hole in spline adapter over "D"-shaped end of valve stem and secure with screw.
2. Position handle over spline adapter so set screw hole aligns with flat on spline adapter.
3. Secure handle to spline adapter with set screw.

**Fig. #1**