
Assembly Instructions For

F2406/6+3 (E) 11/08

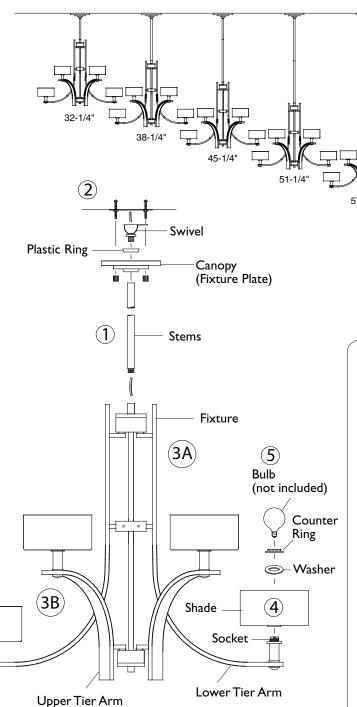

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

- I. Install stems:
 - A. Choose desired installation height from dimensions shown in above diagram. Thread fixture wires through each stems to be used. Note correct position of stems from left diagram. Screw all stem together until secure.
 - B. Install bottom end of stem assembly by screwing into top of fixture.
 - C. Thread fixture wires through canopy, plastic ring and then swivel. Allow canopy to carefully slide down without scraping the surface of stems. Then install swivel by screwing onto top end of stem assembly.
- Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
- 3. A. Rotate lower tier arms so they are equally spaced apart from each other. IMPORTANT: Make certain to lift arms slightly when turning in order not to scrape middle center body surface. When lower tier arms are correctly rotated, pin located at rear of arms must locate into hole in the center body.
 - B. Rotate upper tier arms so they are equally spaced apart from each other.
- Install glass shade onto fitters by fastening with washer and counter ring onto threaded sockets.
- 5. Install bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.

