

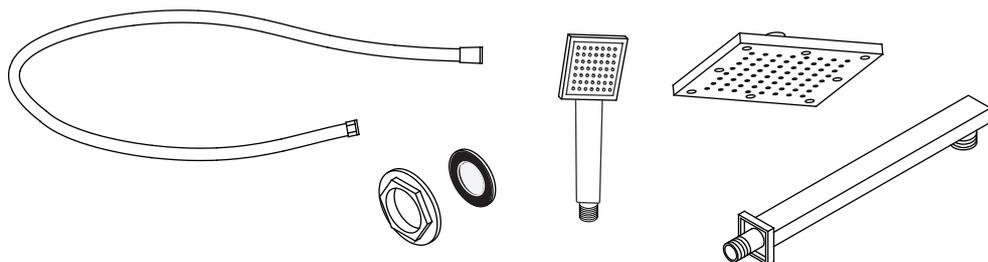


Parts List

Please unpack and inspect all packages and components carefully, make sure they are complete. Examine for shipping damage. If some parts are damaged or missing, notify your dealer immediately.




For Installation You may Require

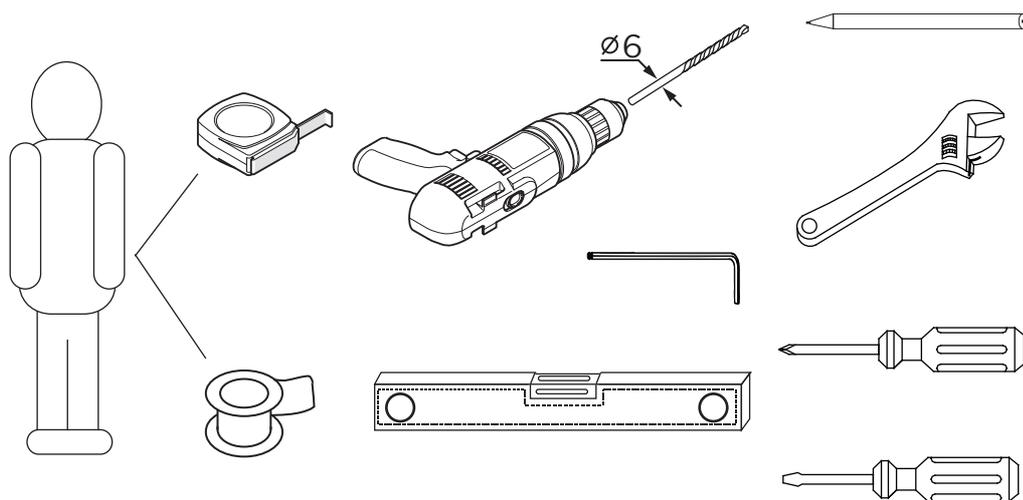

Note!

Before assembly, flush the water supply pipes thoroughly to remove debris (allow the water to run with the main stopcock open for about 3 mins), otherwise dirt particles might affect the function of the shower panel!

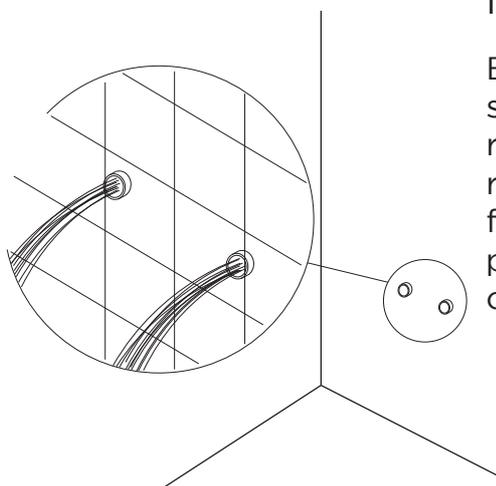

Back View

UPPER HANGING BRACKET


LOWER HANGING BRACKET

48" Recommended height

Cold inlet


Hot inlet

Measure the distance from the upper fixing hanger to the lower fixing hanger. The dimensions are for your reference only.

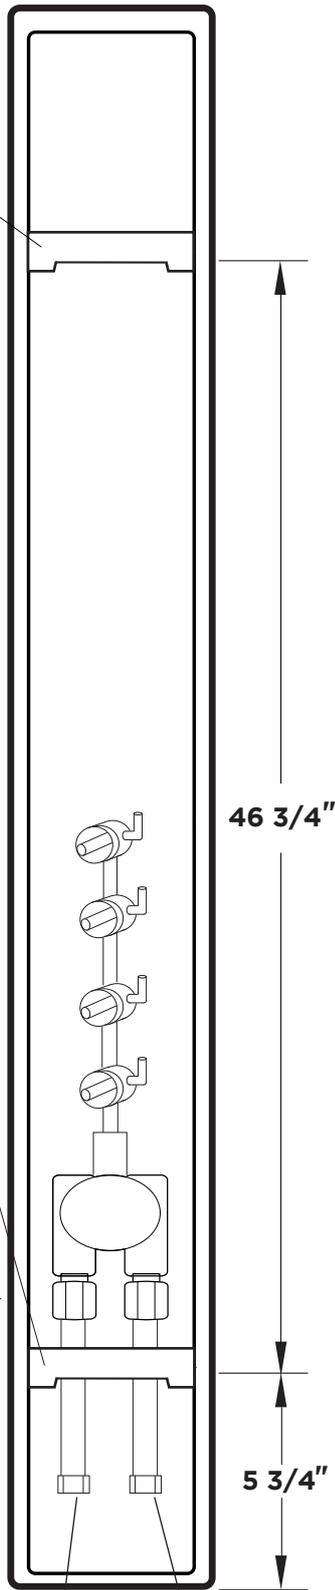


Dimensions

Choose a suitable place to install the shower panel, adjust the shower panel's vertical position based on the user's height and your sanitary room. Usually, install the panels at the distance of $82 \frac{3}{5}$ " from the top to the ground, but you can assemble according to your instance.

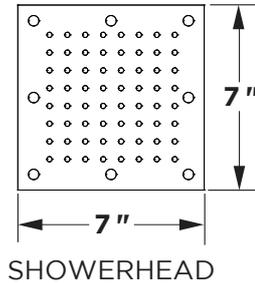

MASSAGE JET

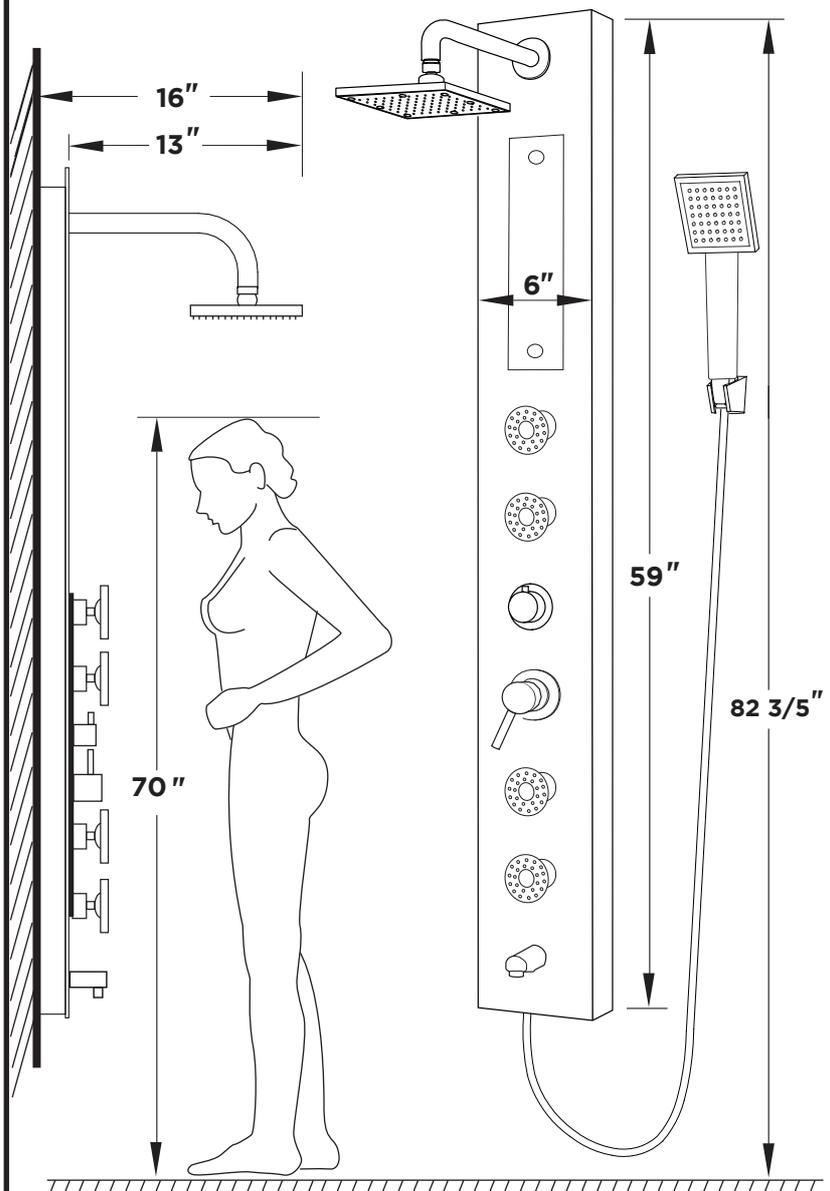




Note! The height can be altered to suit individual requirements. The dimensions are for reference only.

Note! Most of "Fresca" shower panels not only can be mounted on the tile, marble or other flat wall, but also can be mounted against the wall corner.


Your item may appear slightly different from the illustration

Wall-mounting

Note! Before drilling any holes for fixing your shower panel ensure that there are no hidden cables or pipework within the wall.

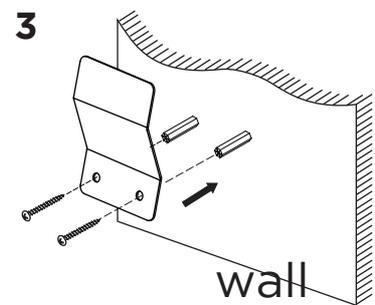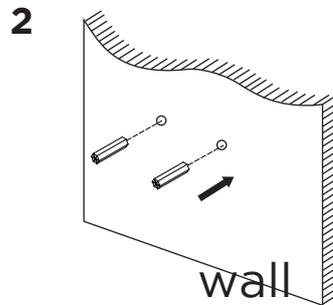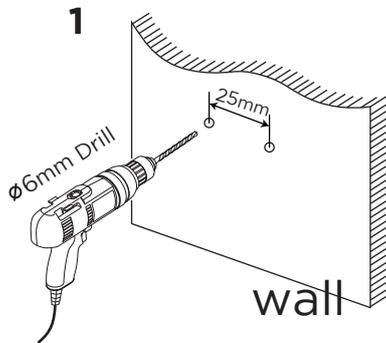


Hang the shower panel on the mounting bracket


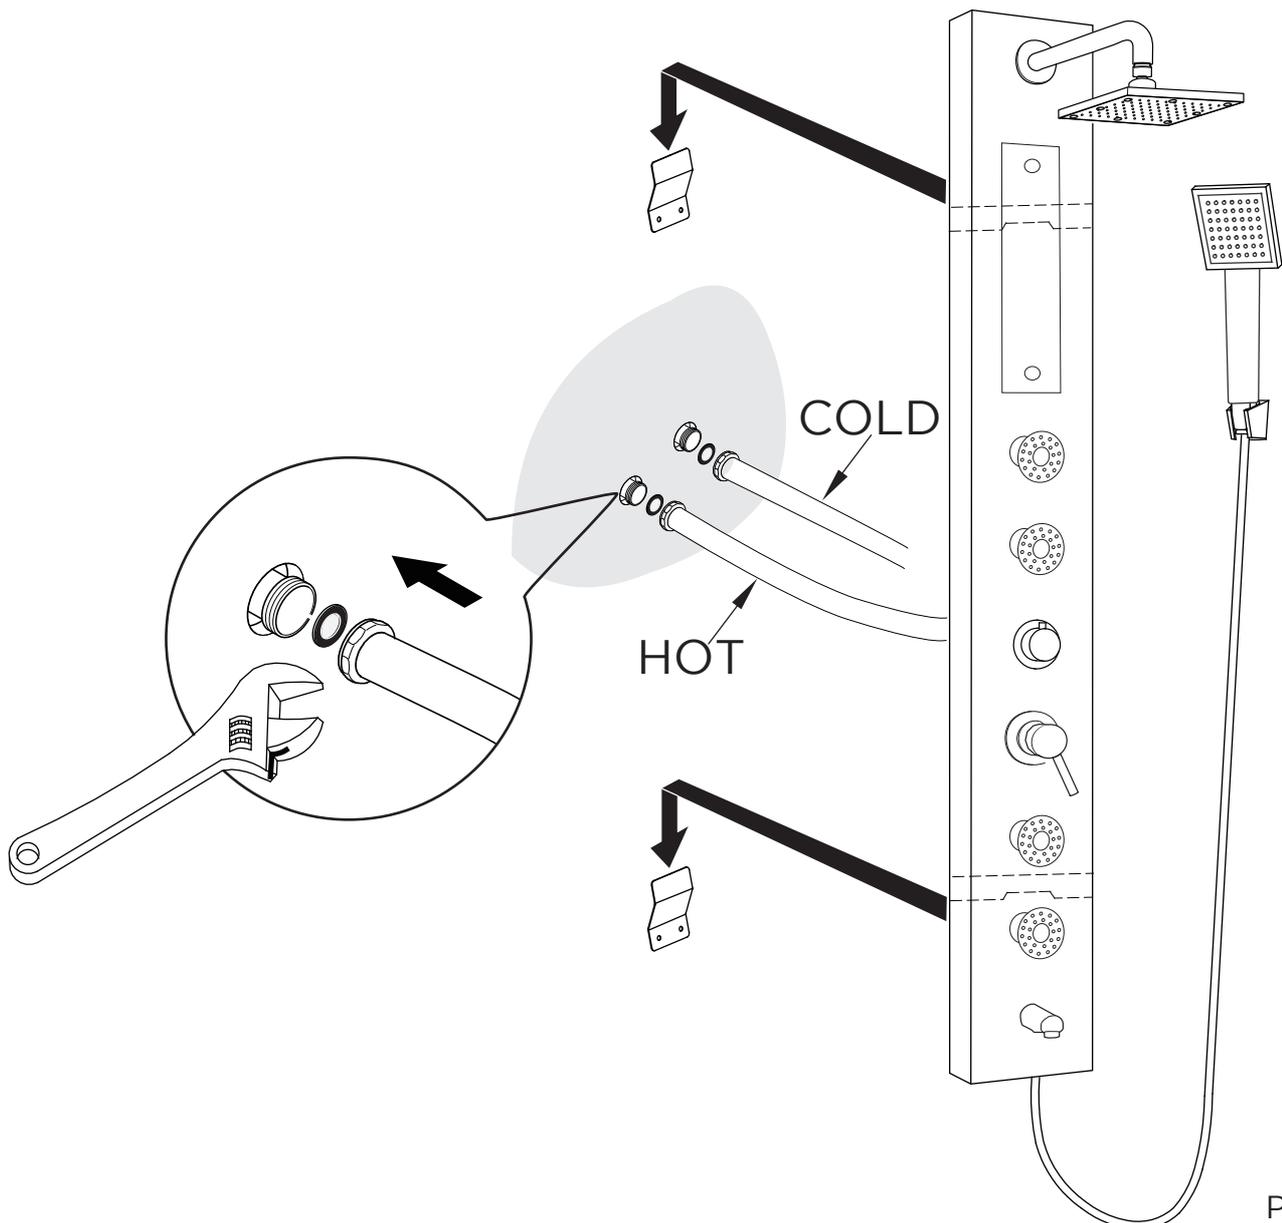


Note! For corner mounting you should need the corner mounting bracket


Corner mounting accessory

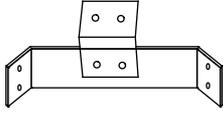


Corner mounting accessory

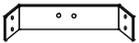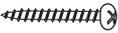-  2 x corner bracket
-  4 x bolt
-  4 x nut
-  4 x wall plug
-  4 x side screw
-  2 x wall bracket


1 Mark the corner bracket position through pencil

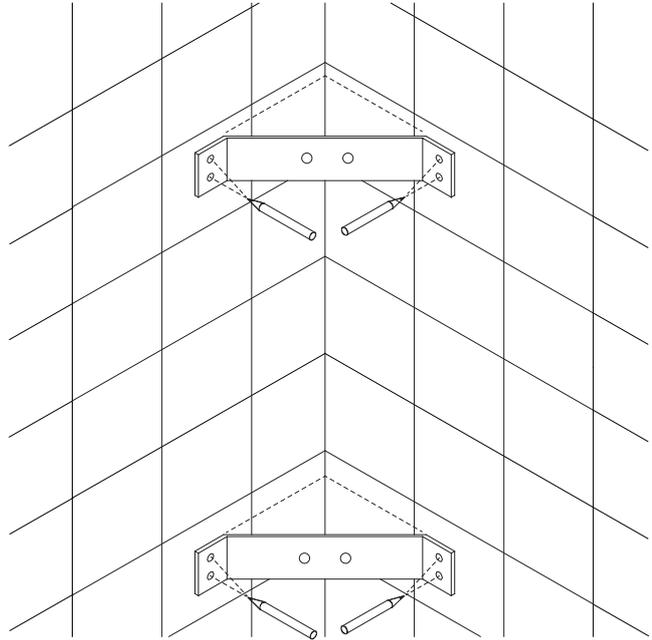


2 Drill the holes in the wall

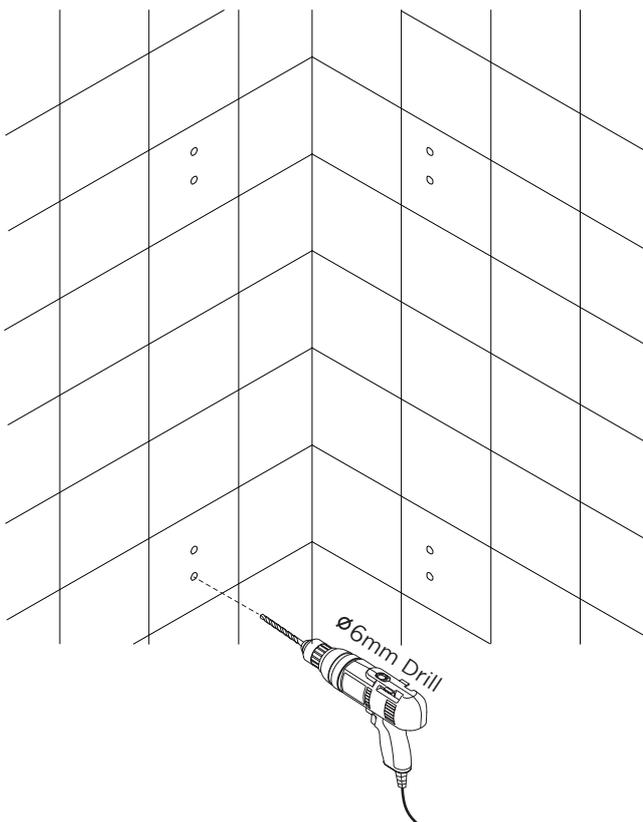


3 Insert the wall plugs inside the holes

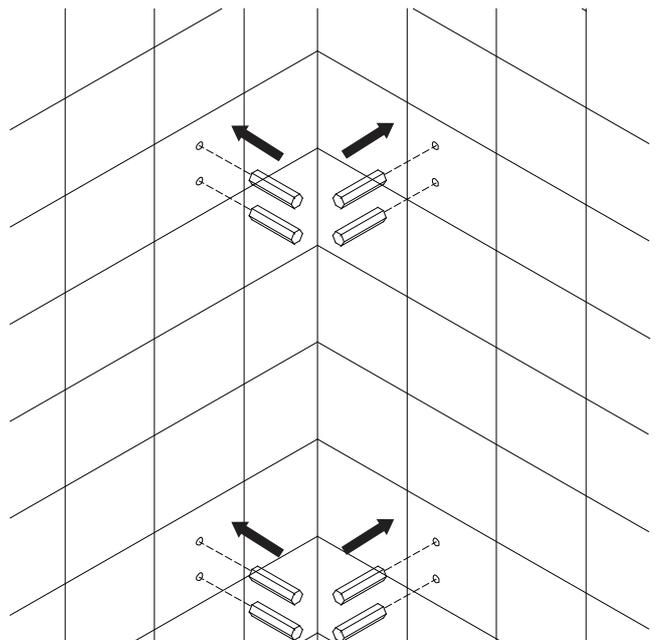


4 Tighten the screws to the wall with corner brackets

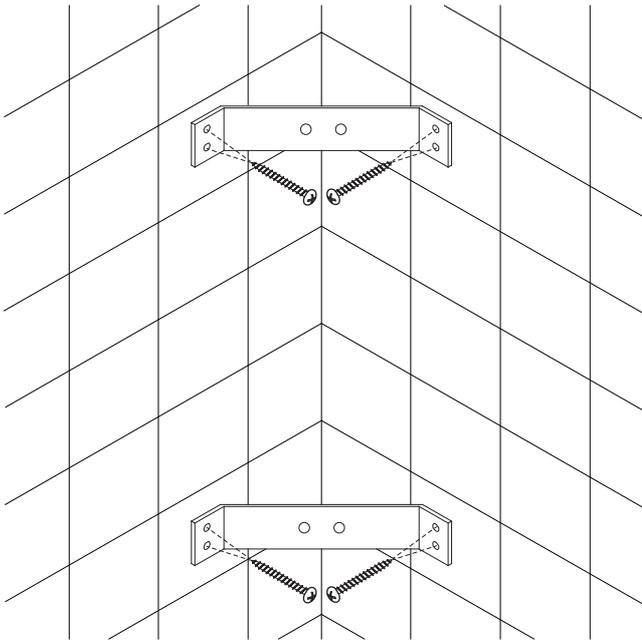

5 Fix the mounting brackets to the corner brackets



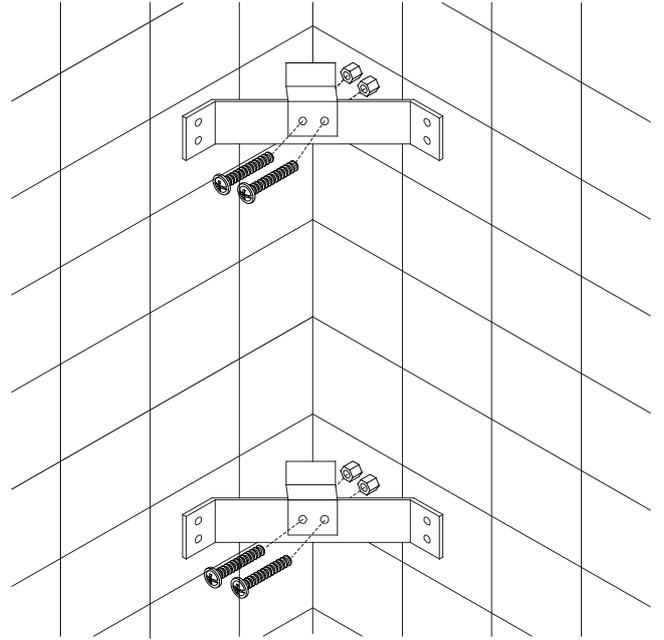


Hang the shower panel on the mounting bracket

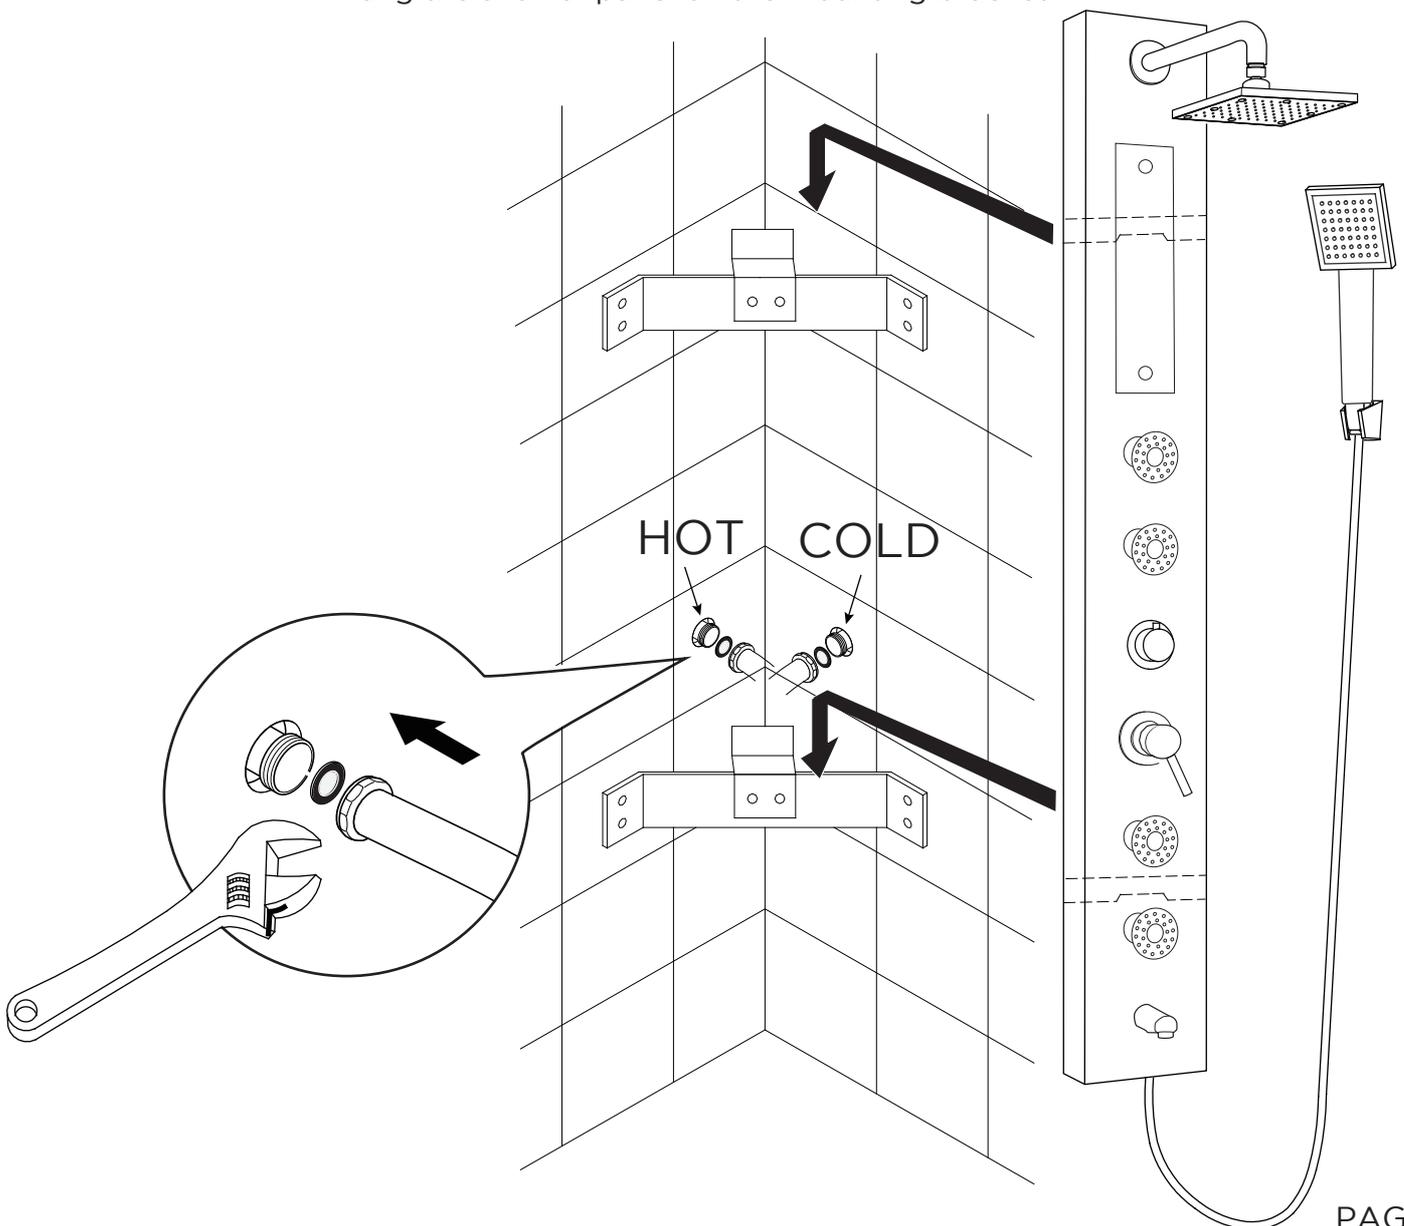


Note! The shower panel is for indoors use only. For outdoors use please refer to the "Fresca" outdoors shower panel series.

Don't forget to place the rubber washer when it is necessary. It will avoid water leakage.

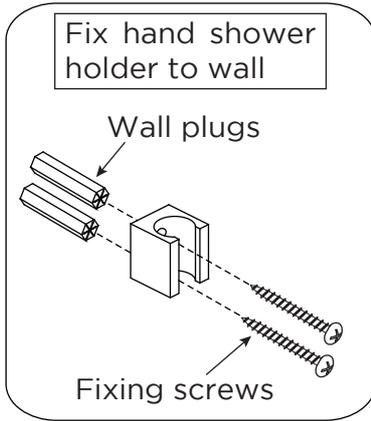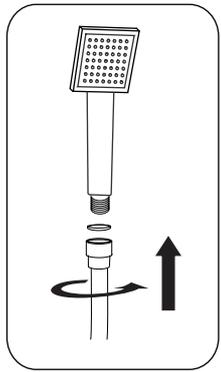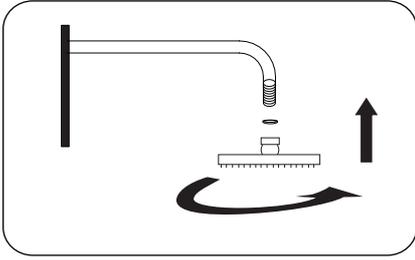



hand shower

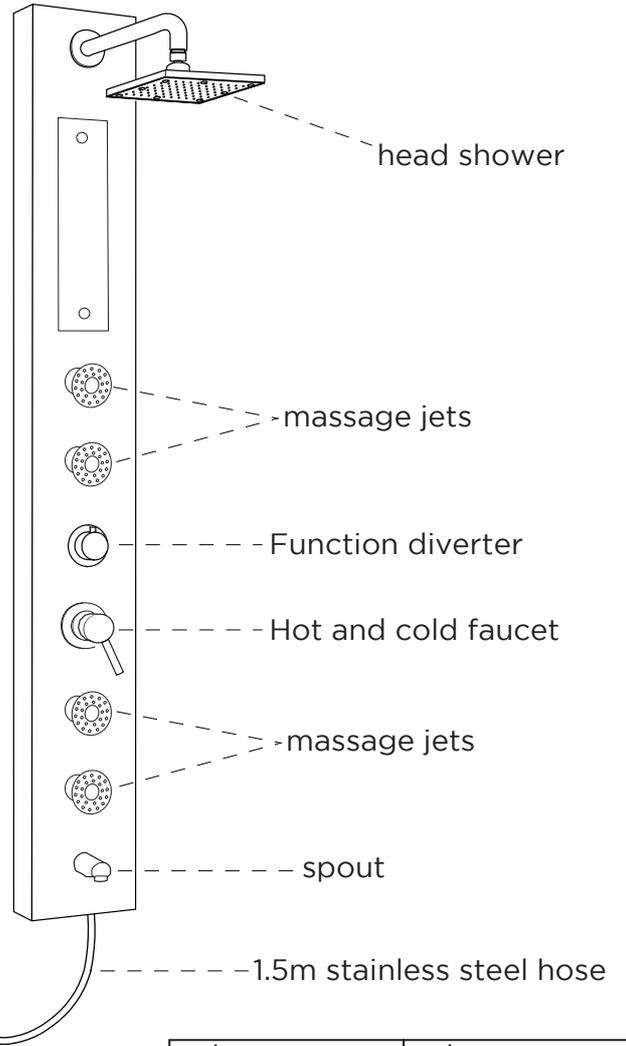

Operation


Technical data

- Minimum working pressure 11.6 PSI
- Maximum working pressure 72.5 PSI
- Recommended operating pressure 21.75 PSI - 43.5 PSI
- Test pressure 145 PSI
- Temperature scale 86°F-122°F
- Hot water temperature Max. 158°F

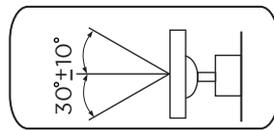


Select the shower function required and adjust the flow-rate by rotating the control knobs.

Select the temperature

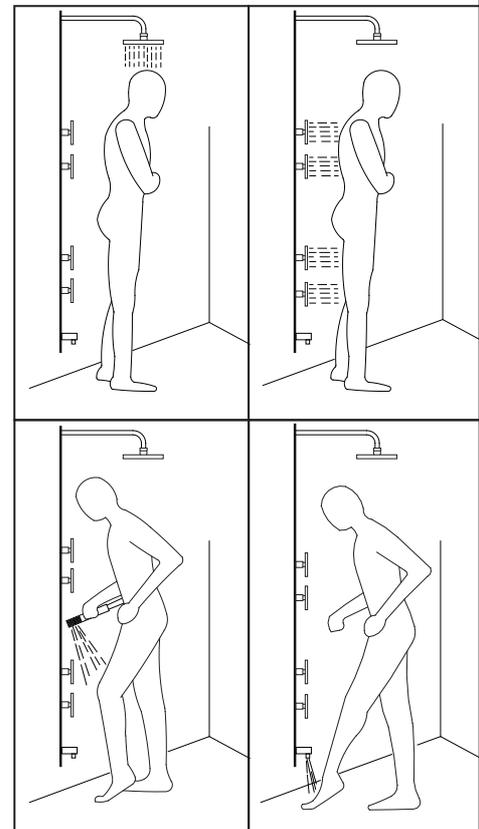


Mixing Valve Removal Instructions


1 Take off cap

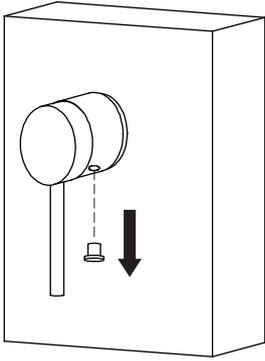


2 Loosen HEX screw off with allen wrench

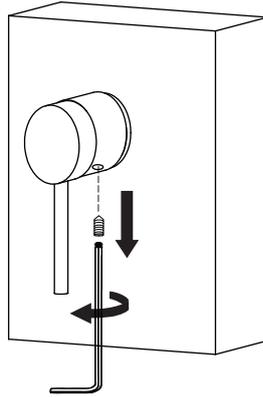


3 Take off head

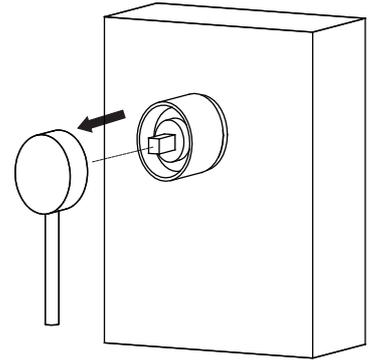

4 Take off the stainless steel ring

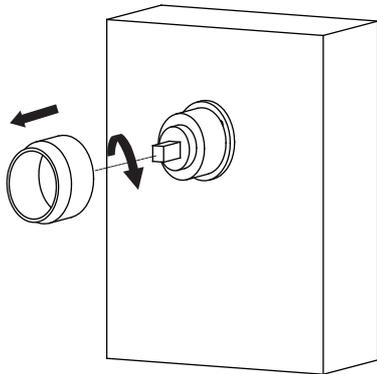


5 Pull out the valve ring

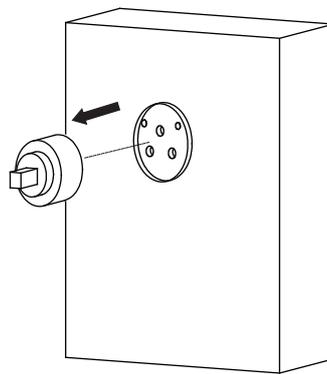


Mixing Valve Installation Process


1 Place valve in place

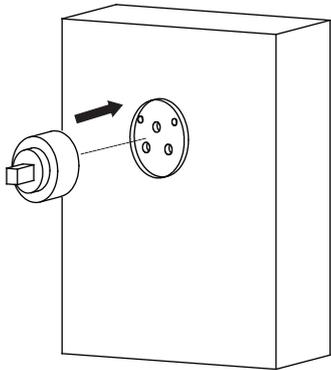


2 Put on the stainless steel ring

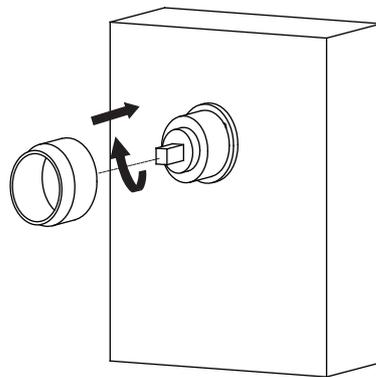

3 Put head in place

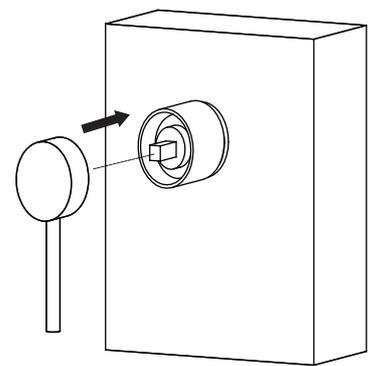

4 Use allen wrench to fix the HEX screw tightly

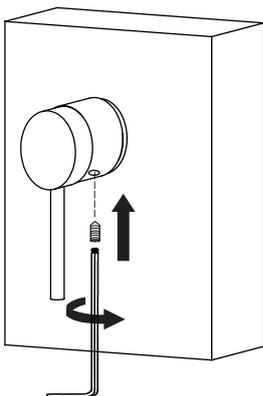

5 Put on cap

