




Track Assembly

- Attach track A1 to T Connector on one end and 90° Connector on the other end.
- Take two D track pieces and attach to both connectors. Refer to Diagram 2
- Slide a T Connector into track D1, attach Cross Connector to track D2. Attach track A2 between both connectors. Refer to Diagram 3
- Attach straight track D3 to T Connector, attaching a 90° Connector to the other end. Track D4 needs to be attached to Cross Connector and a T Connector attached to the other side. Refer to Diagram 4
- Track A3 needs to be attached between the T Connector and 90° Connector.
- Repeat steps for section B and C to complete track assembly.
- For Cord Suspension and Canopy Power Feed placement refer to Diagram 1.

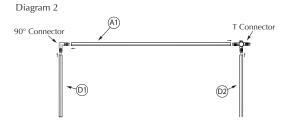

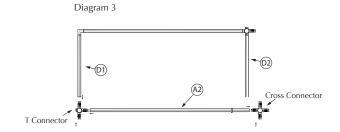

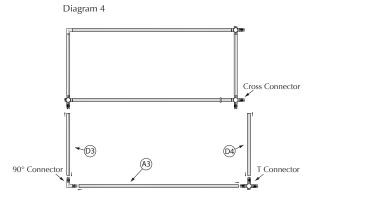


BRUCK LIGHTING SYSTEMS www.brucklighting.com

For more assistance with technical questions please call our 15774 Gateway Circle Tustin, CA. 92780 technical support staff at (714) 259-9959. You can also contact us by email at info@brucklightingsystems.com.

 \triangle



V/A WAVE

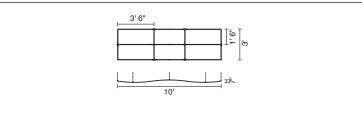

IMPORTANT SAFTEY INSTRUCTIONS

- Read all of these installation Instructions before installing the track system.
- Save these instructions and refer to them when additions to or changes in the track configuration are made.
- THIS PRODUCT MUST BE INSTALLED BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED, IN ACCORDANCE WITH LOCAL NEC CODE.
- FOR USE WITH V/A NETWORK ONLY.
- Do not install the track or any part which contains exposed wires less then 7 feet from the floor.
- Do not install this rail in damp or wet locations.
- Do not install fixture assembly closer than 6 inches from any curtain, or similar combustible material.
- 8. Disconnect electrical power before adding to or changing the configuration of the
- 9. Do not attempt to energize anything other than lighting rail fixtures on the rail. To reduce the risk of fire and electrical shock, do not attempt to connect power tools, extension cords, appliances, and the like to the rail.
- 10. This track system MUST BE HARD WIRED. For all the wire connections, use
- 11. Secondary connections must be clean and tight to avoid arcing and overheating!
- 12. Warranty is void in case of unauthorized modifications and/ or improper use.

READ ALL OF THESE INSTRUCTIONS BEFORE INSTALLATION

V/A WAVE PART NUMBERS

160 153bz bronze 160 153ch chrome 160 153 m c matte chrome

CONTENTS OF DELIVERY

Num. of Pieces	Piece Describtion
4	3 ' 6" Factory Curved V/A Track Sections (A & C)
2	3 ' 6" Factory Curved V/A Track ISO Sections (A & C)
3	2 ' 11" Factory Curved V/A Track ISO Sections (B)
8	1' 3 1/2" Straight V/A Track Sections (D)

ONTENTS	OF DELIVERY
Num. of Pieces	Piece Describtion
4	Horizontal Angel Connector 90°
	160 406
2	Horizontal Cross Connector
6	Horizontal T-Connector
	160 414
5	Isolation Connectors
	160 409
8	Cord Suspension Clips 160 600
2	Canopy Power Feeds 160 306
30′	Power Supply Cable
1	T-600/120V Transformer
1	I-600/120V Transformer