
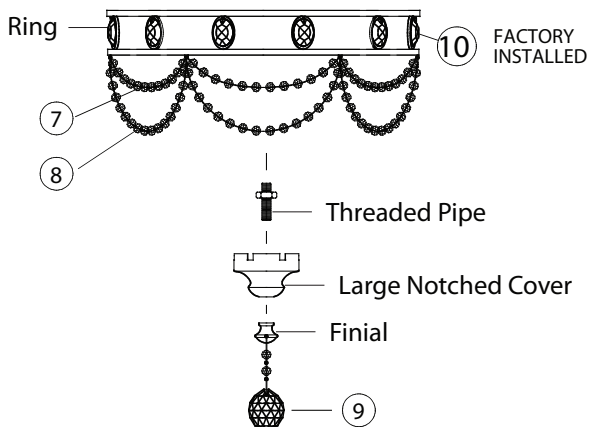
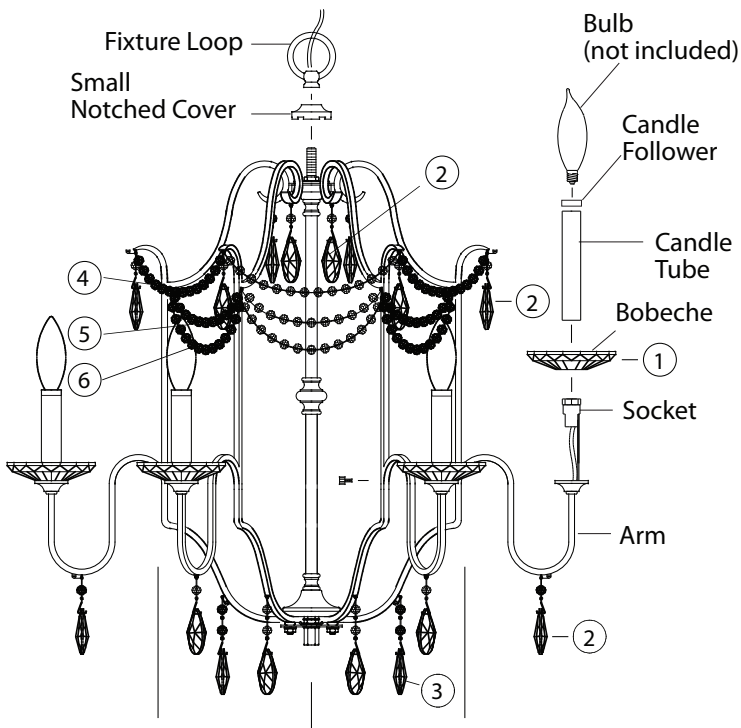


Assembly Instructions For

F2475/6 (E) 11/20

	①	②	③	④ 14 bead	⑤ 11 bead	⑥ 13 bead	⑦ 12 bead	⑧ 16 bead	⑨	⑩
Required	X7	X18	X6	X6	X6	X6	X6	X6	X1	
Extra	1	4	1					1	1	X3

Extra PIN Qty.	PIN PART	PIN DESCRIPTION
12	⌘	Small S Hook
12	⌘	Large S Hook
24	⌘	Small Bead Hook

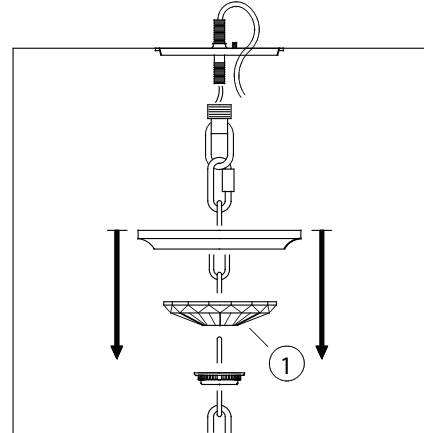

IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

- Turn arms so they are equally spaced apart from each other.
- A. Slip small notched cover and fixture loop through fixture wires.
B. Install the small notched cover on top of fixture, making certain arms are locked onto its notches, by fastening with fixture loop.
- Install ring onto fixture by fastening with thumb screws from behind of arms.
- Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
IMPORTANT: WHEN FOLLOWING SUPPLEMENT INSTRUCTIONS STEP #6, MAKE CERTAIN TO SLIDE CRYSTAL BOBECHES (IN BETWEEN COLLAR RING AND CANOPY) DOWN THE CHAIN. See above illustration.
- A. Install a hex nut onto one end of threaded pipe leaving about 3/8" (10mm) of thread exposed. Then install same end of pipe by screwing onto bottom of fixture. Tighten hex nut.
B. Slip large notched cover through the installed threaded pipe and secure by fastening with finial. Make certain arms are locked onto its notches before tightening finial.
- A. Install crystal bobeches by slipping through sockets.
B. Install candle tube by slipping through sockets.
C. Install candle follower onto top of candle follower.
D. Install type-B, candelabra base, of 60 Watt maximum bulbs (not included).
- Hang all crystal glass parts as shown on drawing.
NOTE: To replace broken crystal or pin, extras are included in hardware bag. Replace by gently bending open pin, remove broken crystal or pin, hook new one, then close back pin. Avoid bending pin into sharp angle.