



ACCESSORIES

GENERAL PRODUCT INFORMATION:




This product is suitable for indoor dry locations only.

This product must be used with Tech Lighting systems only.




Installing the Taza Accessory

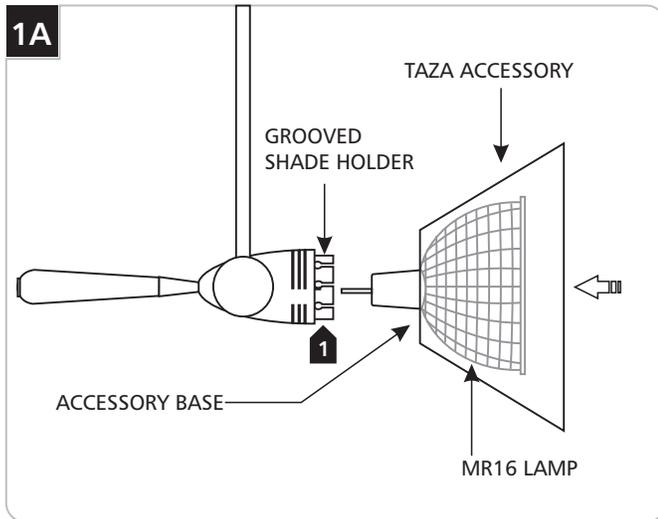

- 1 Align the lamp pins and socket holes and simultaneously push the Taza accessory base and lamp onto the grooved shade holder. Ensure that the lamp pins are all the way into the socket holes by pushing in the lamp.

Installation Using the Spring Clip

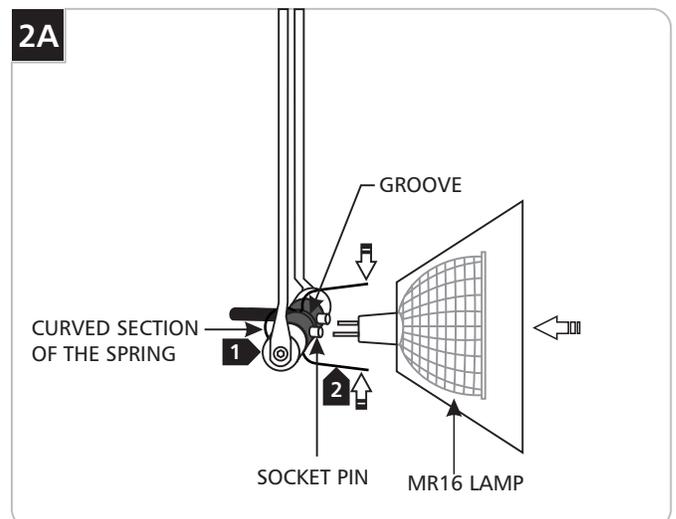

- 1 Snap the spring onto the groove in the middle of the MR16 socket.
- 2 Squeeze the spring ends together and feed them through the Taza assembly; simultaneously push the lamp pins all the way into the socket holes.

Use MAX 50 Watt MR16 Front Cover Halogen Lamp.



SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077
847.410.4400

www.techlighting.com

© 2008 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company