

CFM BYPASS REDUCTION KIT INSTALLATION INSTRUCTIONS


INSTALLATION ACCESSORIES

- Extension Cord



To install the CFM Reduction Bypass Kit, do the following:

1. Disconnect power.
2. Remove the metal grease filters from the bottom panel.
3. Disconnect the motor harness.
4. Connect extension end "B" with the hood Harness (A).
5. Connect extension end "C" with motor connection (D).
6. Reinstall the metal grease filters.
7. Reconnect the power.

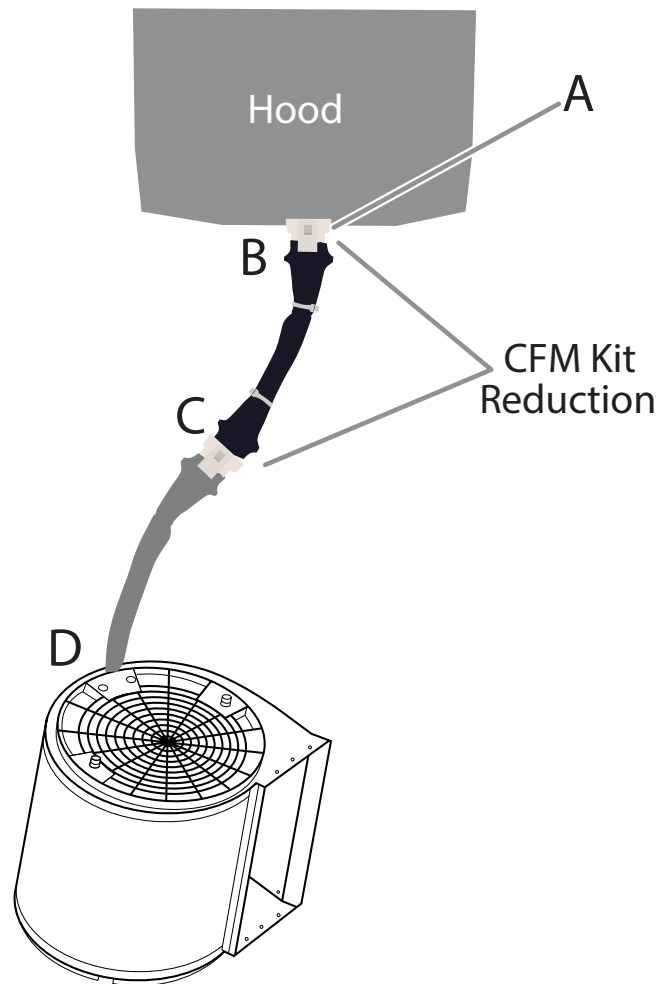

- A. Hood harness
- B. Extension end B
- C. Extension end C
- D. Motor connection