


**CONSOLE STAND
INSTALLATION INSTRUCTIONS
Model No. 10-57, 10-571, 10-59, 10-591**

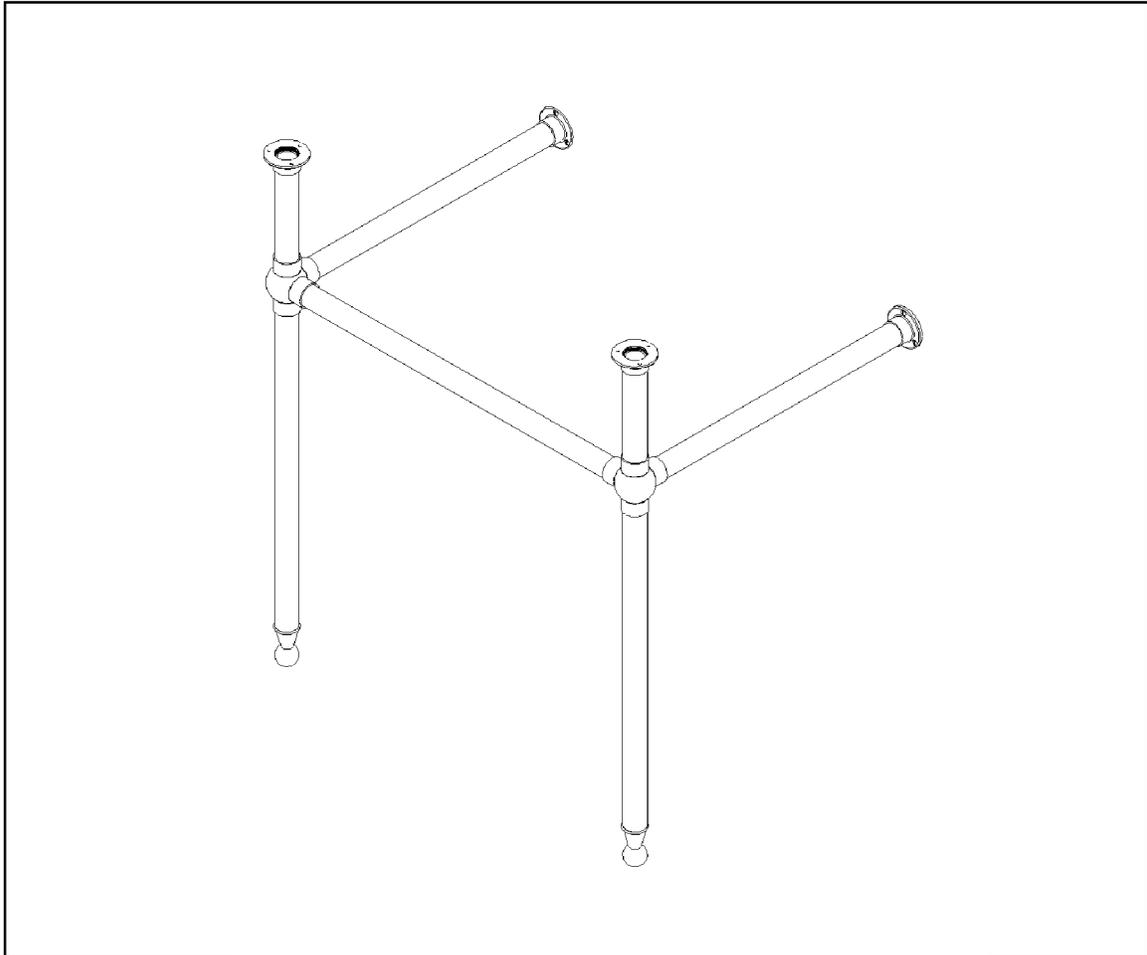

**Congratulations on the purchase
of this Newport Brass product,
an excellent choice that will give you
years of quality service and enhance
the look and style of your home.**

Recommended Installation by a Professional Contractor

1. Install wall support, by means of angle iron or wood blocking, at the required counter height, (32"). (Note: material for this step is not included.)
2. Thread end of return assemblies to the console stand. (See Figure A)
3. Install counter top, supporting front edge with console stand frame. Locate frame within required parameters, shown below. Ensure that the frame and counter top are parallel to floor and perpendicular to wall.
4. Mark hole pattern location of console top and wall flanges. Mark foot peg locations on the floor.
5. Remove console stand and counter top. Pre-drill the foot peg holes in floor ($\text{Ø } 5/16" \times .38$ deep). Pre-drill hole pattern for wall flanges.
6. Attach console stand to counter utilizing (6) #8 x $\frac{1}{2}"$ wood screws and a suitable construction grade adhesive. (See Figure B) Thread foot pegs into place. (See Figure C)
7. Re-install the assembled counter and console stand using foot peg hole locations in floor and wall support. Secure counter to wall with wall flanges on returns, (See Fig. D), and anchor counter to wall support.

Note: Instructions are for general installation, variances in flooring, wall and counter surfaces must be taken into consideration.

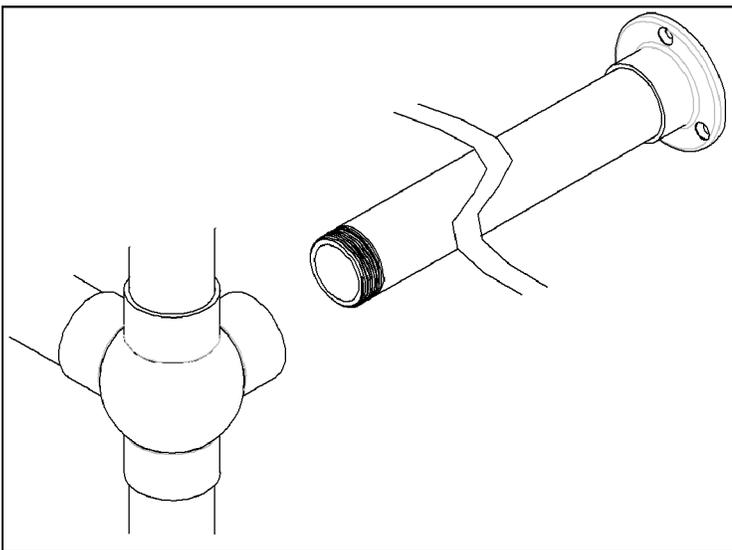


Figure A
2 places

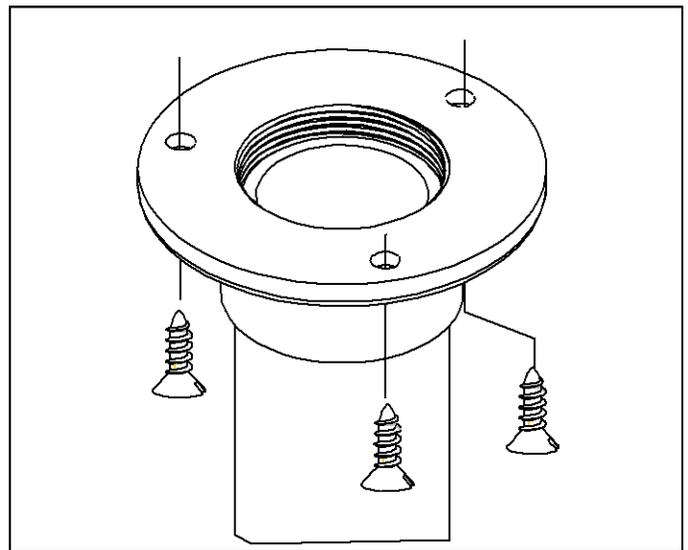


Figure B
2 places

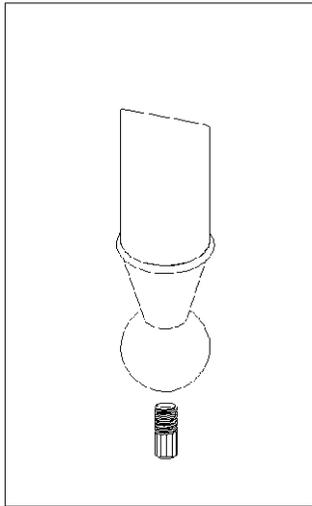


Figure C
2 places

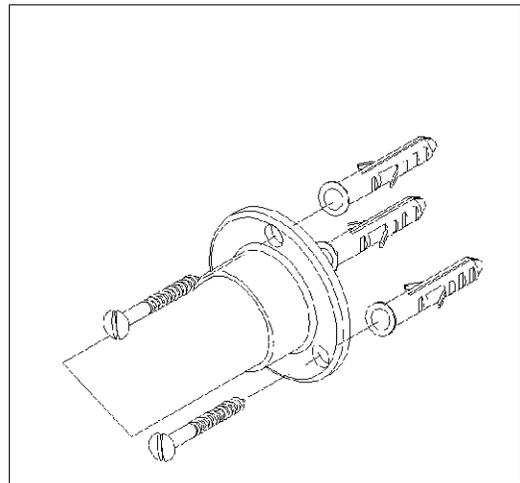


Figure D
2 places

