



**NOTE: Template may not be true-to-size. Please use for reference purposes only. DO NOT drill until measurements are verified.**



CEDAR GROVE, NJ 07009

INSTALLATION INSTRUCTIONS FOR  
**OMNIA TRADITIONS LATCHSETS**  
 FOR 45mm & 55mm SURFACE MOUNTED ROSES

**This set WILL NOT cover a 2<sup>1</sup>/<sub>8</sub>" pre-bored door**


1. Using template, mark all points for drilling. Use correct backset for latch. **For 1<sup>3</sup>/<sub>4</sub>" and 2" diameter roses or narrow plates, drill 3/4" diameter hole. Do Not drill a 2<sup>1</sup>/<sub>8</sub>" bore.**
2. Using 1" bit, drill from door edge through the door to accommodate latch length.
3. With face cover in place, position latch and mark perimeter of latch faceplate on door edge. Mortise to accommodate latch face and face cover, approximately 5/32" deep.
4. When installing the latch, hold latch with writing facing upwards.
5. Position latch in door to suit bevel. Rotate latch bolt if necessary, using slight pressure. Apply faceplate with flat side of faceplate facing flat side of latch bolt. Screw the faceplate and the latch to door.

**INSTALLING ROSES:**

6. Insert spindle through latch hub with the slot of the spindle facing the hinges (for levers) or downwards (for knobs). Place sub-roses (3B) onto spindle (6) on both sides of the door. Slide levers/knobs onto the spindle (6). Mark each sub-rose for three screw holes with pencil, then drill pilot holes. Remove levers/knobs and fasten sub-rose to the door with wood screws (4). Apply cover roses (3A) on both sides of door.
7. Slide nylon washers (10) onto shank of levers/knobs. Slide levers/knobs onto roses until securely seated inside of roses. Insert the set screws (2) into the levers/knobs and fasten to the spindle.


**Your Omnia Dealer/Distributor can help you with any further questions or information on other Omnia Products.**

**TUBULAR LATCH TEMPLATE**

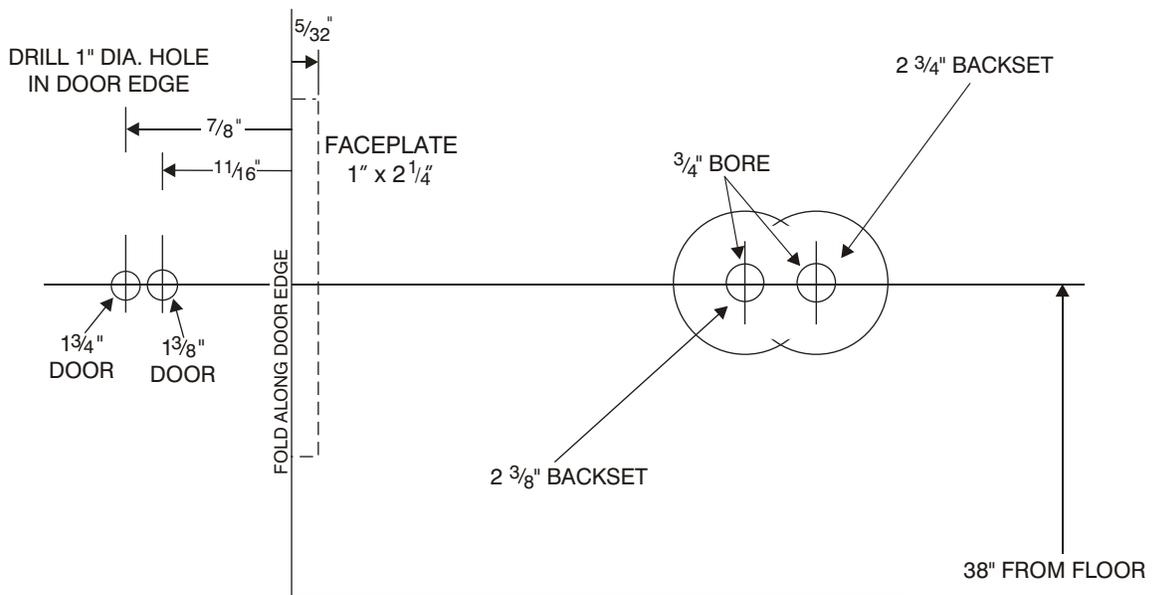


**This set WILL NOT cover a 2<sup>1</sup>/<sub>8</sub>" pre-bored door**

**NOTE: Template may not be true-to-size. Please use for reference purposes only. DO NOT drill until measurements are verified.**

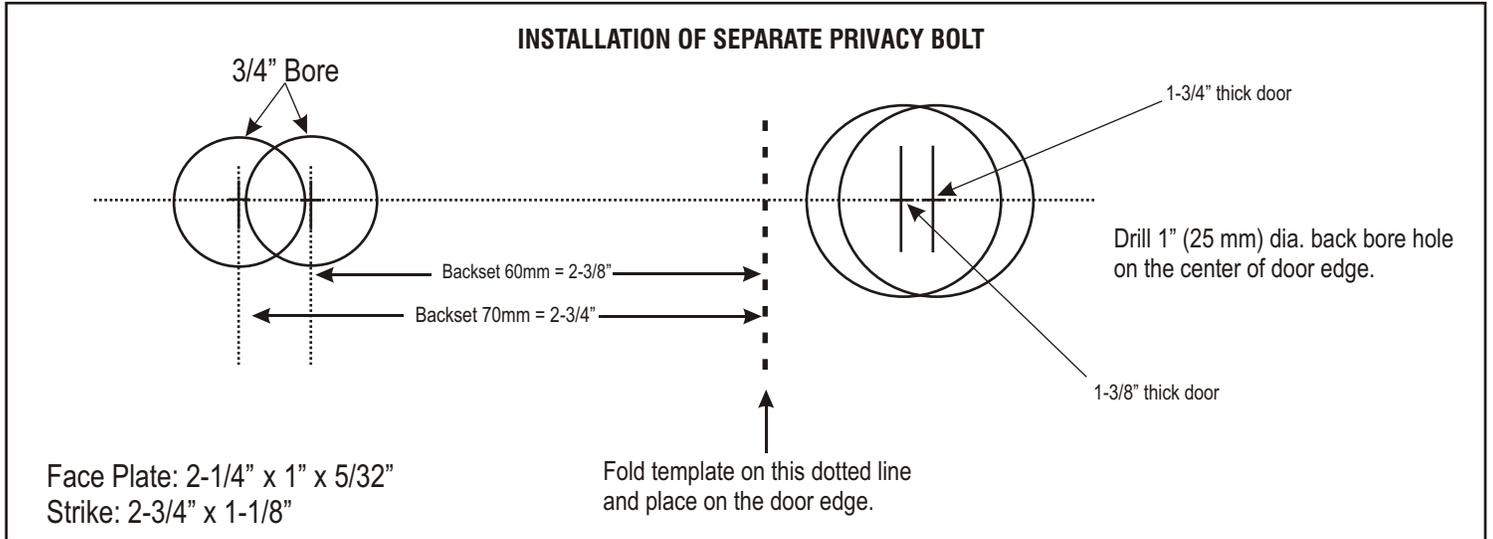

**This set WILL NOT cover a 2 1/8" pre-bored door**

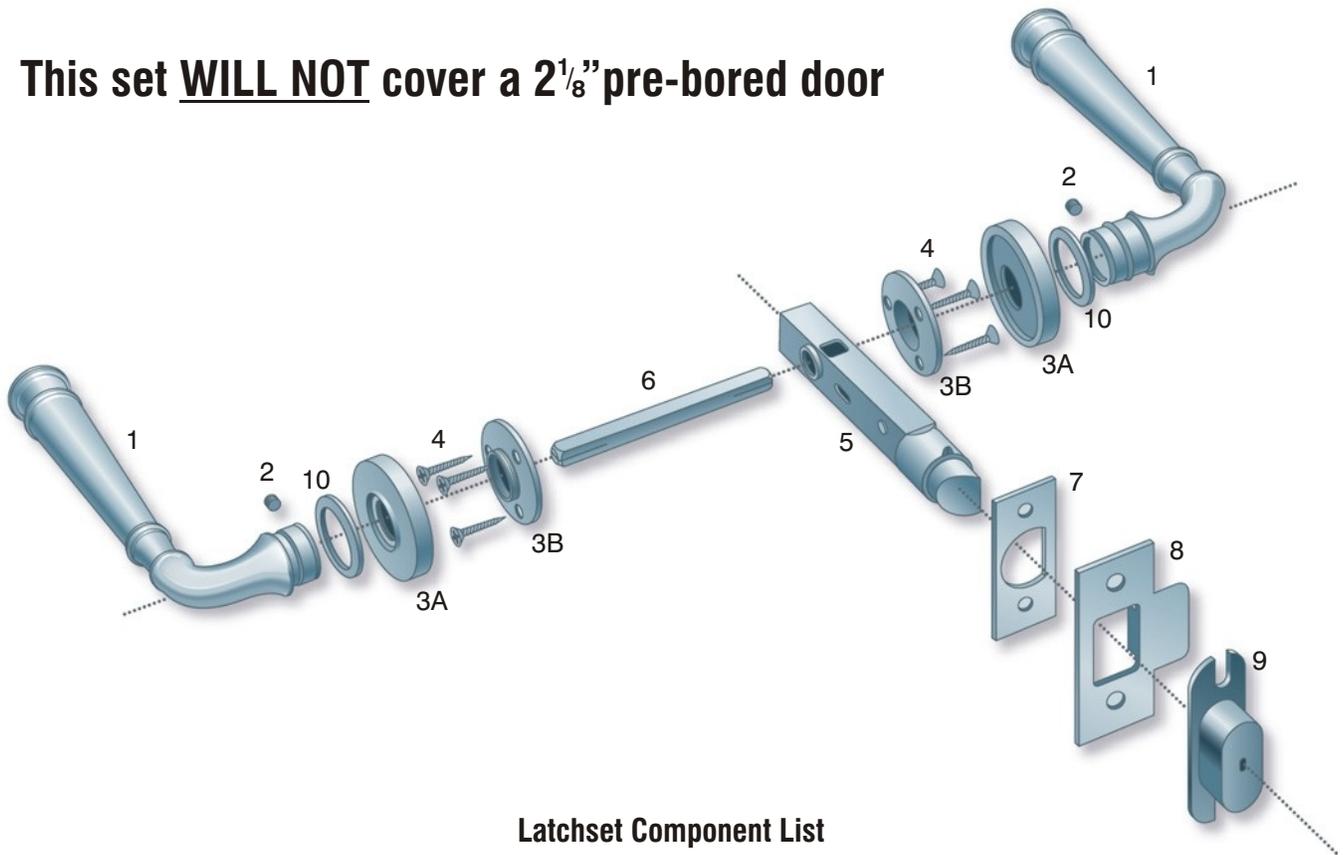

#### Latchset Component List

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>1. Door knob/lever (2)</li> <li>2. Set screws (2)</li> <li>3A. Finished rose (2)</li> <li>3B. Unfinished brass sub-rose (2)</li> <li>4. Wood screws (6)</li> <li>5. Tubular latch</li> </ul> | <ul style="list-style-type: none"> <li>6. Spindle (teardrop groove positioned towards set screw)</li> <li>7. Tubular latch faceplate</li> <li>8. Tubular latch strike plate</li> <li>9. Tubular latch dust box</li> <li>10. Nylon washers (2)</li> </ul> |
|---|--|



CEDAR GROVE, NJ 07009



OMTRAD-TLC  
12/29/10