

Neutron

HS390_I6SCIL_FSJ | 1.3




GENERAL PRODUCT INFORMATION:



This product is ETL listed and suitable only for indoor dry locations and approved for use at any height above the finished floor.



Install the Lamp

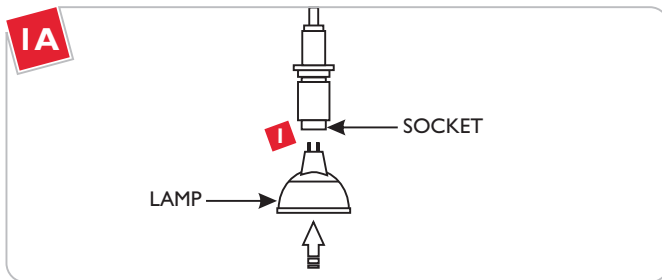


NOTE: To reduce the risk of a burn or electric shock during relamping, disconnect the power to the fixture.

Use **MAX 3** Watt, MR16 GX5.3 LED Lamp. 


1 Push the lamp pins completely into the socket holes.

WARNING: RISK OF FIRE
Never replace a LED MR16 lamp with a regular MR16 Halogen lamp. A regular MR16 Halogen lamp will melt the acrylic shade.

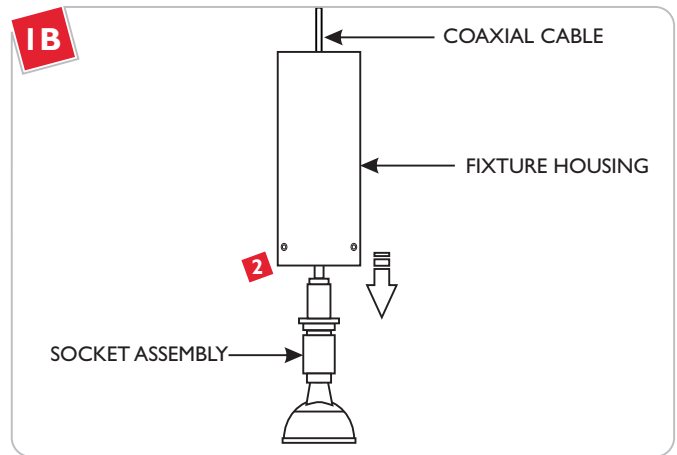


2 Feed the fixture coaxial cable through the fixture housing. Slide the fixture housing down the cord and rest it onto the socket assembly.

Adjust the Fixture Height

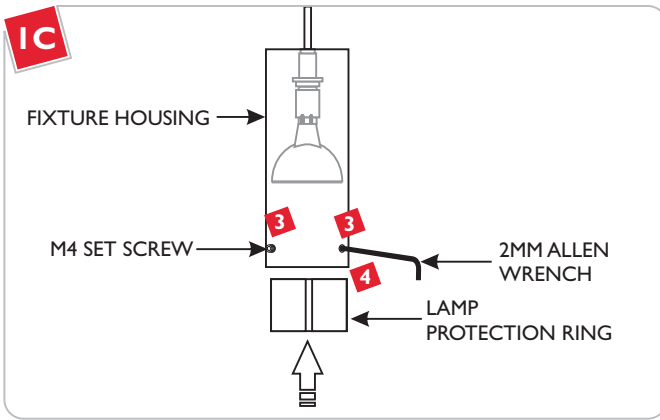


- 3 Loosen (**DO NOT REMOVE**) the three M4 set screws with the provided 2MM Allen wrench.
- 4 Insert the lamp protection ring completely against the lamp.


NOTE: Do not clean the acrylic shade with alcohol or alcohol base cleaners which will damage the shade.

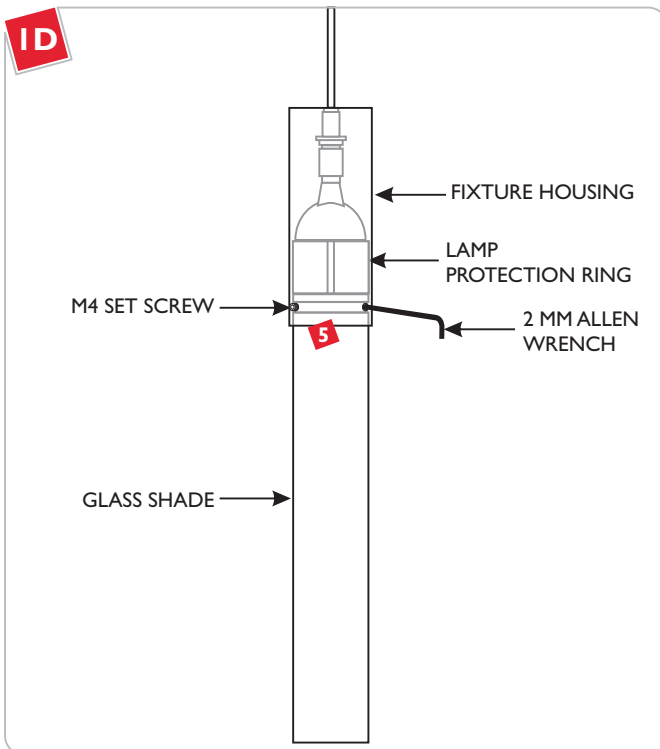

- 5 Push the grooved section of the acrylic shade into the fixture housing and tighten the three M4 set screws with the provided 2MM Allen wrench to secure the acrylic shade in place.

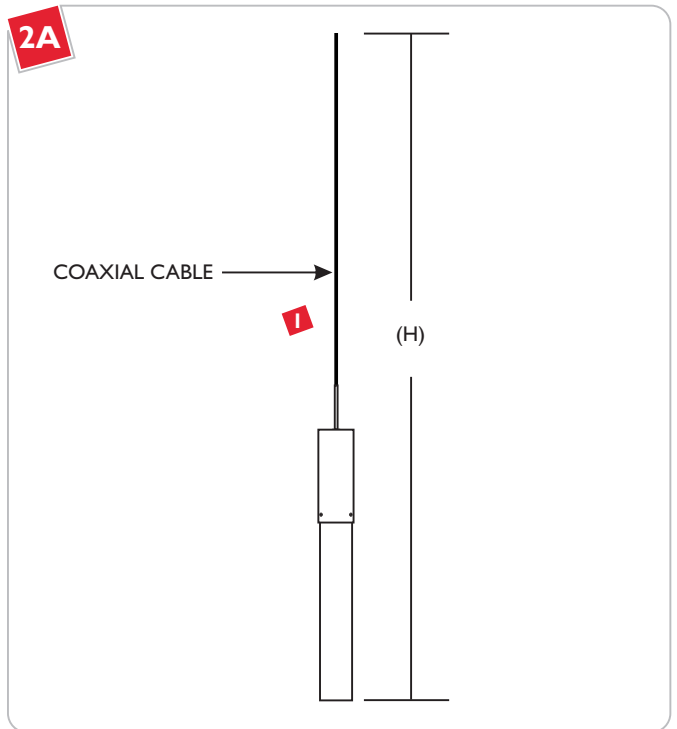


- 1 Cut the coaxial cable to the desired length with a sharp cutter. The overall fixture height (H) is measured from bottom of the acrylic shade to end of the coaxial cable.

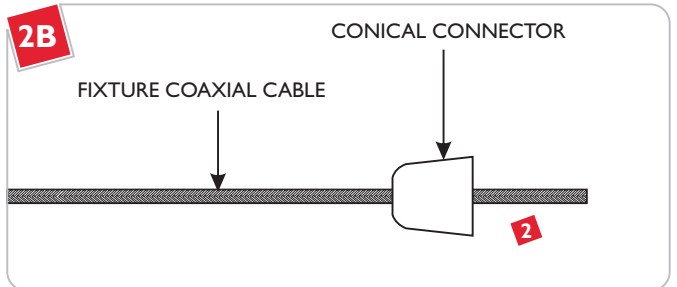


- 2 Insert the fixture coaxial cable through the conical connector.



- 3 Insert the coaxial cable through the flared end of the strain relief.

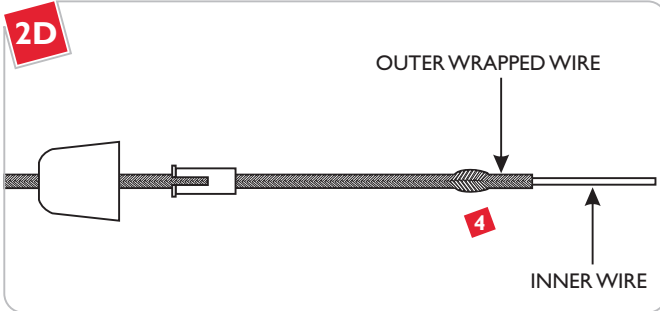


4 Slide the outer wrapped wire back to expose the inner wire.

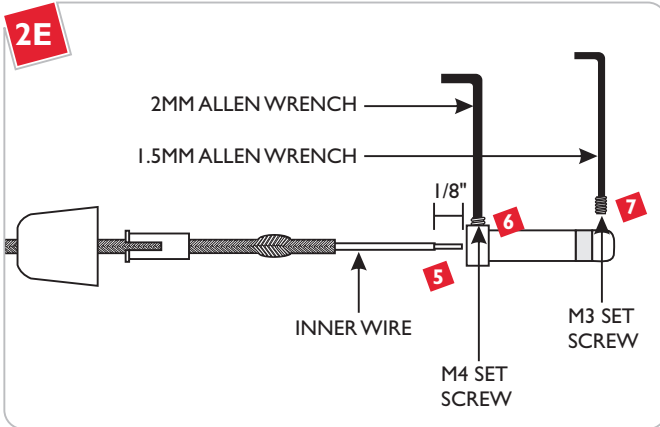

5 Strip 1/8" from end of the inner wire. **Make sure that the stripped portion is not greater than 3/16".**


6 Loosen (**Do Not Remove**) the M4 set screw with the provided 2MM Allen wrench.

7 Remove the M3 set screw with the provided 1.5MM Allen wrench.

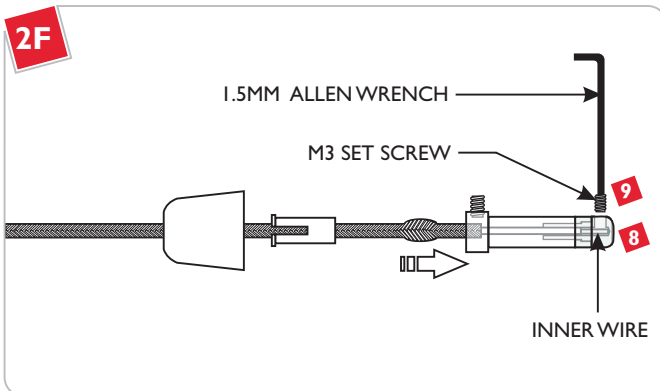

8 While inserting the inner wire into the connector look through the set screw hole to make sure that the stripped portion of the inner wire contacts end of the connector.


9 Hold the coaxial cable in place; replace and tighten the M3 set screw with the 1.5MM Allen wrench. **Lightly** tug on the coaxial cable to make sure that the set screw connection is tight.

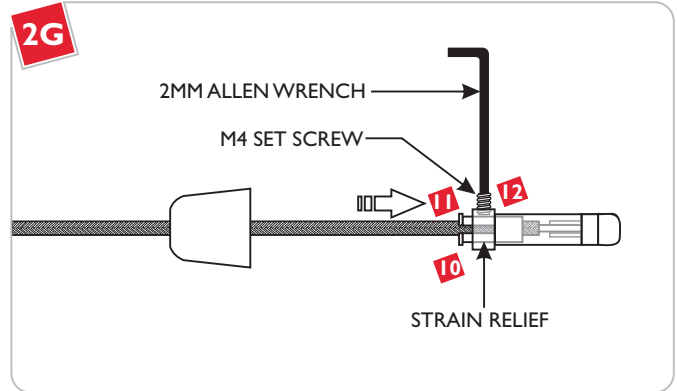

10 The strain relief slots should be rotated 90° away from the M4 set screw.

11 Slide and push the strain relief completely into the connector. This will force the outer wrapped wire to be inserted into the connector.

12 Tighten the M4 set screw with the 2MM Allen wrench so that the strain relief holds the outer wrapped wire in place.

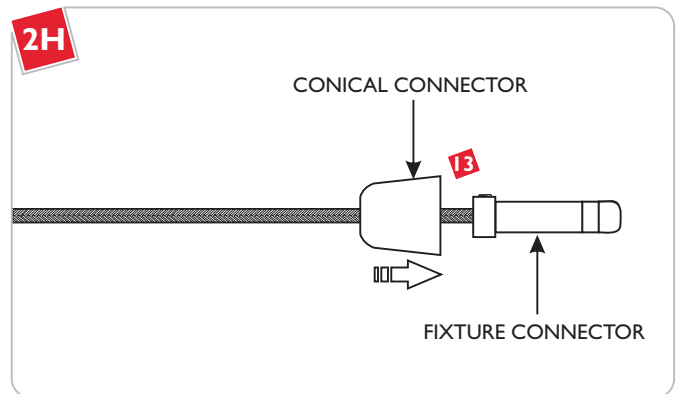

13 Slide the conical connector over the fixture connector. To install the fixture, refer to the instructions provided with the system.

SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077

800.323.3226 - 847.626.6300

www.lblighting.com

© 2008 LBL Lighting. All rights reserved. The "LBL Lighting" graphic is a registered trademark of LBL Lighting. LBL Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company