## **☑** Electrolux

# Double Wall Ovens

EW30EW65G S, EW30EW65G W, EW30EW65G B

### **Featuring Wave-Touch™ Electronic Controls**





#### Perfect Turkey® Button¹

Ensures moist, delicious poultry. Imagine stress-free holiday cooking.



#### **Luxury-Glide® Oven Racks**

With a ball bearing system, oven racks are so smooth they extend effortlessly.



#### Perfect Convect3®

Our convection technology features a third convection element for consistently even results, up to 30% faster cooking times and even more baking options.




#### **Wave-Touch™ Controls**

One simple touch and the control panel activates, showing the virtually endless cooking options. After you make your choice, all but the option selected will fade away, returning to an elegant display.

Configuration	Double
Control Panel Features	
Nave-Touch™ Electronic Oven Controls	Yes
Keypad Entry of Time & Temperature	Yes
Electronic Clock & Timer	Yes
Temperature Display	Yes
Foggle Control	Yes
Automatic Oven (Delay, Cook & Off)	Yes
_ockout	Yes
Automatic Oven Shutoff – 12 Hour	Yes
Programmable for °F or °C	Yes
Luxury-Design® Halogen Oven Light Touch Pad	Yes
Oven Features	
Oven Cavity (both ovens)	4.2 Cu. Ft.
Hidden Bake Element	Yes
Electric Bake Element – 2200 Watts	Yes
Eight-Pass Broil Element – 4000 Watts	Yes
Convection Element – 2500 Watts	Yes
Cobalt Blue Interior	Yes
Self-Clean Options with Door Lock	3
Perfect Convect <sup>3®</sup> with Variable 2-Speed Fans	Yes
Cooking Modes – Bake, Broil, Convection Bake, Convection Roast, Convection Broil, Keep Warm, Slow Cook	7
Baking Options – Perfect Turkey®, Defrost, Dehydrate, Bread Proof, My Favorites, Multi-Stage Cooking, Temperature Probe, Rapid Preheat, Delay Bake, Convection Convert	10
_uxury-Design® Lighting with Dual 40W Halogen Bulbs	Yes
uxury-Glide® Racks	2
Conventional Racks	1
Convection Roasting Rack	Yes
Additional Features	
Signature Soft-Arc Oven Door and Handle Design	Yes
Luxury-Hold™ Oven Doors	Yes
Extra-Large Glass Windows	Yes
Sabbath Mode (Star-K® Certified)	Yes
Accessories	
Porcelain Broiler Pan and Insert	Included
"-high Bottom Trim: S – PN# 903114-9110, V – PN# 903114-9101, B – PN# 903114-9100	Optional
Specifications	
Color –	
Stainless Steel	S
White	W
Black	В
Oven Cavity Dimensions –	16-1/2"
Height Width	24-1/8"
Depth	18-1/32"
Product Dimensions –	10 1/02
Height (Including 1" Bottom Trim)	50-7/16"
Width	30"
Depth (to Front Door Corner)	24-1/2"
(with 90° Door Open)	44"
Power Supply Connection Location	Left Bottom Rea
Connected Load (kW Rating) @ 240/208 Volts	8.0/6.0
Amps @ 240/208 Volts	33.0/29.0
Minimum Circuit Required (Amps)	40
Armored Electrical Cable	Included
Shipping Weight (Approx.)	395 Lbs.

Select models only.

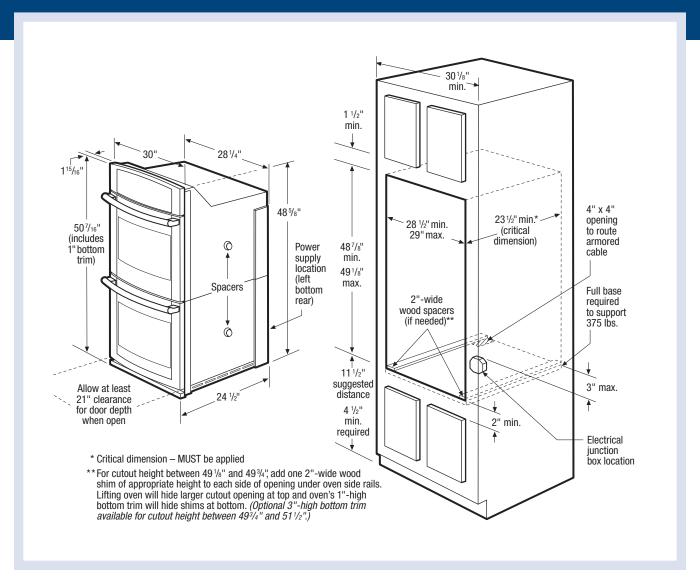

#### 30" Electric Double Wall Oven Specifications

- Product Weight 375 Lbs.
- Single phase 3- or 4-wire cable, 120/240 or 120/208 Volt, 60 Hertz AC only electrical supply with ground required on separate circuit fused on both sides of line.
- Connected Load (kW Rating) @ 240/208 Volts = 8.0/6.0 kW
- Amps @ 240/208 Volts = 33.0/29.0 Amps
- Recommended Circuit Breaker 40 Amps
- Always consult local and national electric codes.
- Minimum 21" clearance for oven door depth when open.
- Suggested distance from floor is 11-1/2". Minimum required distance is 4-1/2".
- Minimum 23-1/2" deep cutout dimension is critical for proper installation, to ensure that oven's faceplate will fit flush against cabinet front.
- To adapt oven to fit cutout height between 49-1/8" and 49-3/4", add one 2"-wide wood shim of appropriate height to each side of opening under oven side rails. Lifting oven will hide larger cutout opening at top and oven's 1"-high bottom trim will hide shims at bottom. (Standard 1"-High Bottom Trim included.)

- To adapt oven to fit cutout height between 49-3/4" and 51-1/2", optional 3"-High Bottom Trim available.
- Full oven base of solid plywood or similar material required, capable of supporting 375 Lbs.
- Base must be level and cabinet front must be square.
- Double Wall Ovens are NOT approved to be used in stackable or side-by-side installation.

Note: For planning purposes only. Refer to Product Installation Guide on the web at electroluxappliances.com for detailed instructions.

#### **Optional Accessories**

• 3"-High Bottom Trim: S - (PN# 903114-9110), W - (PN# 903114-9101), B - (PN# 903114-9100).



