



"Whisper quiet cooling & ventilation system"

"The natural choice for energy savings"

Installation Manual

"The Classic Line"

www.quietcoolfan.com



Model QC-1500

Model QC-2250

Model QC-3100

Model QC-4700



Model QC-4500

Model QC-6400

"Quiet Giant"

To ensure proper installation, read carefully the entire manual prior to installing the fans.

QuietCool fan installation instructions

System Venting Requirements

VERY IMPORTANT! - 1 SQUARE FOOT OF NET FREE VENTING PER 750 CFMs

| REQUIRED VENTILATION | 1 SQ. FT FOR EACH 750 CFMs | | | | |
|----------------------|----------------------------|-------------|--------------|------------|-------------|
| Vent type | Gable vent | Dormer vent | Eave vent | Ridge vent | Soffet vent |
| Average size | 12" x 19.5" | 14" x 8" | 3.5" x 22.5" | various | various |
| Venting Sq. Ft. | 1.20 | 0.70 | 0.35 | various | various |



1. Prepare a cardboard cut-out template to be used to mark the rough opening cutout in the ceiling.
The rough opening size varies depending on which model of QuietCool fan you are installing:
QC-1500 rough opening is 14-1/4" x 14-1/4"
QC-2250 rough opening is 14-1/4" x 18-1/4"
QC-3100 rough opening is 14-1/4" x 22-1/4"
QC-4500 rough opening is 14-1/4" x 36-1/4"
QC-4700 rough opening is 14-1/4" x 26-1/4"
QC-6400 rough opening is 14-1/4" x 36-1/4"

2. Determine from down below in which areas you would like to install your QuietCool fans.

3. Go up into the attic to mark the exact location for each fan. Take the cardboard cut-out template and a small screwdriver with you. When you find a location, move the insulation away to get a clear view. Make sure the template fits between the framing, and there are no obstructions in your chosen location. When you have chosen your exact spot, place the template on the spot and mark it at each corner by pushing the screwdriver through at each corner to make a hole so that you can find it from below.

Repeat these steps at each location

4. From below, place the cut-out template on the ceiling at each location, making sure that you have at least 2 inches of clearance all around it, because the grill that will be installed later is 2 inches larger than the cut-out template. While holding the template in place, mark its outline with a pencil. Using a drywall saw or similar device, cut out the hole in the ceiling.

Repeat these steps at each location

5. Open and unpack each QuietCool fan. Most of the system comes pre-assembled. Take the main assembly with duct and the ceiling box up into the attic through the crawl hole and move into position near the ceiling cut-out hole.

6. Hang the motor heads from the rafters by fastening the metal strapping that is attached to motor heads to the rafters with the long wood screws. The goal is to hang the motor head as far as possible from the ceiling cut-out hole while making sure that the ceiling box and duct will easily reach the hole with a small amount of slack. Also make sure that the power box on the motor head is at the very top (12 O'clock). Secure duct to ceiling box using three black sharp screws. Make sure the duct has a gentle 90 degree bend to help reduce noise level.



1




2



3



4

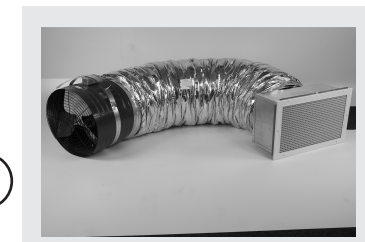

5



6a



6b

7. Once all of the QuietCool fans are hung, it's time to go below and install the ceiling box and ceiling grill at each intake location.
8. Look through the hole and make sure there are no kinks or twists in the ducting. Pull the ceiling box down through the hole in the ceiling. While holding it in place, install a 1-3/8" drywall screw through the drywall into the flange of the ceiling box on each side to temporarily hold the box in place. Remove ceiling grill and screws from its packaging. Center the grill over the ceiling box. Install the grill with the white screws provided by screwing through the flange of the ceiling box. Some ceiling surfaces are uneven and may cause a small gap to be present. This can easily be caulked later if excessive.

Repeat these steps at each location

9. Return to the attic and go to each location. Using the nylon straps and the pan head screws provided, support the duct to the framing. This will stabilize the entire assembly. Replace any insulation that was removed. The installation is now complete except for the electrical wiring.

Wiring Options

- A.) **Using Remote Controls** -When using remote controls, the attached power cord (high speed only) must be used and a 120 v. three prong plug outlet is required within six feet of the motor head in attic.
10. B.) **Using attached power cord and hard wiring to wall switches**-When using the attached power cord (high speed only), a 120 v. three prong plug outlet is required within six feet of the motor head in attic.
- C.) **Using multi-speeds and hard wiring to wall switches**-When wiring a two speed fan, you need to remove the 3 prong power cord and direct wire your fans to a 3 way switch.

Power must not be on both speeds at the same time !

11. **⚠ VERY IMPORTANT! Make sure the fan blade spins freely. This is very important to system operation.**

⚠ Local building codes and standards must be adhered to in the installation of this unit.

⚠ Avoid Back drafts

Care should be taken to avoid back drafting combustion appliances that are installed in the conditioned space. It is strongly recommended that combustion appliances NOT be installed in such a manner that they use room air for combustion. Whole house fans are capable of pulling large quantities of air from the home and particularly if not enough windows are open. This could easily back draft gas appliances located inside your home.




8a



8b




9

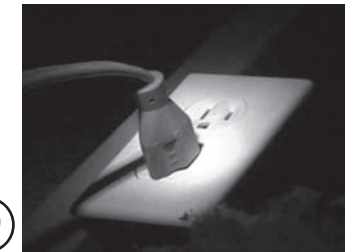


10




11

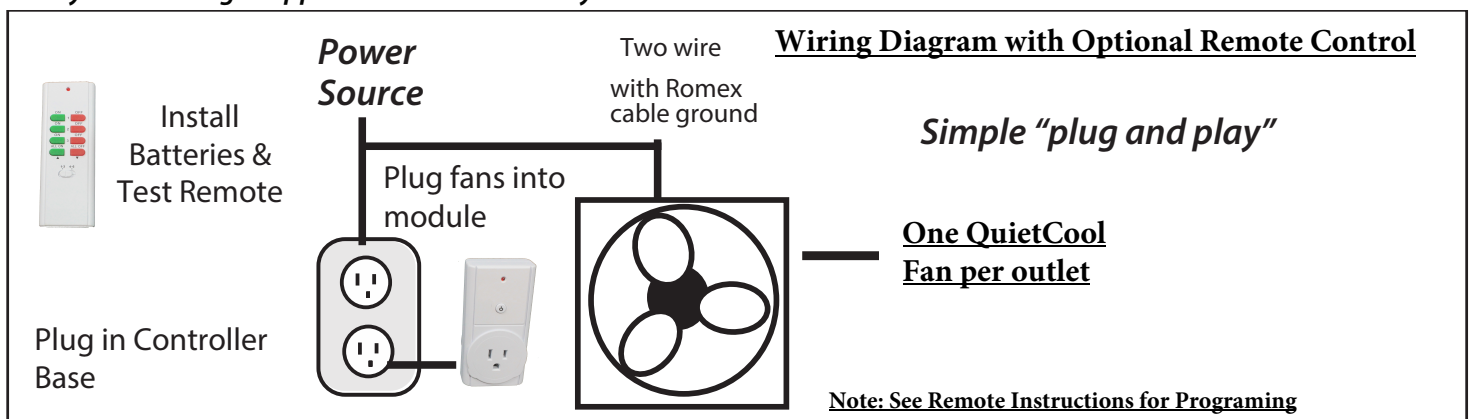

Wiring Diagram with Timer & Switches using attached power cords

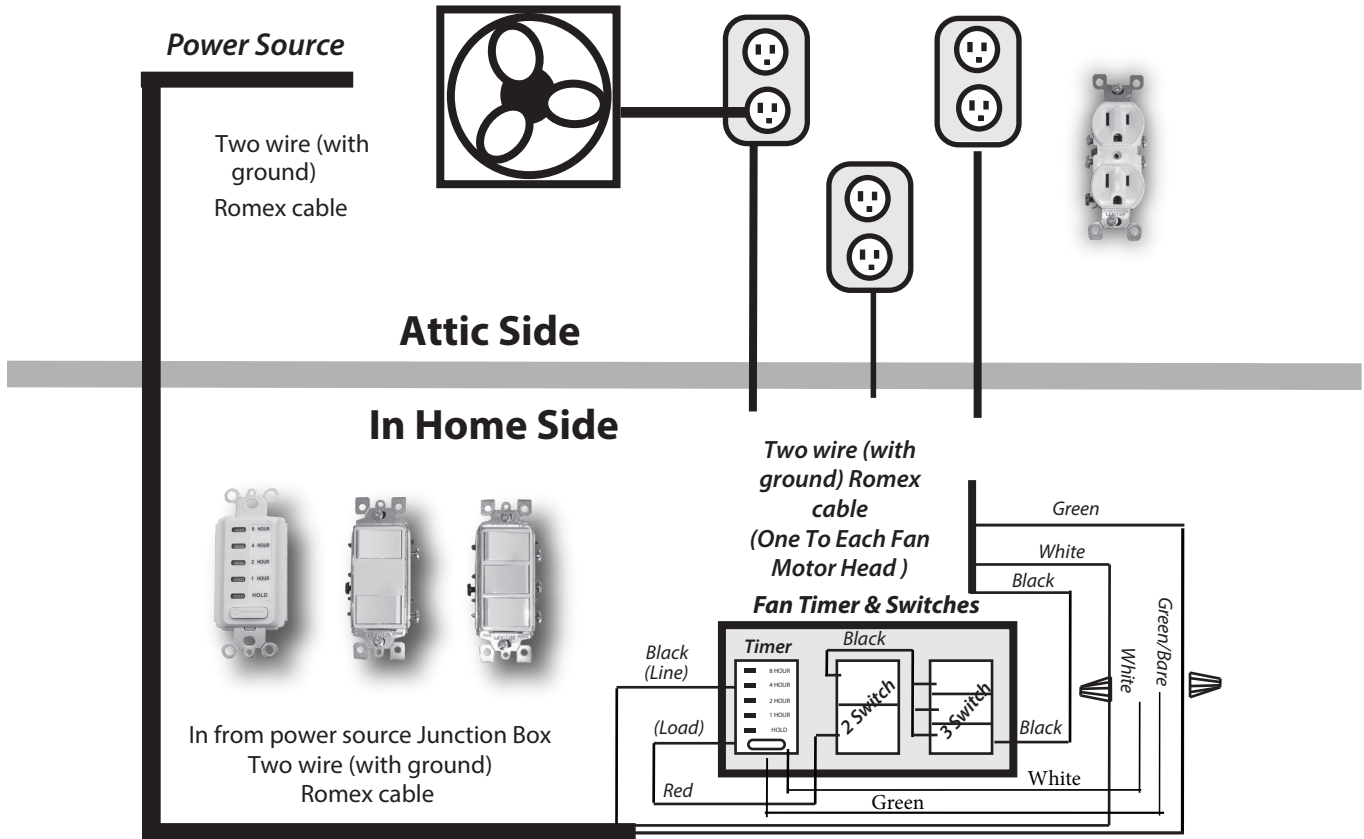

Wiring Diagram with Timer & Switches and Direct Wiring

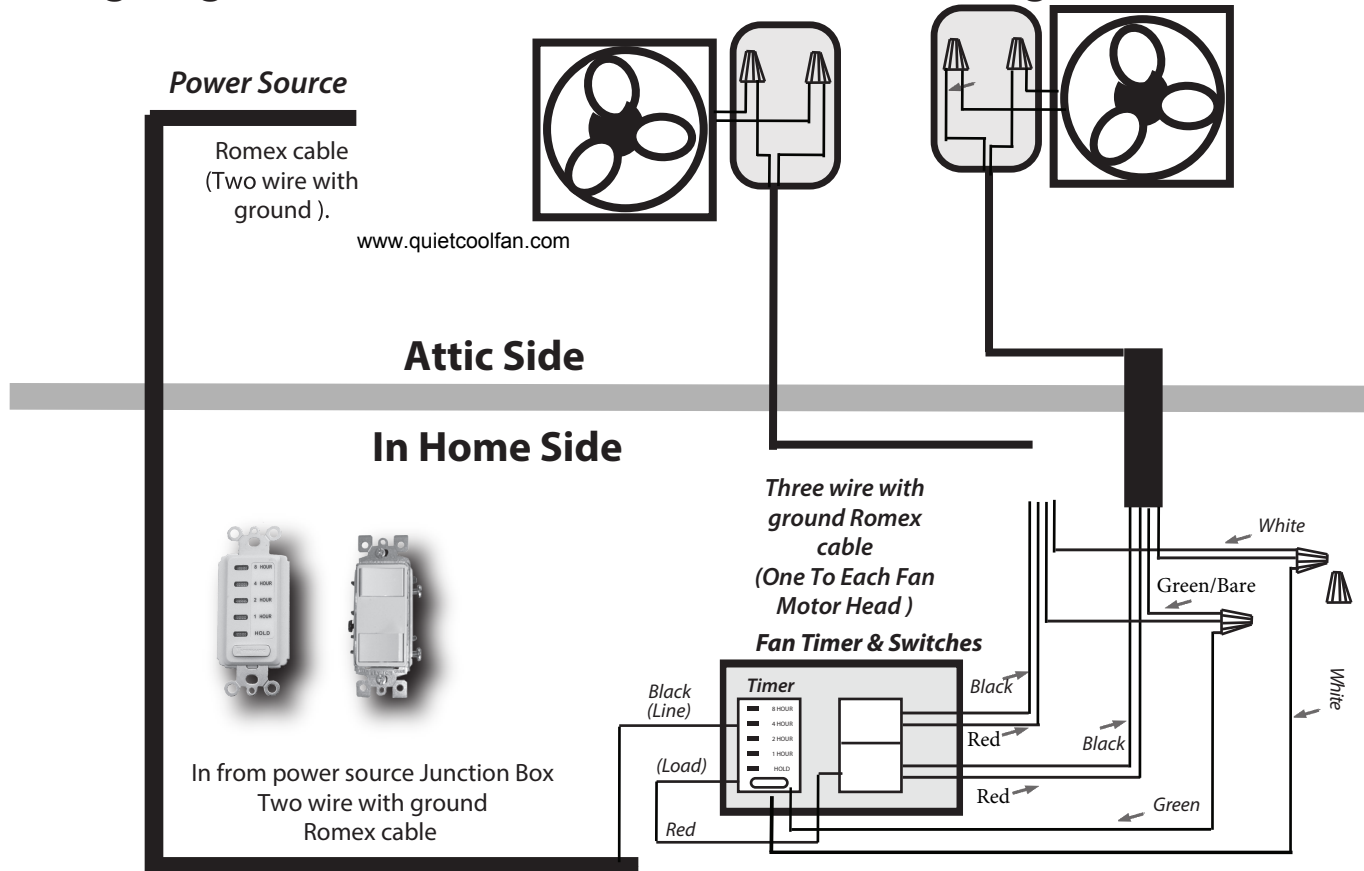



System operating instructions

Congratulations on the purchase of your new QuietCool system!

▲ VERY IMPORTANT! OPEN WINDOW OR DOOR PRIOR TO TURNING ON SYSTEM (May pull ashes from fire place)

One or more QuietCool's can be used to ventilate your home at any time of the year. The following general instructions will concentrate on summertime cooling.

WHEN TO RUN FANS

Anytime of day that it feels cooler outside than inside your home, the system will work effectively. In the summer, this normally happens in the late afternoon to early evening, through to the next morning.

WHERE TO START

We recommend you start by cooling the area where you are going to be spending the most time for the next few hours. In other words, create the coolest breeze where you are going to be. For example, in most family situations, the early evening is spent in the kitchen / family room area. Assuming this to be true, this is where you would start.

Begin by opening a window or two in the area you are going to be spending your time and turn on all of your QuietCool's at once, for maximum cooling. The cooler air outside will immediately begin to create a breeze. Opening windows too wide or opening too many windows will lesson the cooling breeze you feel.

The breeze will flow through your home and make its way to each QuietCool you have in operation. This breeze will be felt in the entire path, and will begin to cool the whole house. At the same time, the air brought in will be sent to the attic. This action will flush the very hot air out through the venting. When hot air is allowed to remain in your attic, it keeps your home hot even though it has cooled down outside. Removing the hot air and replacing it with cool air allows your home to cool off dramatically.

As it gets later in the evening, and even cooler outside, you can begin to open windows in other rooms of your home. Then at bedtime, you should close all the windows except in the occupied bedrooms. This will provide each room with a cool breeze as long as desired. If you have a QuietCool installed in each bedroom as recommended, you can enjoy the breeze and your privacy with your door closed.

INDOOR AIR QUALITY

We should also stress the values of ventilating your home on a regular basis. Many private and government studies show that the air inside our homes is more polluted than the air outside. This is generally true even in industrial cities. Your QuietCool system can greatly reduce this problem by bringing in fresh air and exhausting stale polluted air all year round.

In cooler months, you can provide sufficient ventilation by operating one QC1500 daily for short periods of time without significantly cooling your home. The system can also be helpful in eliminating pet odors, burned food smells and smoke.

HELPFUL TIPS!

- ➡ ***Don't run fans when it is hot outside!***
- ➡ ***Cool house in morning and close all windows during mid-day.***
- ➡ ***Open only a few windows at first when its starting to cool down in the afternoon or evening then later open more windows.***
- ➡ ***Close window shades and blinds during mid morning to prevent sun from heating up home as quickly.***
- ➡ ***In wintertime you may turn on the system at the warmest time of the day and bring in fresh warmer air to heat the home.***



10 Year Limited Warranty – QC Classic Line Whole House Fans

QC Manufacturing Inc. extends this warranty to the original purchaser of the following QuietCool Classic Line Models ---- QC 1500, QC 2250, QC 3100, QC 4500, QC 4700, and QC 6400 ---- installed and used in a residence under normal conditions within the United States:

- A. Ten year coverage applies to the QuietCool motor fan assembly. At our option we will repair or replace any part of the assembly should it fail to operate during the first ten years from the date of original purchase.
- B. One year coverage for all other components including grills, housings, controls and accessories furnished by QC Manufacturing Inc. At our option we will repair or replace any part which fails as a result of defective material or workmanship during the first year from the original date of purchase.
- C. This warranty does not cover any of the following:
 1. Incidental or consequential damage resulting from the operation of our equipment or any malfunction thereof.
 2. Cost of service calls to diagnose the cause of problems or the labor charge to un-install any components.
 3. Product failure or damage due to faulty installation, abuse, misuse, unauthorized alteration to factory specs, lack of maintenance, or transportation damage.
 4. Shipping or postage for warranty claims.
- D. To obtain service under this warranty, contact the dealer where you purchased the equipment. If you are unable to find or reach your dealer, contact Customer Service at QC Manufacturing Inc., at the address below.
- E. Please register your product(s) for warranty on line at www.QuietCoolSystems.com

This warranty is the only warranty extended by QC Manufacturing Inc. to purchasers or suppliers of our equipment. QC Manufacturing Inc. disclaims all other warranties, express or implied, that arise by operation of the law.



Product Information

QC Serial #

QC Serial #

QC Serial #

QC Serial #

Product Registration: Please register your product on line at www.QuietCoolSystems.com/register.html. Be sure to keep a copy of this warranty form for future reference and submit proof of purchase with any warranty claim. QC Manufacturing, Inc. will not process any warranty claim without proof of purchase from an authorized QuietCool dealer. Where consumer may have additional warranty rights in accordance with federal and state law, such rights shall supersede those stated herein."

Rev.3.15.13

1-877-667-4663
www.quietcoolfan.com