



KitchenAid®

24" ELECTRIC WALL OVEN

MODELS:

KOSC504ESS00 (Stainless)


CONTROL PANEL PARTS

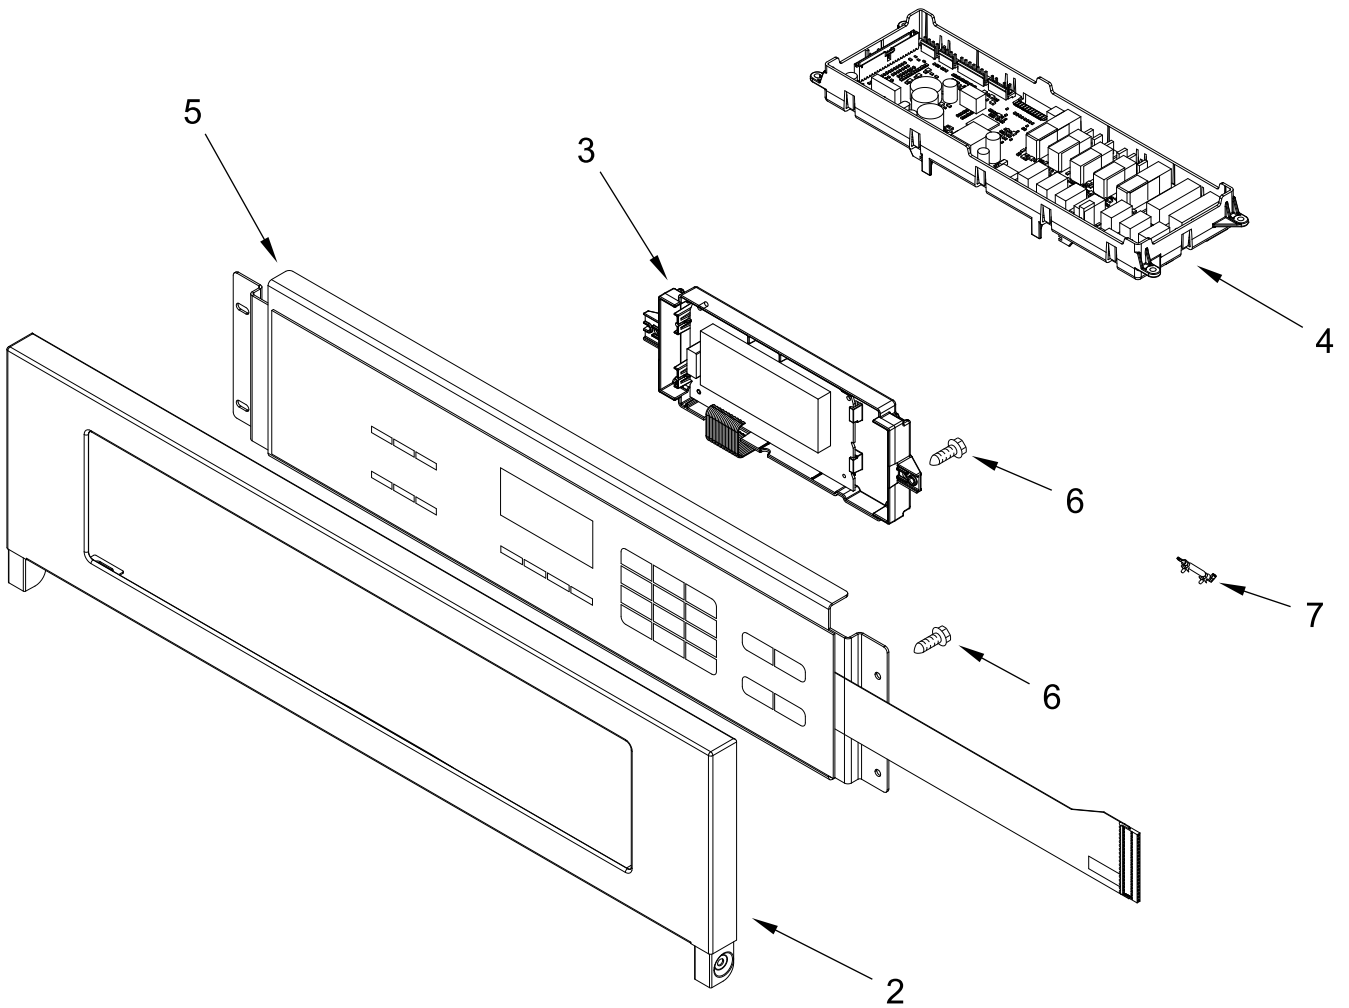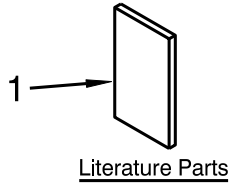

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5		Assembly, Membrane	7	W10794084	Fuse, Thermal
	W10758300	Guide, Use & Care		W10694991	Stainless			FOLLOWING PARTS NOT ILLUSTRATED
	W10758285	Instructions, Installation	6	3400832	Screw (Black)		W10691761	Harness, Main
2		Assembly, Control Panel Skin					W10691785	Harness, Door Latch
	W10704699	Stainless					W10409840	Harness, EOL (MRC)
3	W10752315	Assembly, Display					4450800	Screw, Grounding
4	W10721211	Control					4448664	Clamp, Conduit
							4451761	Support, Wiring


OVEN PARTS

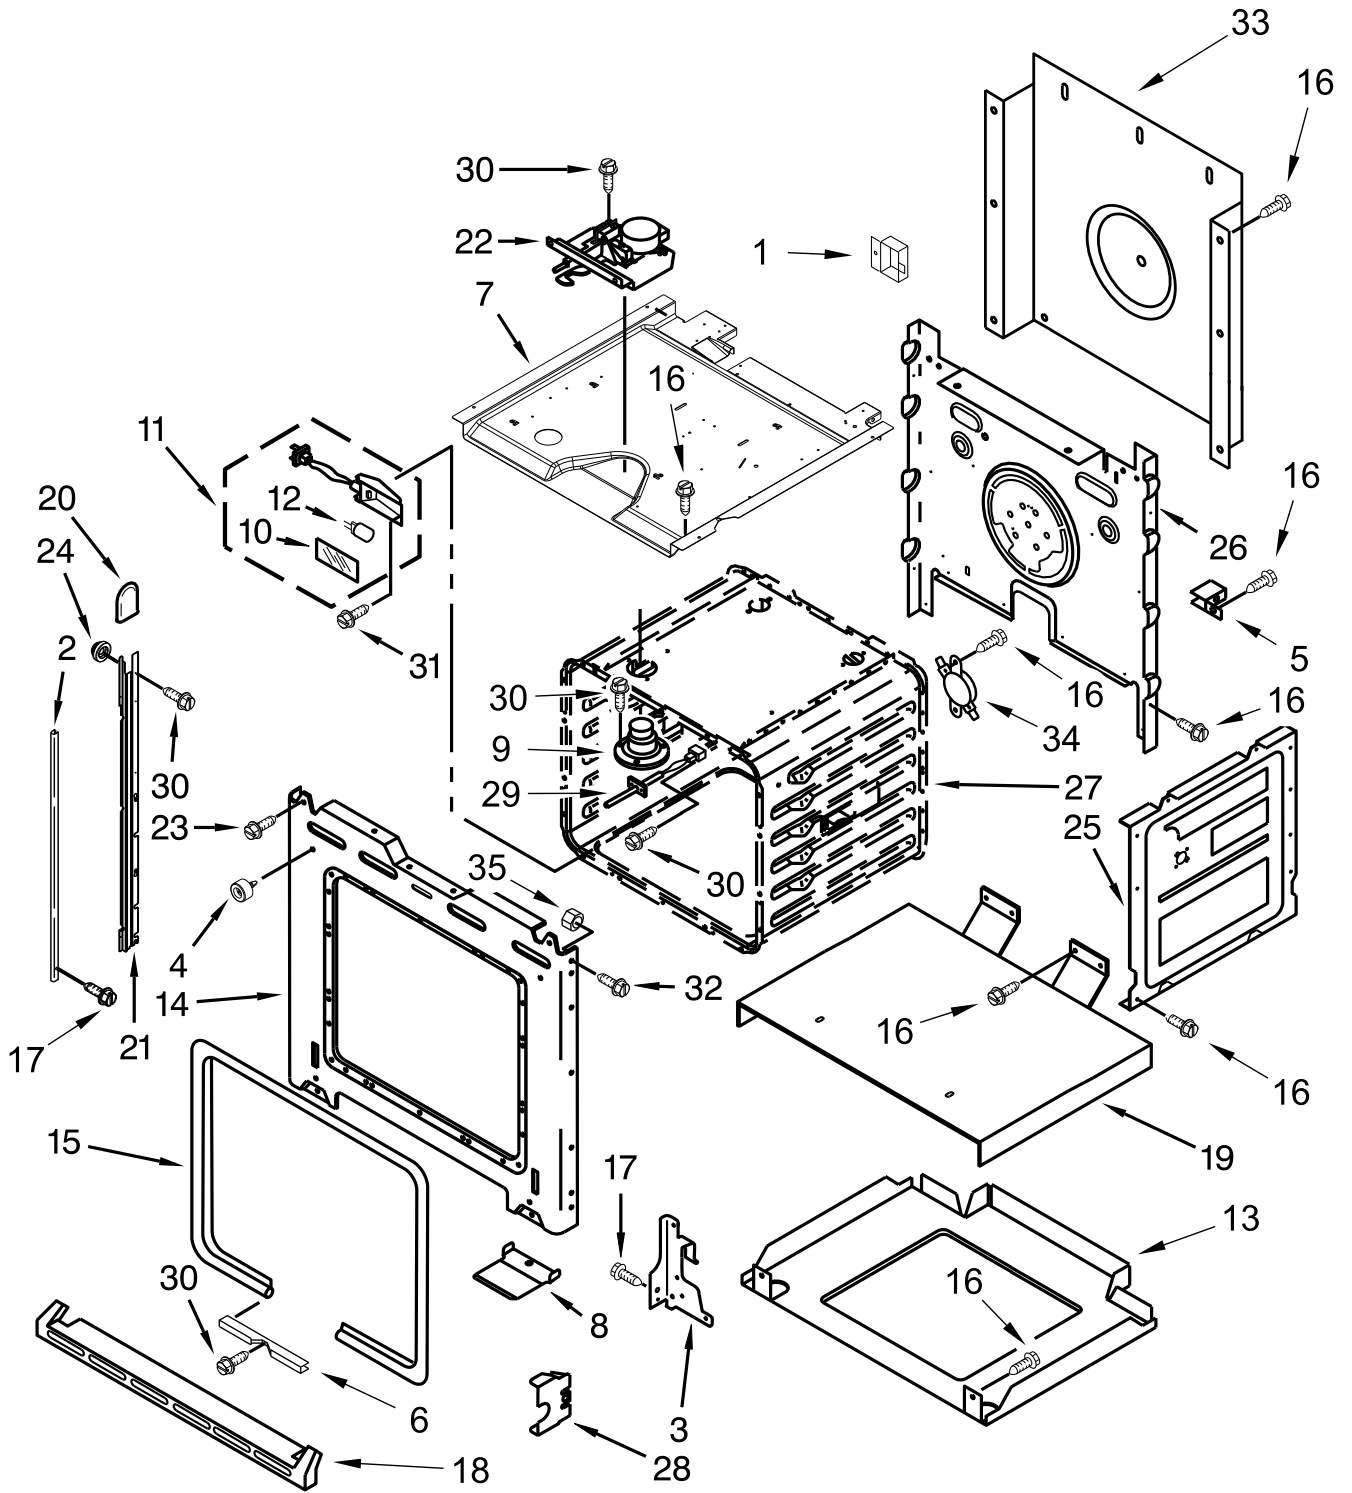

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8285593	Cover, Connector	12	W10169757	Bulb, Light	25	W10782197	Side, Chassis
2		Trim, Side	13	4450525	Base, Chassis	26	W10784207	Back, Chassis
	W10144984	Stainless (Left)	14	9760754	Frame, Front	27		Liner, Oven (Not serviceable)
	W10144983	Stainless (Right)	15	4455380	Gasket, Door	28	4452152	Bracket, Bottom Vent
3	4455605	Receiver, Hinge (Left)	16	7101P426-60	Screw	29	W10622170	Probe, Sensor
	4455606	Receiver, Hinge (Right)	17	4449743	Screw	30	4449154	Screw
4	W10105790	Bumper & Screw	18		Assembly, Bottom Vent Trim	31	4449748	Screw
5	4449845	Support, Bracket		W10144973	Stainless	32	4450038	Screw
6	4448933	Retainer, Gasket	19	4451476	Support, Insulation	33	4451747	Cover, Back
7	W10784377	Chassis, Top	20	4451605	Cap, Spacer	34	W10777627	Thermostat
8		Deflector, Vent Box	21	4450580	Rail, Side (Left)	35	4450118	Nut
	W10145009	Stainless		4450579	Rail, Side (Right)			FOLLOWING PARTS NOT ILLUSTRATED
9	4452158	Tube, Vent	22	W10195934	Latch, Motorized		4449314	Insulation, Wrap
10	W10169756	Lens, Light	23	4449040	Screw		4450363	Insulation, Back
11	W10307114	Assembly, Oven Light	24	4448444	Grommet, Mounting Rail			


TOP VENTING PARTS

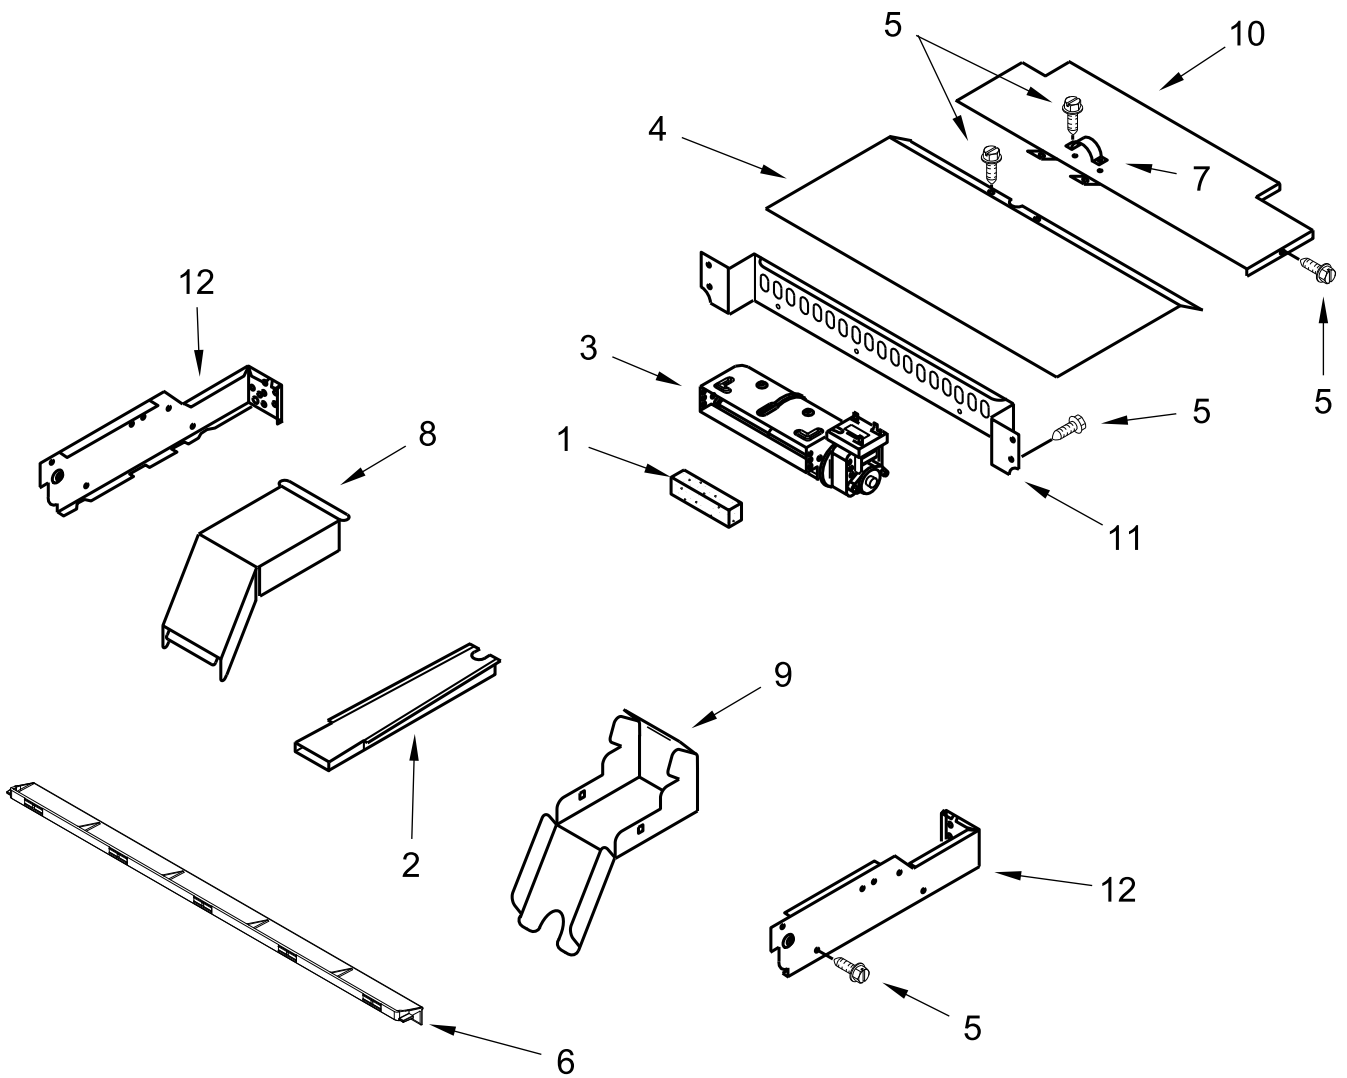

TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4451758	Block, Foam	7	4448664	Clamp, Conduit	12	4451598	Side, Control Top (Left)
2	4451759	Vent, Exhaust	8	4455178	Elbow, Top Vent		W10755214	Side, Control Top (Right)
3	W10176670	Blower (65MM)	9	4455177	Elbow, Bottom Vent			
4	4452365	Cover, Top Front	10	4450549	Cover, Top Rear			
5	7101P426-60	Screw	11	8303100	Back, Control			
6	4448547	Vent, Control Panel						


OVEN DOOR PARTS

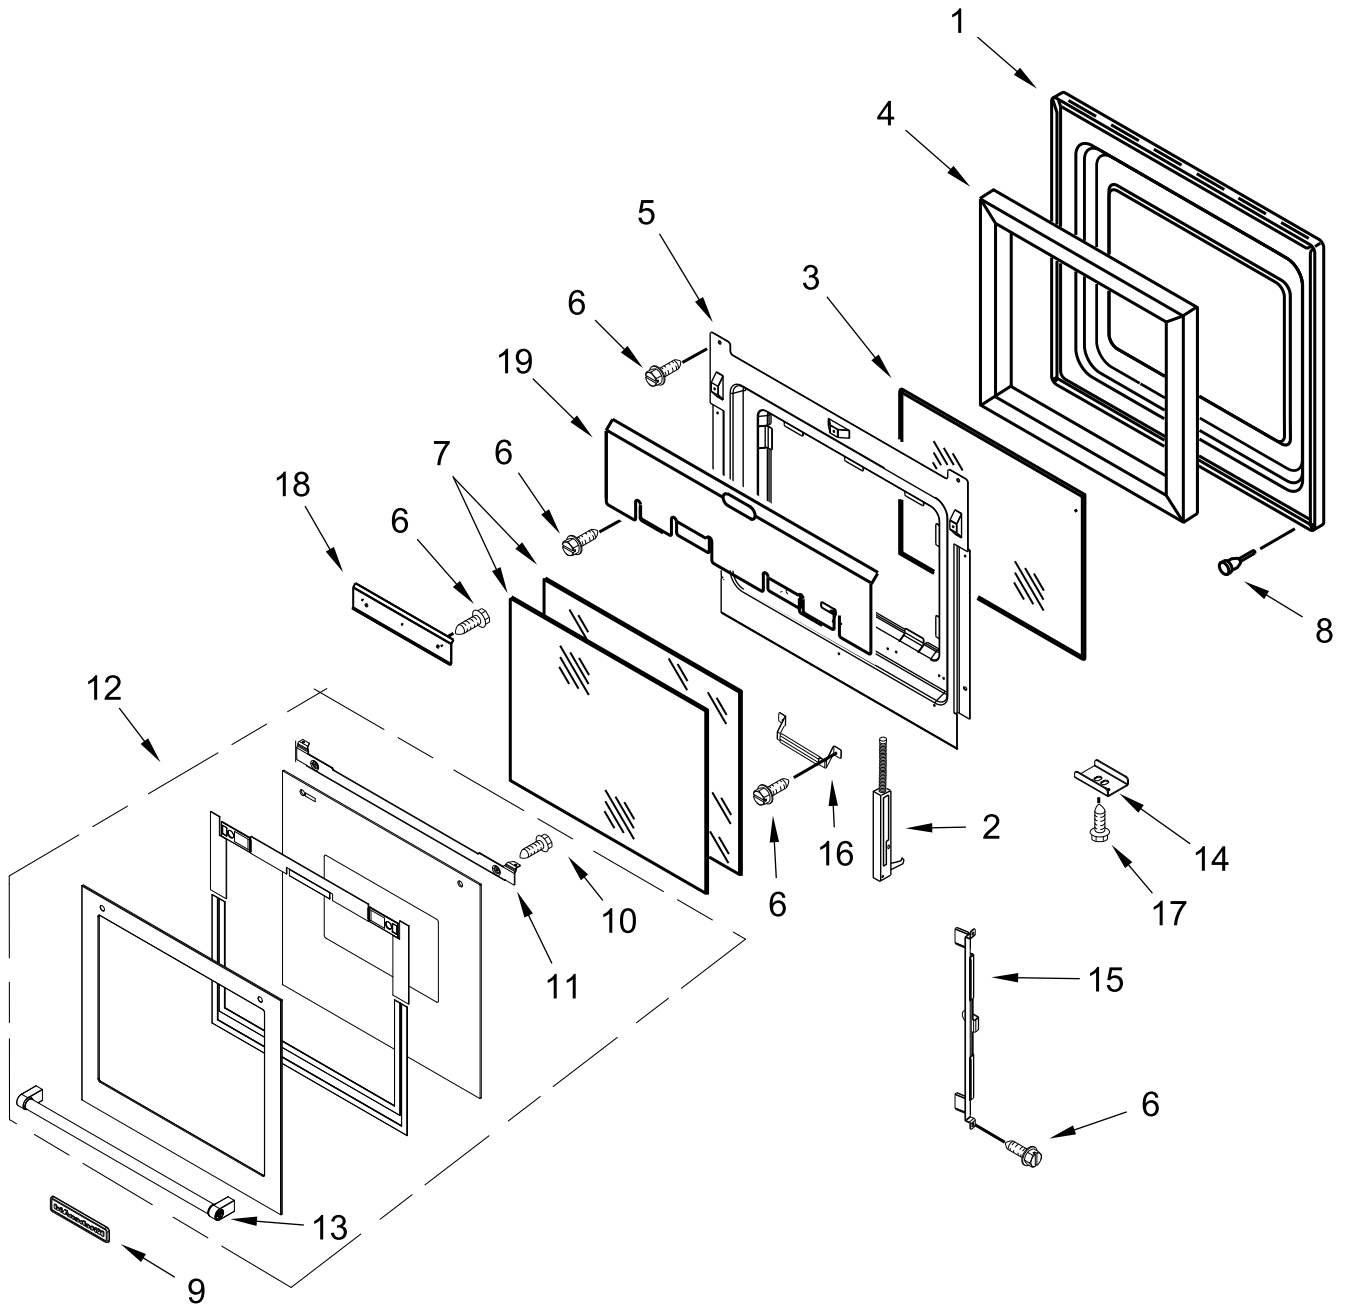

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8303698	Liner, Door	9		Badge	14		Clip Retainer
2	9760572	Hinge, Door (Left)		W10518672	Grey		W10789032	Stainless
	9760571	Hinge, Door (Right)	10	8533988	Screw	15	9759229	Bracket, Side
3	4449247	Glass, Inner	11	W10708952	Bracket, Handle	16	9759230	Bracket, Central
4	4451720	Insulation, Door	12		Assembly, Door	17	3400832	Screw (Black)
5	4457130	Retainer, Glass		W10692415	Stainless	18	4457112	Shield, Heat Bottom
6	7101P426-60	Screw	13		Assembly, Door Handle	19	4457101	Shield, Heat
7	9759223	Glass, Inner		W10737395	Stainless			
8	4448520	Bumper, Door						

INTERNAL OVEN PARTS

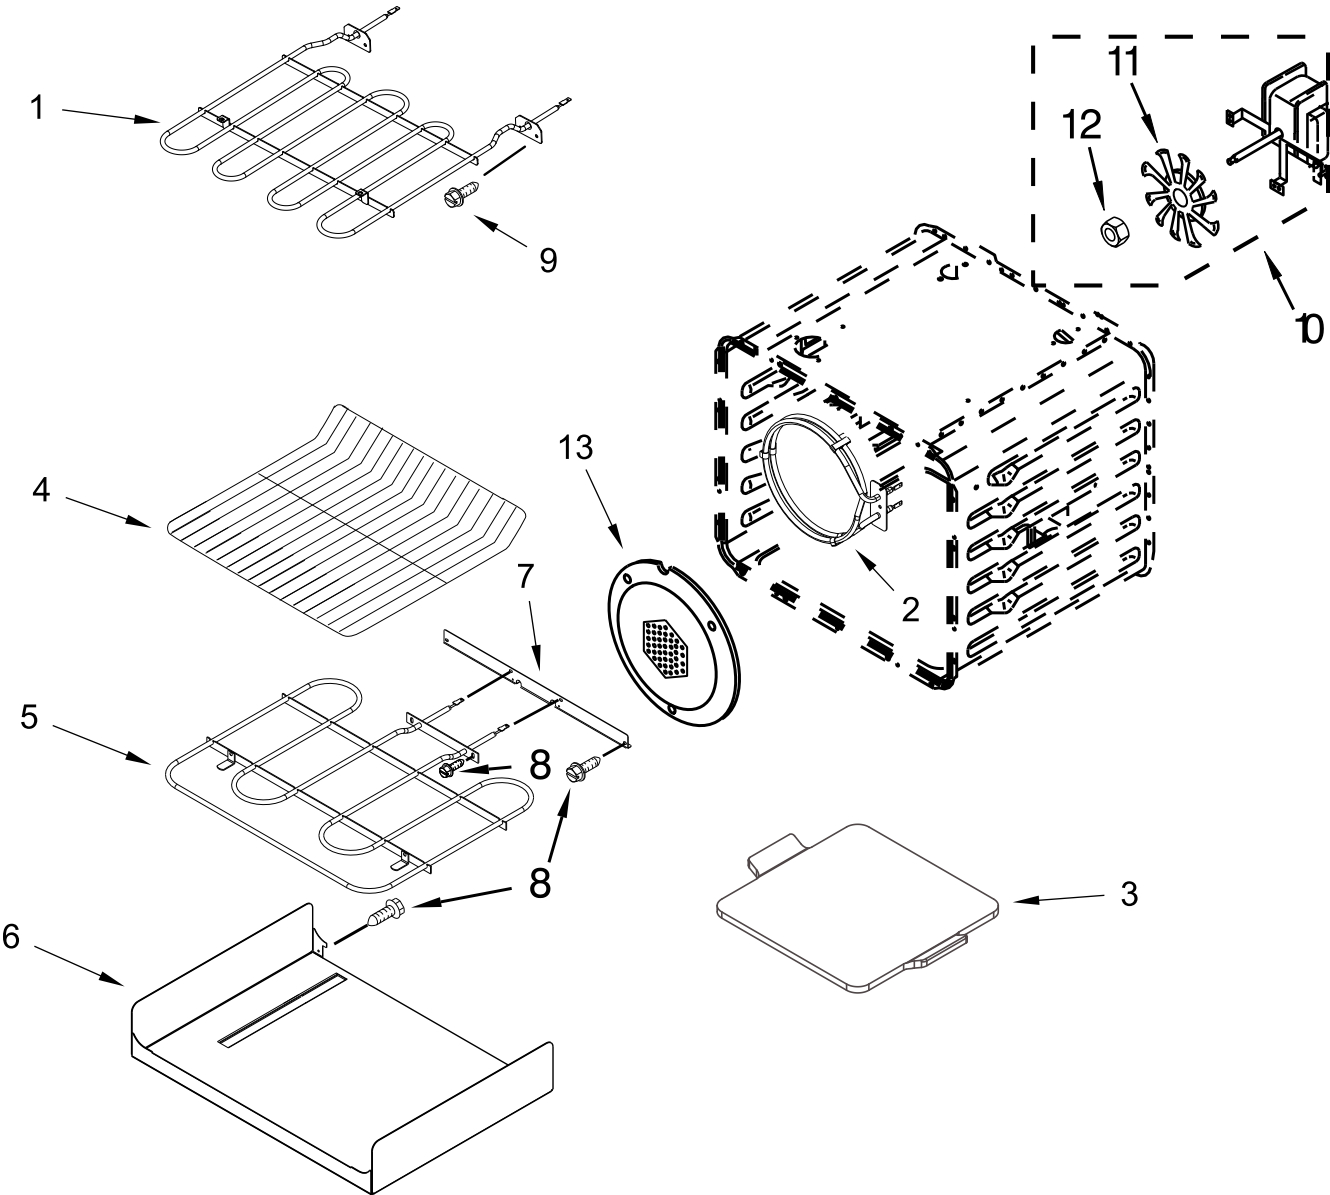

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10685631	Element, Broil	6	4455035	Tray, Hidden Bake	10	W10722667	Fan, Convection
2	9760769	Element, Convection	7	4450039	Cover, Hidden Bake Tray	11	W10631503	Blade, Fan
3	W10696057	Stone, Baking	8	7101P426-60	Screw	12	W10631504	Nut, Acorn
4	4448716	Rack, Oven	9	4449154	Screw	13	W10160821	Cover, Fan
5	W10207398	Element, Bake (Hidden)						

OPTIONAL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		Optional Parts
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	591014	Adhesive, Loctite
	482338	Sealer, Silastic
		ACCESSORIES
	W10355049	Wipes, Stainless Steel Cleaning
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	W10275756	Cleaner, Granite
	4396923	Broiler Pan and Grid