
INSTALLATION

GUIDE

TRITON™ LAVATORY FAUCET



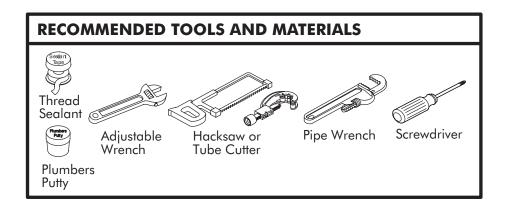

BEFORE YOU BEGIN


- Observe local plumbing codes.
- Shut off the main water supply.
- Inspect the supply tubing for damage. Replace as necessary.
- If possible, install this faucet before installing the sink.
- Kohler Co. reserves the right to make revisions in the design of faucets without notice, as specified in the Price Book.

SPOUT INSTALLATION

Apply a bead of plumbers putty or other sealant to the underside of the spout according to the putty manufacturer's instructions.

Insert the spout through the lavatory.

Slide the special washer onto the spout shank with the lift rod hole facing towards the back. Secure with nut.

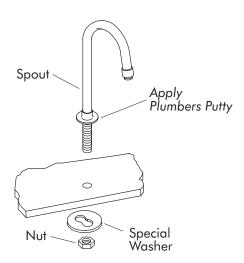

RIGID SUPPLY INSTALLATION


Thread the shank nut up onto the spout shank approximately 1".

Place plastic gasket and rubber washer into the top of the rigid supply sleeve.

Slide washer onto the spout shank.

Thread the sleeve of the rigid supply onto the spout shank. Tighten the sleeve hex-end.

Slide the washer down the shank to the sleeve. Thread shank nut down and tighten against the washer.

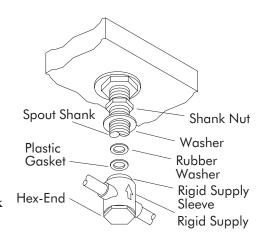

3 VALVE BODY INSTALLATION

Thread the locknuts approximately half way down onto the valve bodies.


Place fiber washers onto valve bodies.

Apply plumbers putty or other sealant to the underside of the escutcheon according to the putty manufacturer's instructions.

Insert valve body through the lavatory from underneath.

Thread escutcheon onto the valve body.

Fasten locknuts but do not tighten.

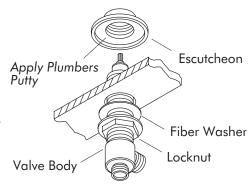


Align the valve body outlets with Supply Inlet Tube the rigid supply inlets.

Slide the compression nuts and ferrules onto the supply inlet tubes.

Insert the end of the supply inlet tube into the valve body outlet. Thread compression nut on to the valve body outlet.

Tighten locknut.

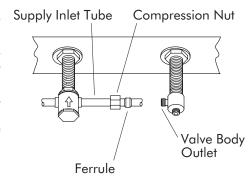

IF THE LAVATORY IS NOT INSTALLED, INSTALL IT AT THIS TIME. BE SURE TO FOLLOW ALL INSTRUCTIONS PACKED WITH THE LAVATORY.

HANDLE INSTALLATION


Install handles at this time according to the instructions packed with the handles.

5 SUPPLY INSTALLATION

Identify your supply connection type.

Connect the supply tubes to the faucet inlets and supply stops. (Left is hot — right is cold.)

Tighten all connections.

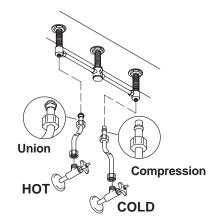

INSTALLATION CHECKOUT

Install strainer bodies, tailpieces, and P-traps as needed.


Ensure that all connections are tight.

Turn on the main water supply and check for leaks.

Remove the aerator.

Open both hot and cold valves and run water through the spout to remove any debris. Turn the valves off.

Reinstall the aerator.

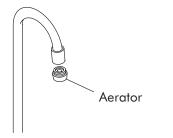

CALL US FOR HELP

Questions? Problems? First review the installation instructions to ensure correct installation. For additional assistance in the USA, call our Customer Service Department for direct help. You may also contact us at our web site listed below.

1-800-4-KOHLER

