




36" BUILT IN REFRIGERATOR

MODELS:

KBSD606ESS00 (Stainless Steel)


CABINET PARTS

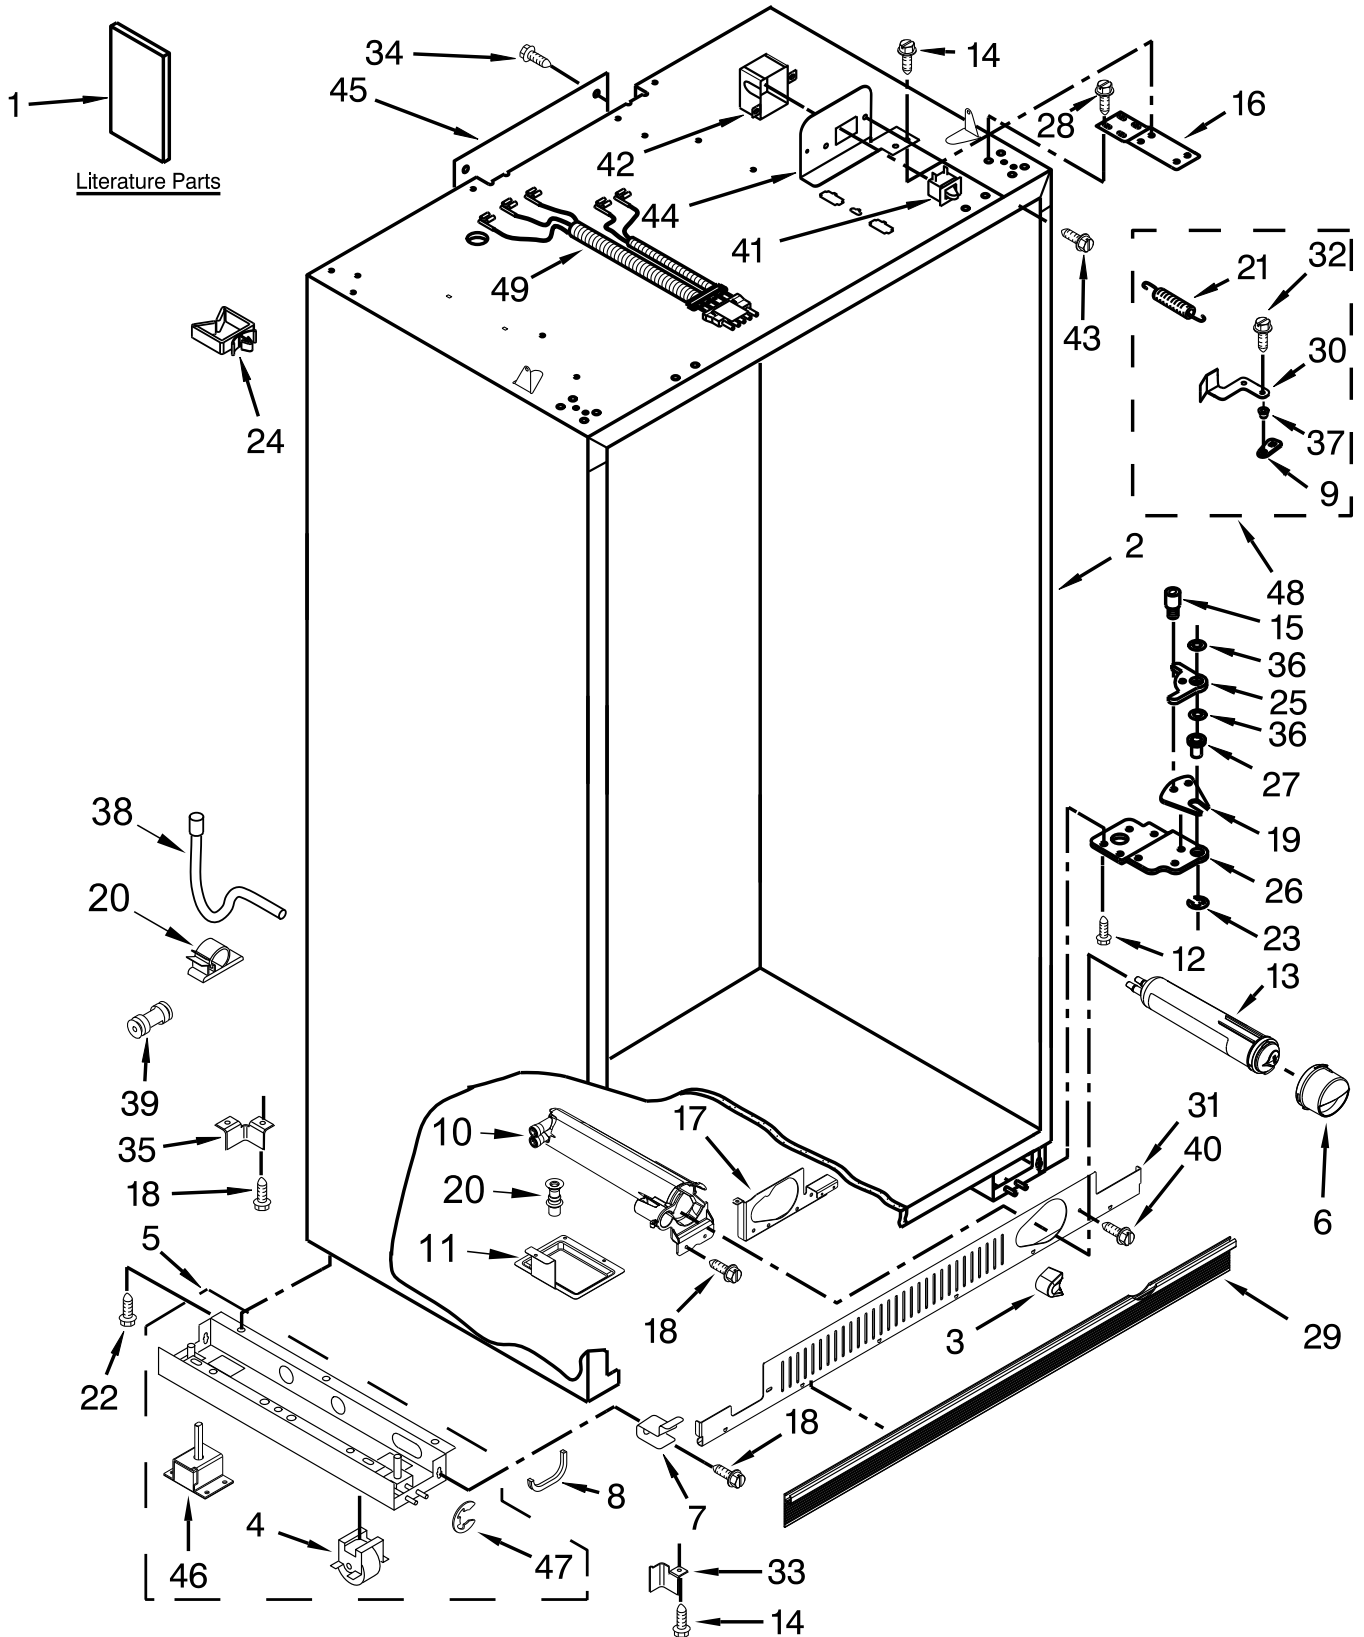

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	18	W10001250	Screw	36	2006346	Washer, Extension Arm
	W10763009	Use and Care Guide	19	2004994	Lock, Bushing	37	2316859	Bushing, Extension Arm
	W10763003	Energy Guide	20	W10663352	Clip	38	2314064	Tube, Drain
		Tech Sheet	21	2221242	Spring, Door Closure (Green)	39	W10271541	Connector, Union
	W10762990	English	22	486194	Screw	40	8281163	Screw (Stainless)
	W10762992	French	23	2005008	Ring, Bushing Retaining	41	1118894	Switch, Rocker Arm
	W10763010	Installation Instructions	24	W10129069	Clip, Wire		1115373	Switch, Rocker Arm Combination (Freezer)
2		Cabinet (Not A Serviceable Part)	25	W10482554	Cover, Bottom Gap	42	2215938	Cover, Switch
3		Button, Filter	26		Hinge (Bottom)	43	487415	Screw
4	W10138054	Assembly, Roller		2006779	Left Hand	44		Bracket, Switch
5		Support, Leveler Assembly		2006780	Right Hand		W10741112	Left Hand
	W10279275	Left Hand	27	2302876	Bushing, Adjustable		W10741111	Right Hand
	W10138423	Right Hand	28	8533913	Screw	45	2215612	Cover, Air Duct
6		Cap, Water Filter	29		Skirt, Bottom Grille	46	2005032	Leveler, Adjustable
	2260518B	Black		2209024B	Black	47	2006841	Ring, Retainer
7	2307640	Bracket, Grill Mounting	30		Extension Arm, Door Closer	48		Cam Assembly
8	2307584	Grommet, Crossover Tube		W10709785	Left Hand		W10121046	Left Hand
9	2320509	Stop, Door		W10728112	Right Hand		2307857	Right Hand
10	W10121140	Housing, Water Filter	31		Grille, Push Filter Bottom	49	W10780213	Assembly, Switch Wire
11	2318189	Tray, Filter Drip		2325184B	Black			
12	3400525	Screw	32	W10485630	Screw			
13	W10121146	Filter, Water	33		Bracket, Support Base (Front)			
14	489399	Screw		2006616	Left Hand			
15	3400230	Screw		2006556	Right Hand			
16	2257644	Hinge, Top	34	1157158	Screw			
17	W10674648	Bracket, Filter	35	2006617	Bracket, Base Support (Rear)			


CABINET AND TRIM PARTS

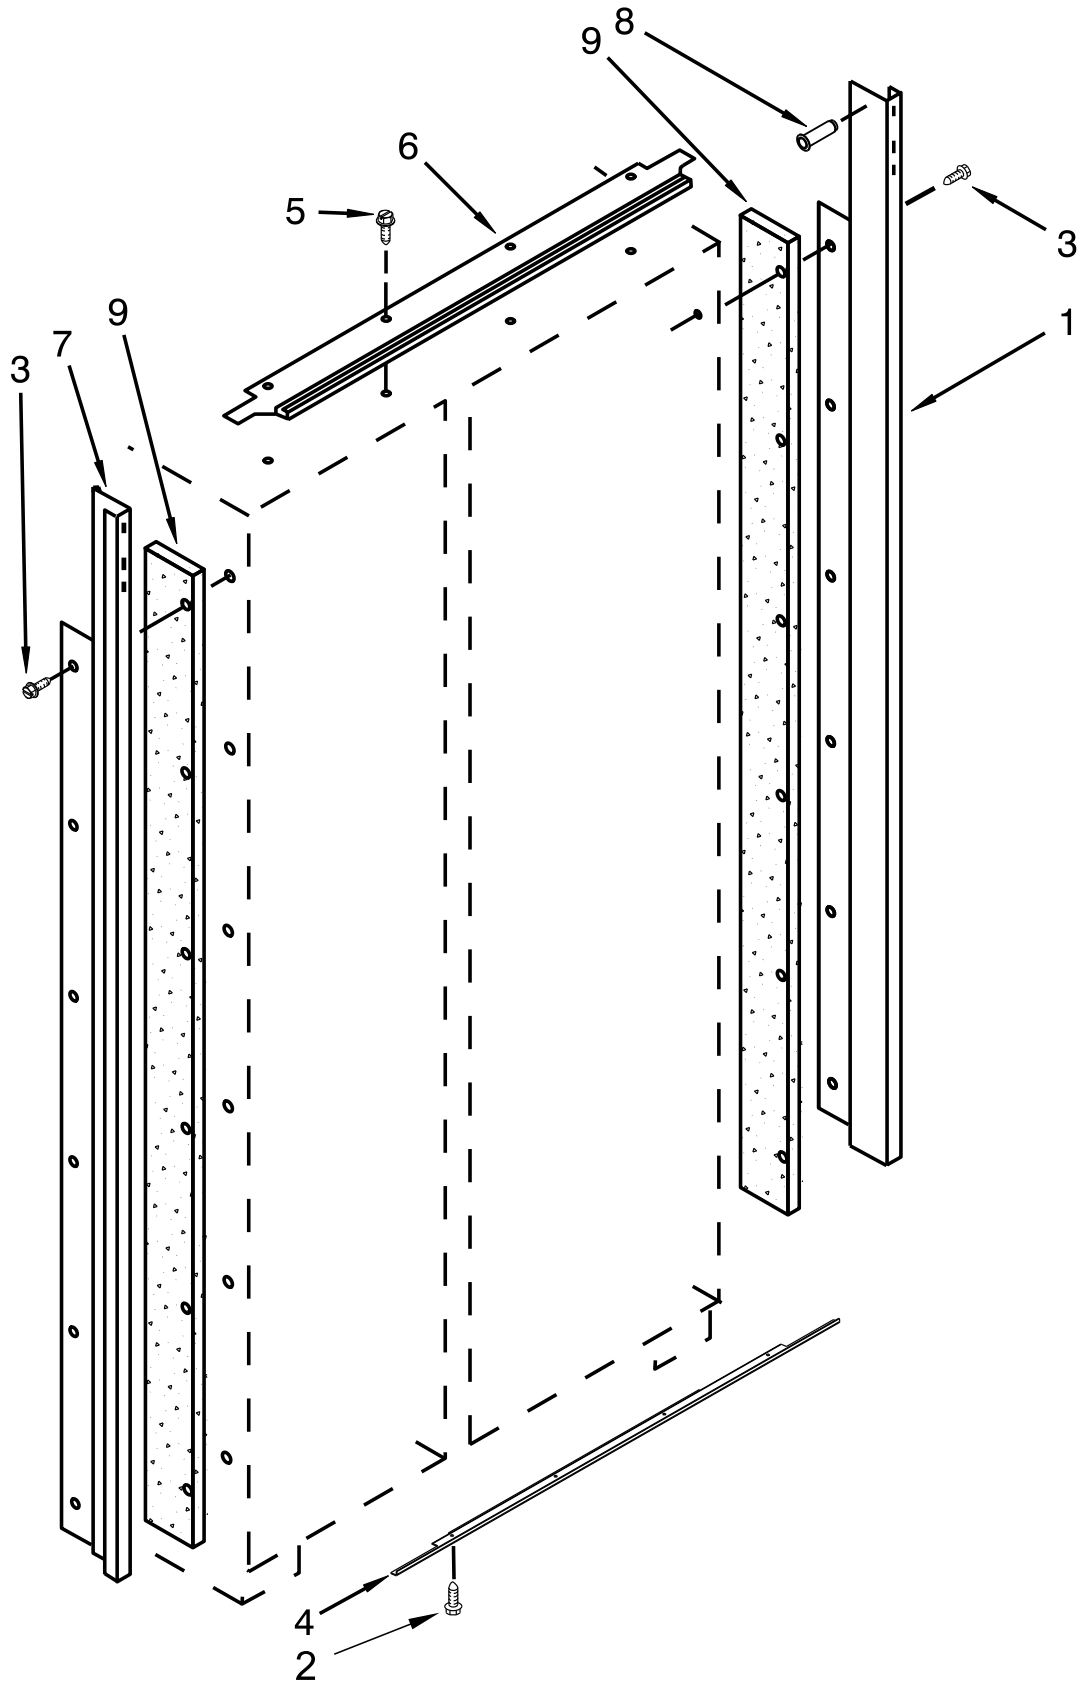

CABINET AND TRIM PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Cabinet Side (Right)	5	486194	Screw	8	W10121451	Insert, Blind Threaded
	W10568005	Aluminum	6		Trim, Cabinet (Top)	9	2005925	Seal, Side Trim
2	W10001250	Screw		2314016	Aluminum			
3	1163283	Screw	7		Trim, Cabinet Side (Left)			
4		Trim, Cabinet (Bottom)		W10568007	Aluminum			
	2316686	Aluminum						


REFRIGERATOR LINER PARTS

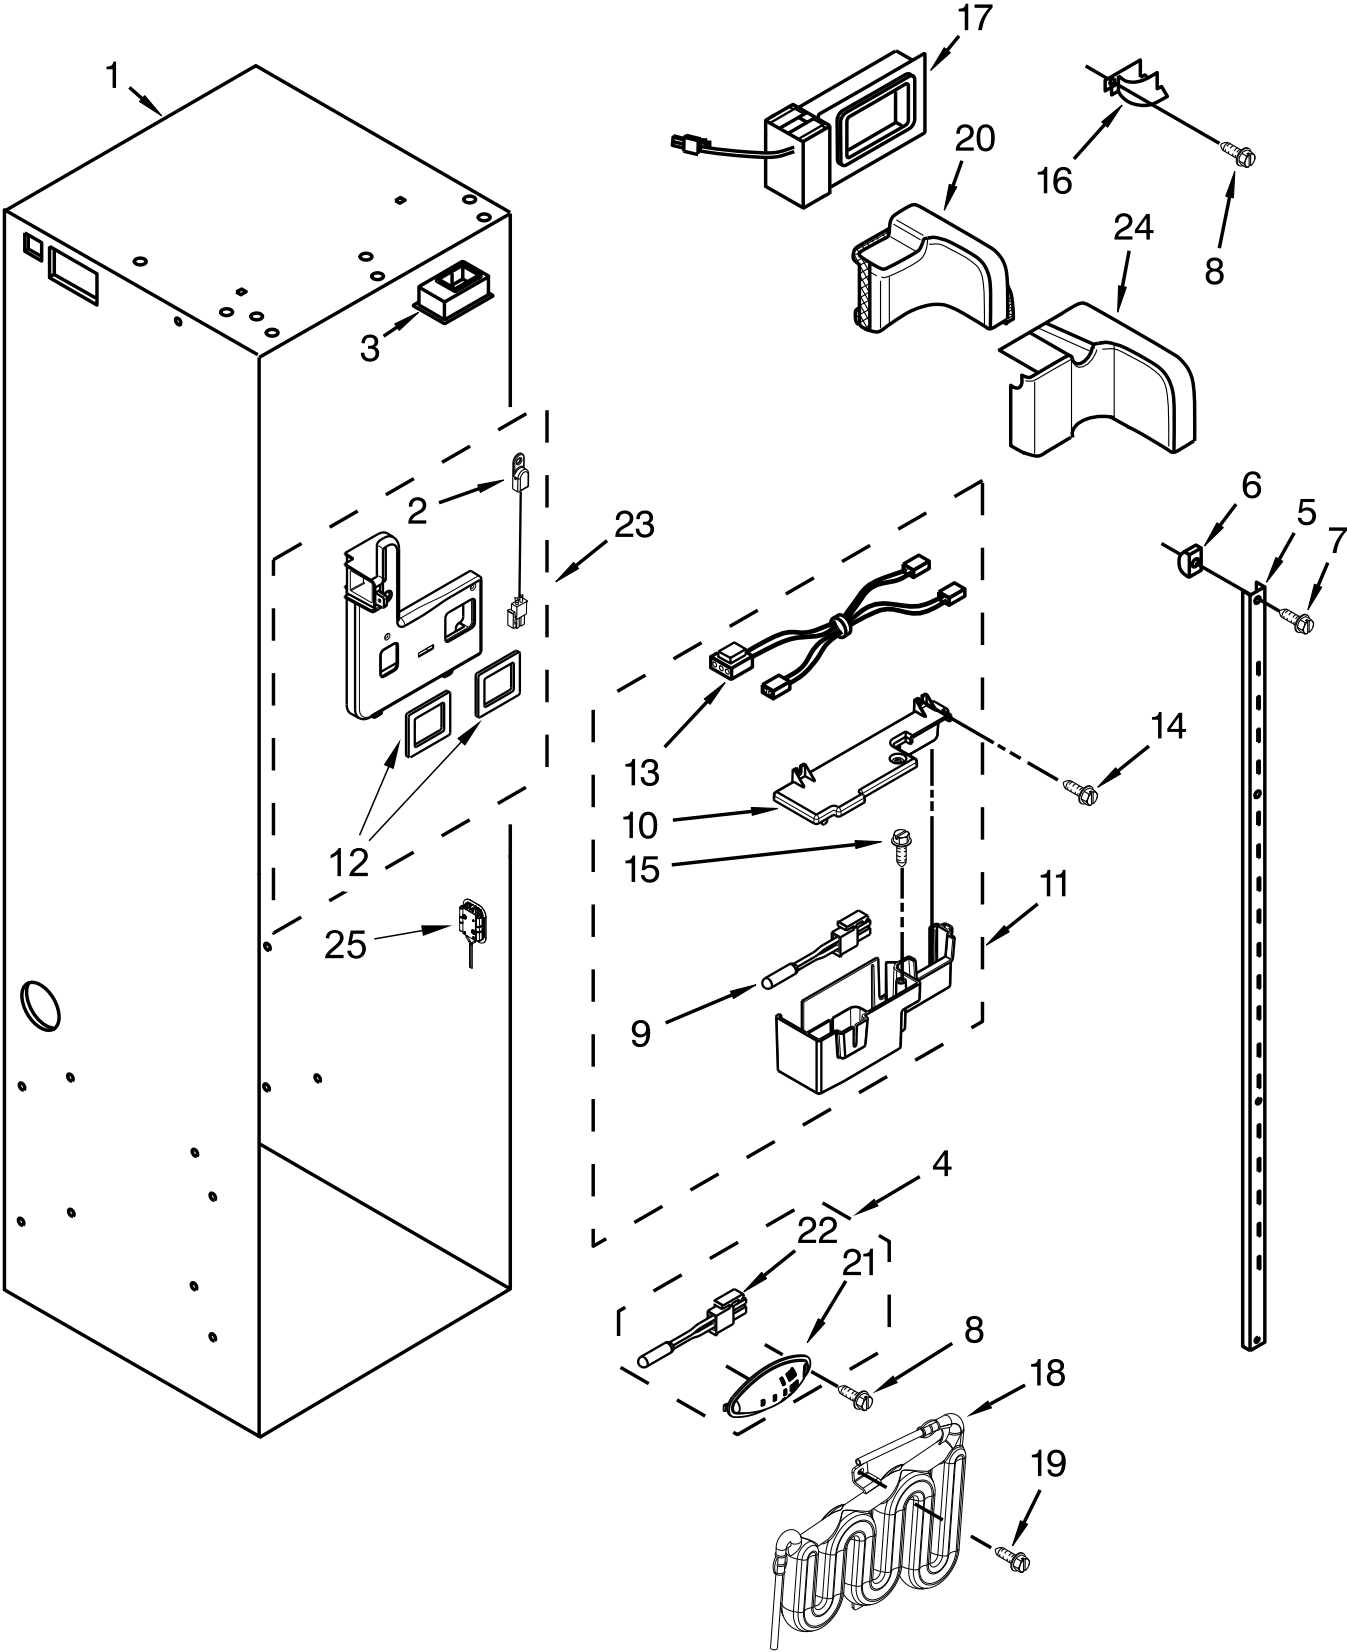

REFRIGERATOR LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	10	2302986	Lid, Baffle	18	W10645131	Reservoir, Water
2	2306010	Thermistor	11	W10169528	Assembly, Control Baffle	19	W10141518	Screw
3	2208970	Duct, Air	12	2259398	Seal, Air Duct	20	2309222	Assembly, Air Diffuser
4	2317844	Assembly, Thermistor	13	2310205	Assembly, Meat Pan Wire	21	2317105	Cover, Thermistor
5	2259077	Ladder, Shelf	14	8533929	Screw (Stainless)	22	2188820	Thermistor
6	520965	Support, Ladder	15	486194	Screw	23	W10475010	Assembly, Spacer
7	2006475	Screw (White)	16	2003577	Guard, Air Return	24	2309087	Cover, Air Diffuser
8	487539	Screw (Stainless)	17	2221296	Assembly, Air Baffle	25	W10607479	Assembly, LED Module
9	2302937	Thermistor						


FREEZER LINER AND AIR FLOW PARTS

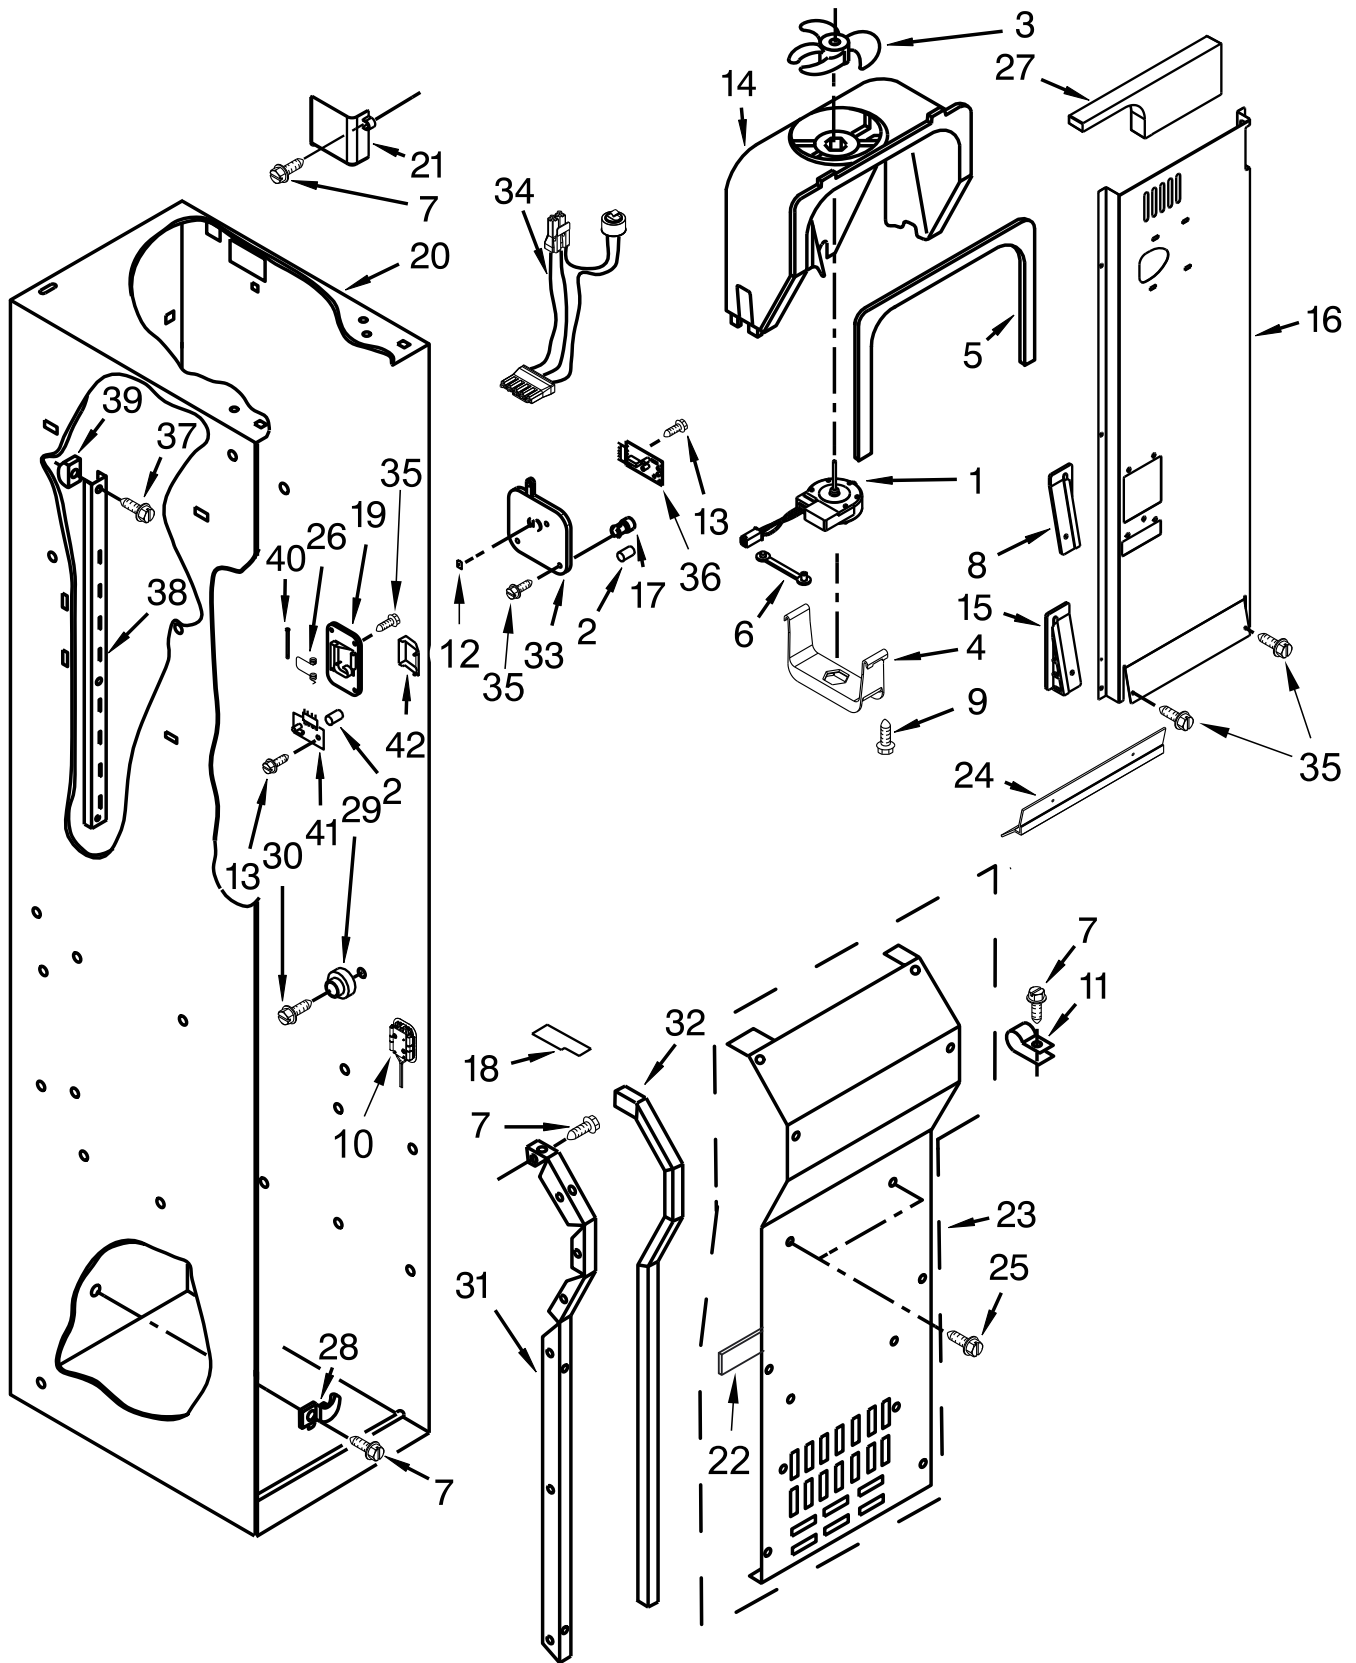

FREEZER LINER AND AIR FLOW PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10436861	Motor, Fan	17	2198643	Lens, Receiver	30	W10191952	Screw
2	2198665	Tube, Circuit Board	18		Block, Fan Scroll	31		Evaporator, Cover Rail
3	2169142	Blade, Fan		2209066	Left Hand		2221107	Left Hand
4	W10260421	Retainer, Fan Motor		2209481	Right Hand		2259355	Right Hand
5	2302816	Gasket, Scroll Assembly	19	2215650	Cover, Emitter	32	2220904	Gasket, Evaporator
6	W10321090	Grommet, Motor	20		Liner (Not A Serviceable Part)	33	2259493	Cover, Receiver
7	486194	Screw	21	2259025	Cover, Air Outlet	34	W10482187	Harness, Bi-Metal Wire
8	2259464	Wedge, Right Air Duct	22	W10581987	Gasket, Cover Evaporator	35	W10142283	Screw (White)
9	W10142283	Screw (White)	23	W10581991	Cover, Evaporator	36	W10290817	Board, Receiver Circuit
10	W10607479	Assembly, LED Module	24	2302849	Support, Air Duct	37	2006475	Screw (White)
11	2221070	Clamp, Tube	25	487539	Screw (Stainless)	38	2259032	Ladder, Shelf
12	2255563	Slide, Icemaker Shut Off	26	2198635	Spring, Door	39	2259397	Support, Ladder Screw
13	489214	Screw	27	2309282	Deflector, Air Duct	40	2198634	Pin, Door
14	2182119	Scroll, Fan	28	1112260	Support, Evaporator	41	W10193840	Board, Emitter Circuit
15	2259465	Wedge, Left Air Duct	29	2196205	Stud, Shelf	42	2198633	Flipper, Shut Off
16	2307773	Duct, Air						


MOTOR AND ICE CONTAINER PARTS

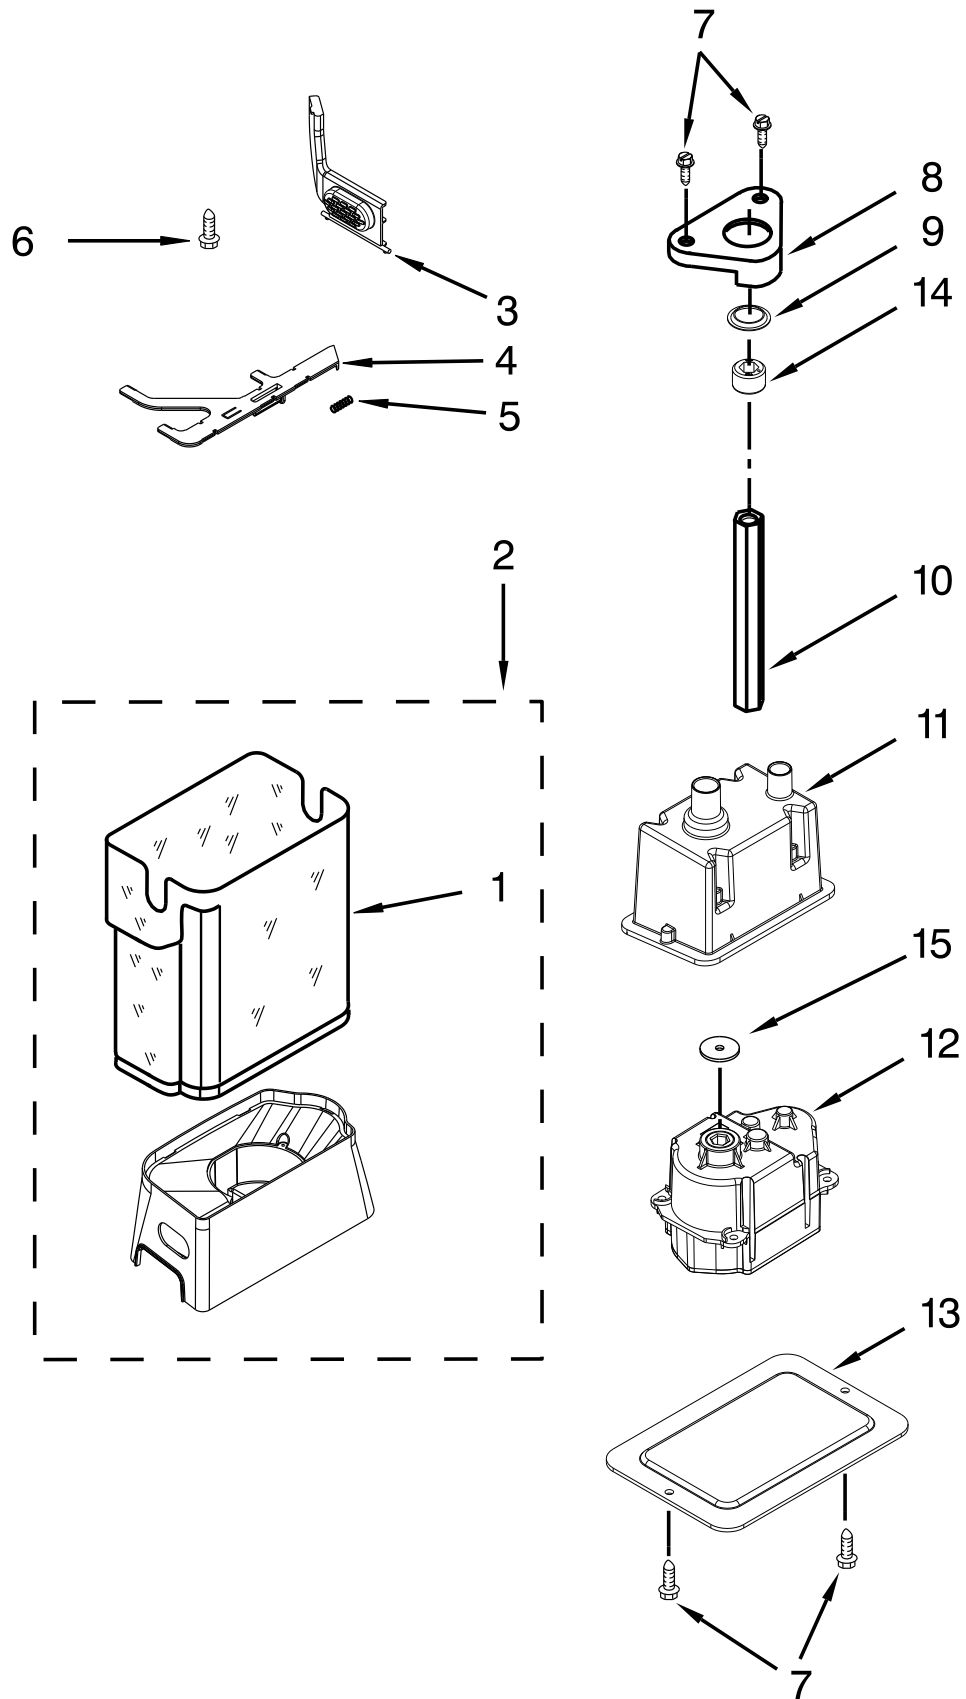

MOTOR AND ICE CONTAINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10134781	Bin, Lower Crusher	6	2198671	Screw (Stainless)	11	2318011	Enclosure, Motor
2	W10768485	Ice Container Assembly	7	8281163	Screw (Stainless)	12	2315547	Motor, Dispenser
3	W10749207	Button, Bin	8	2188919	Clip, Shaft	13	2318028	Cover
4	W10134784	Latch, Bin	9	2198628	Seal	14	2315559	Sleeve, Bearing
5	2198608	Spring, Latch	10	2318030	Shaft, Drive	15	W10254073	Washer


CONTROL PANEL PARTS

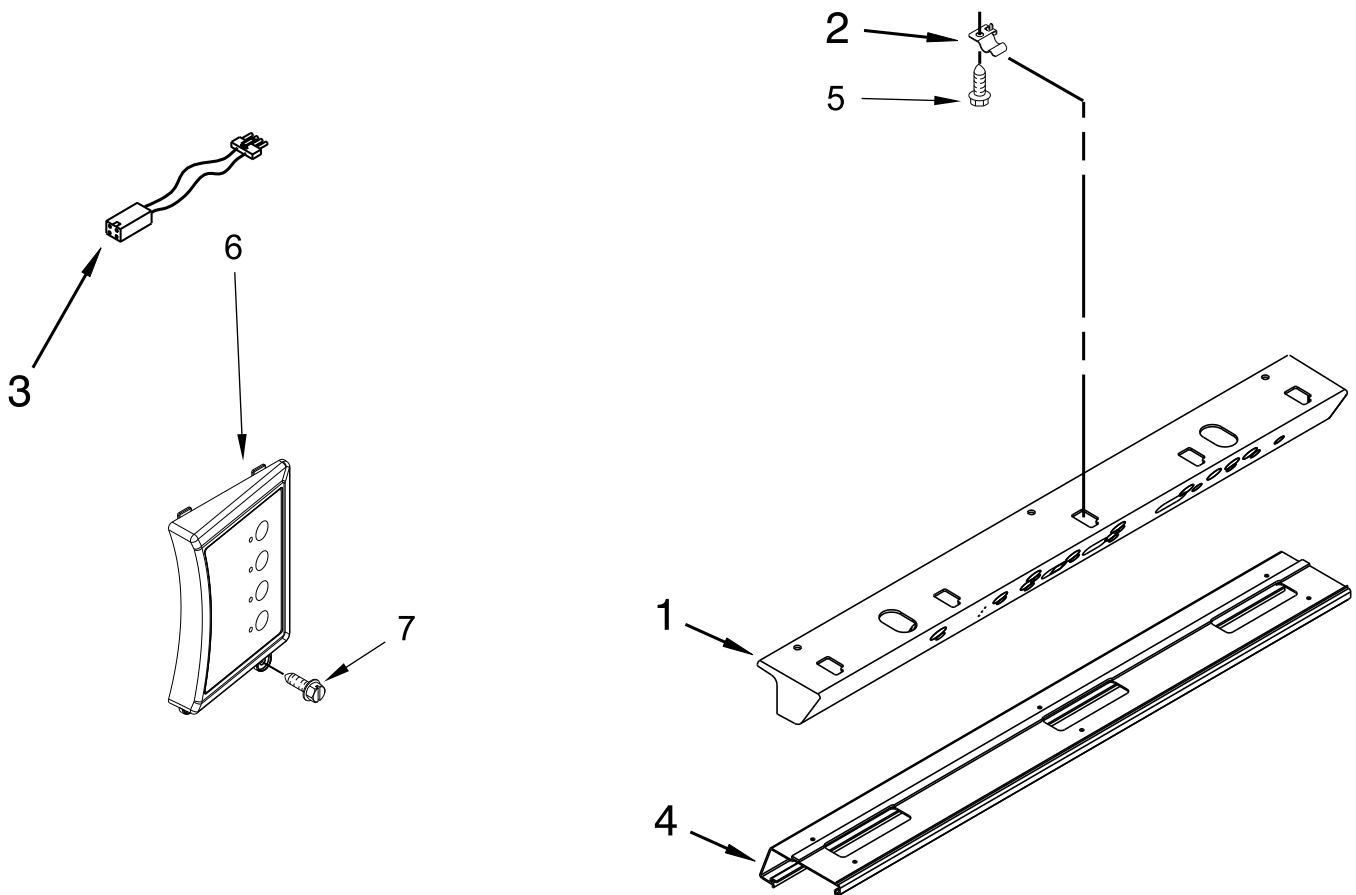

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10798003	Control Box	4	2324971	Bracket, Control Box	6	W10760791	Assembly, User Interface
2	2317000	Clip, Control Box	5	487539	Screw (Stainless)	7	W10142283	Screw (White)
3	W10458299	Wire, Jumper						


REFRIGERATOR SHELF PARTS

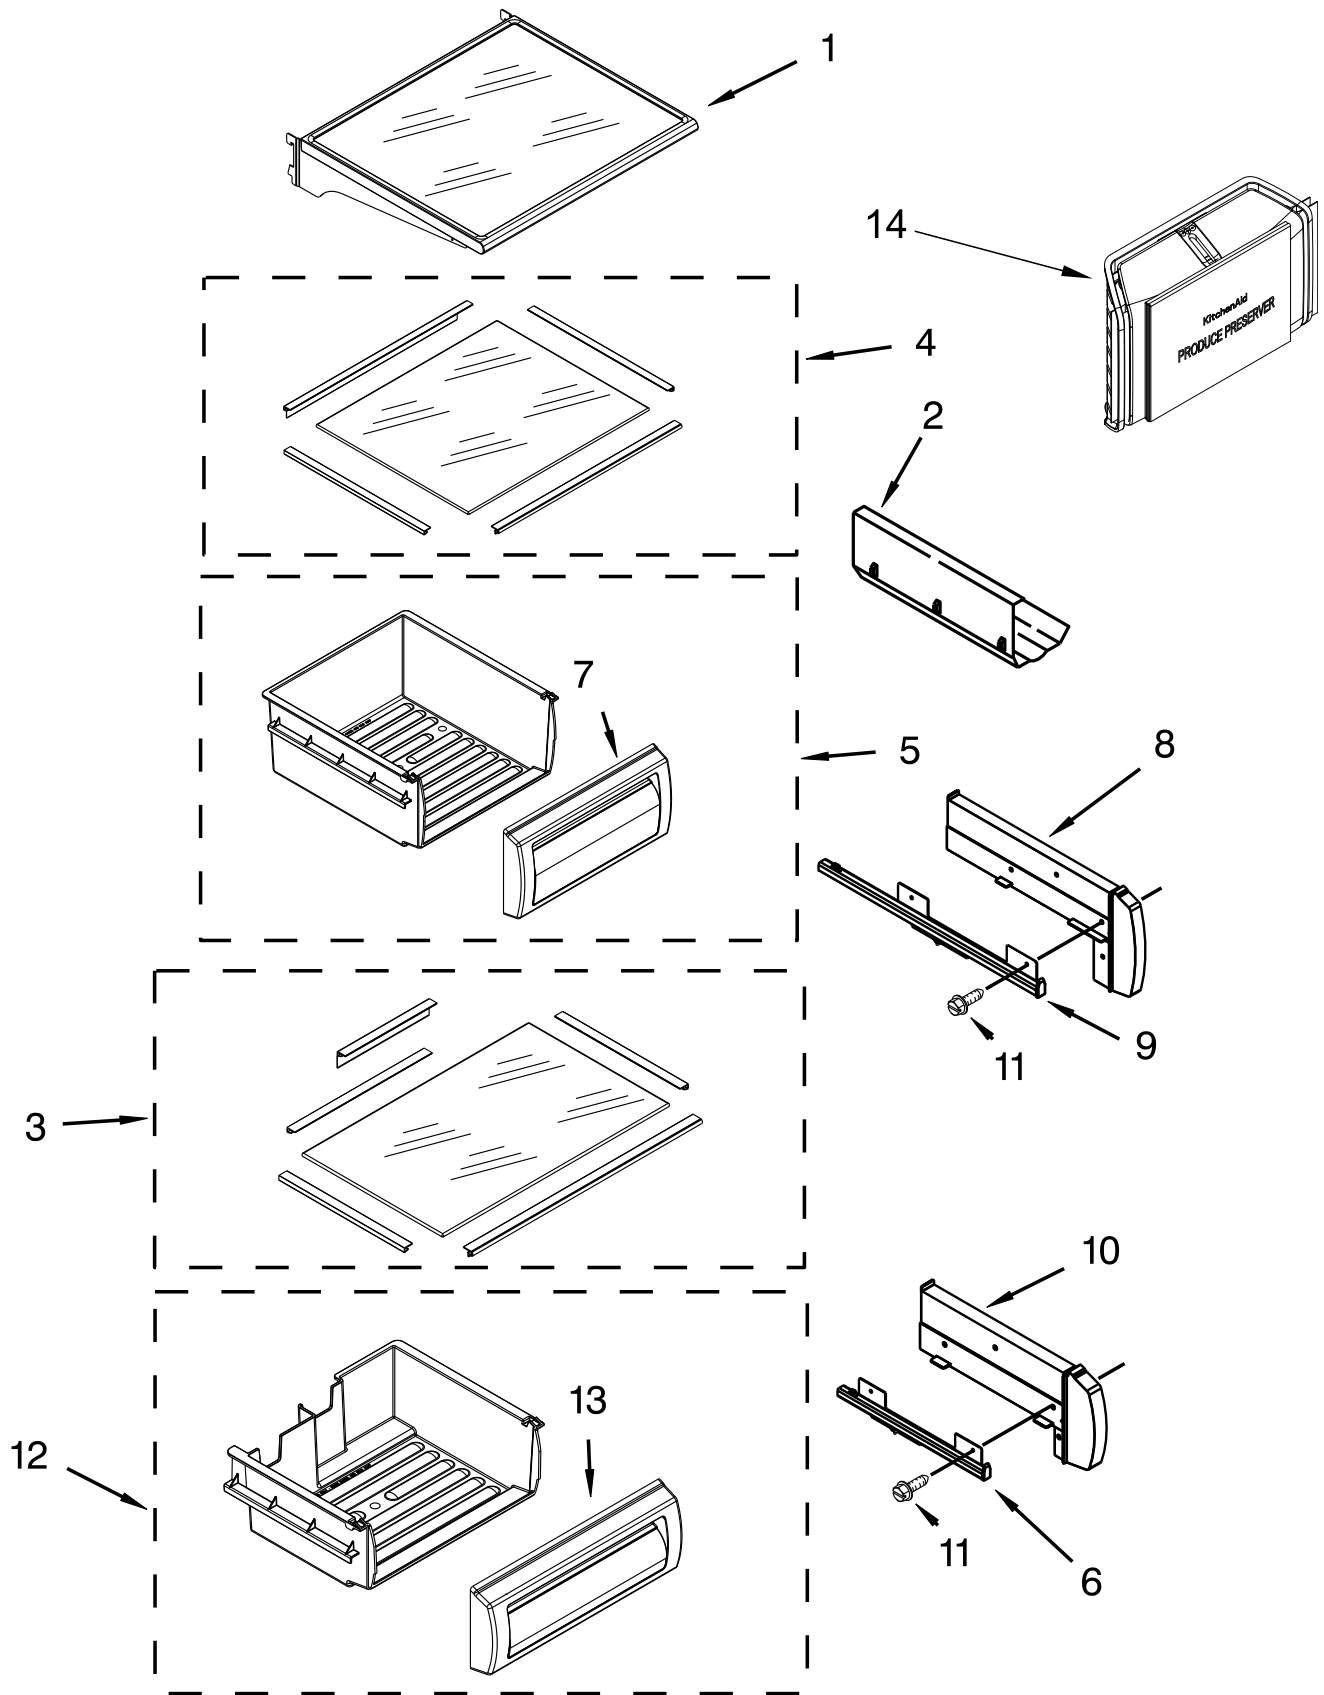

REFRIGERATOR SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10760843	Assembly, Shelf	8		Spacer, Crisper	11		Left Hand
2	W10701859	Rack, Wine		2256223	Left Hand		8533928	Screw (Stainless)
3	W10778076	Assembly, Meat Pan		2256222	Right Hand			Right Hand
4	W10778074	Assembly, Crisper	9		Slide, Crisper		8533929	Screw (Stainless)
5	W10407623	Assembly, Crisper Pan		2302956	Left Hand	12	W10407626	Assembly, Meat Pan
6		Slide, Meat Pan	10	2302957	Right Hand	13	2256365	Assembly, Meat Pan
	2302954	Left Hand		2256243	Left Hand			Front
	2302955	Right Hand		2256244	Right Hand	14	W10593207	Assembly, Produce
7	2256247	Assembly, Crisper Pan						Preserver
		Front						


FREEZER SHELF PARTS

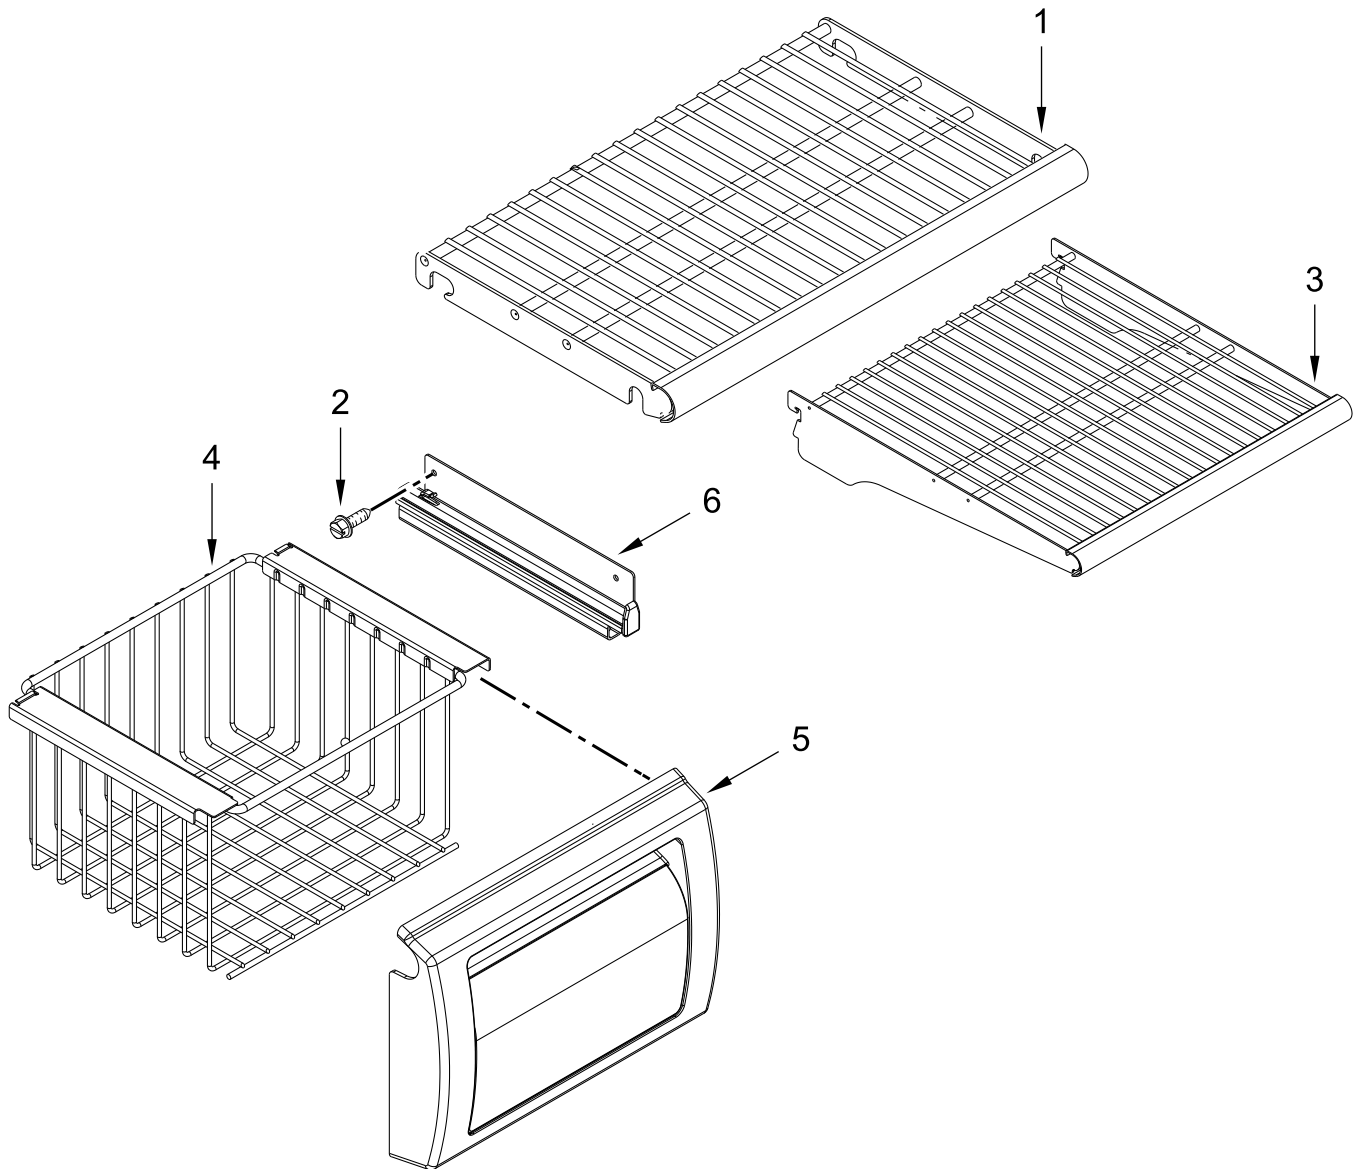

FREEZER SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10759071	Shelf, Wire	4	2259081	Basket, Freezer	6		Slide, Basket
2	8533928	Screw (Stainless)	5	2256269	Assembly, Basket Front		2259318	Left Hand
3	W10759077	Fixed, Wire Shelf					2259317	Right Hand


REFRIGERATOR DOOR PARTS

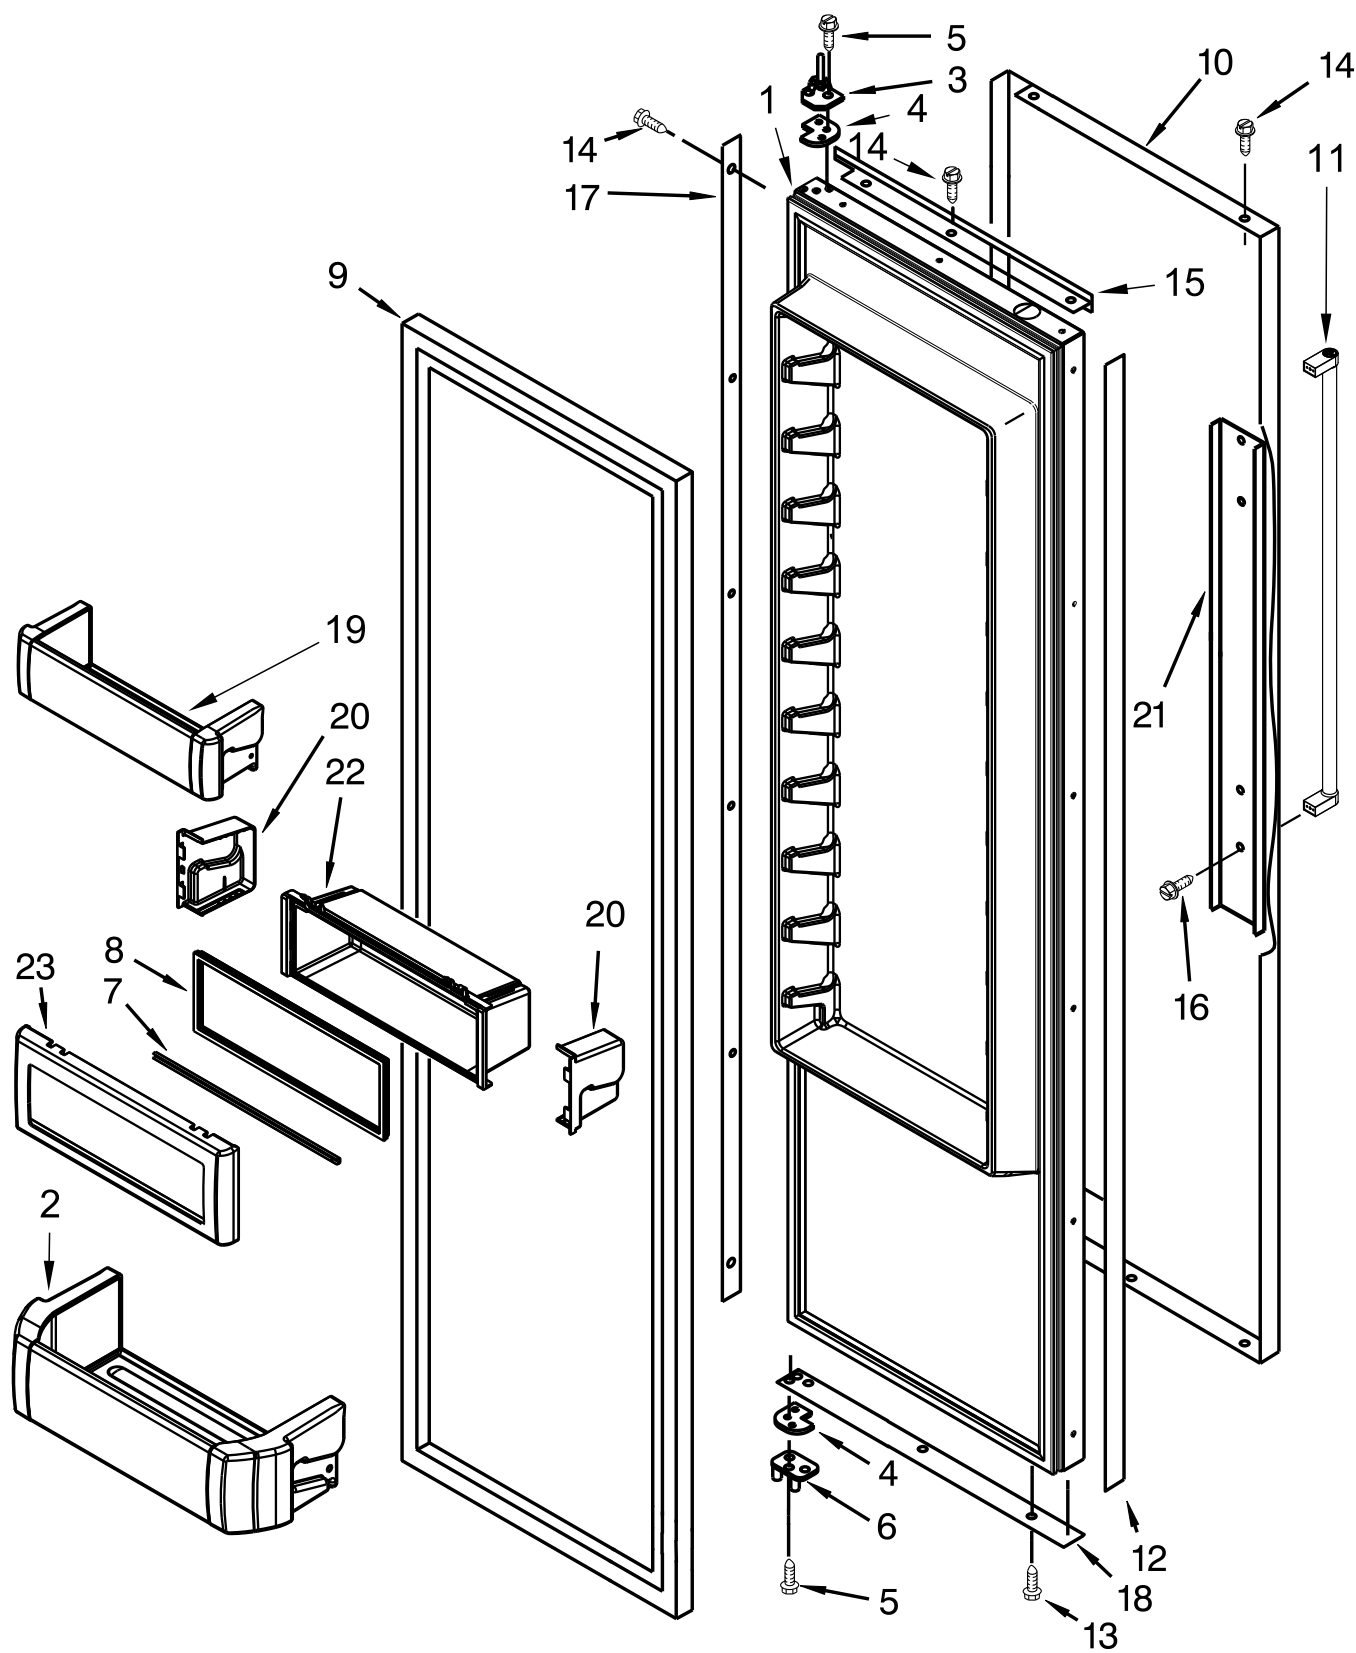

REFRIGERATOR DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10761877	Door, Refrigerator	10		Skin, Door	18	W10761935	Spacer, Door Skin (Bottom)
2	W10323746	Bin, Gallon Door		W10756458	Stainless	19	W10323598	Bin, Door
3	W10485980	Assembly, Hinge (Top)	11		Handle, Door	20		End Cap
4	2316804	Spacer, Door Hinge Bottom		W10541592	Stainless		W10323173	Left Hand
5	W10162602	Screw	12	W10756209	Spacer, Hinge Side Door		W10323172	Right Hand
6	2302878	Assembly, Bottom Hinge	13	488568	Screw (Stainless)	21	W10127710	Plate, Handle Door
7	2222795	Rail, Utility Lid	14	8281250	Screw (Stainless)	22	W10323035	Bin, Utility Center
8	2222981	Gasket, Utility Bin	15	W10758121	Spacer, Door Skin (Top)	23	W10131132	Door, Utility Bin
9		Gasket, Door	16	308544	Screw			
	W10760884	Grey	17	W10758113	Spacer, Handle Side Door			


FREEZER DOOR PARTS

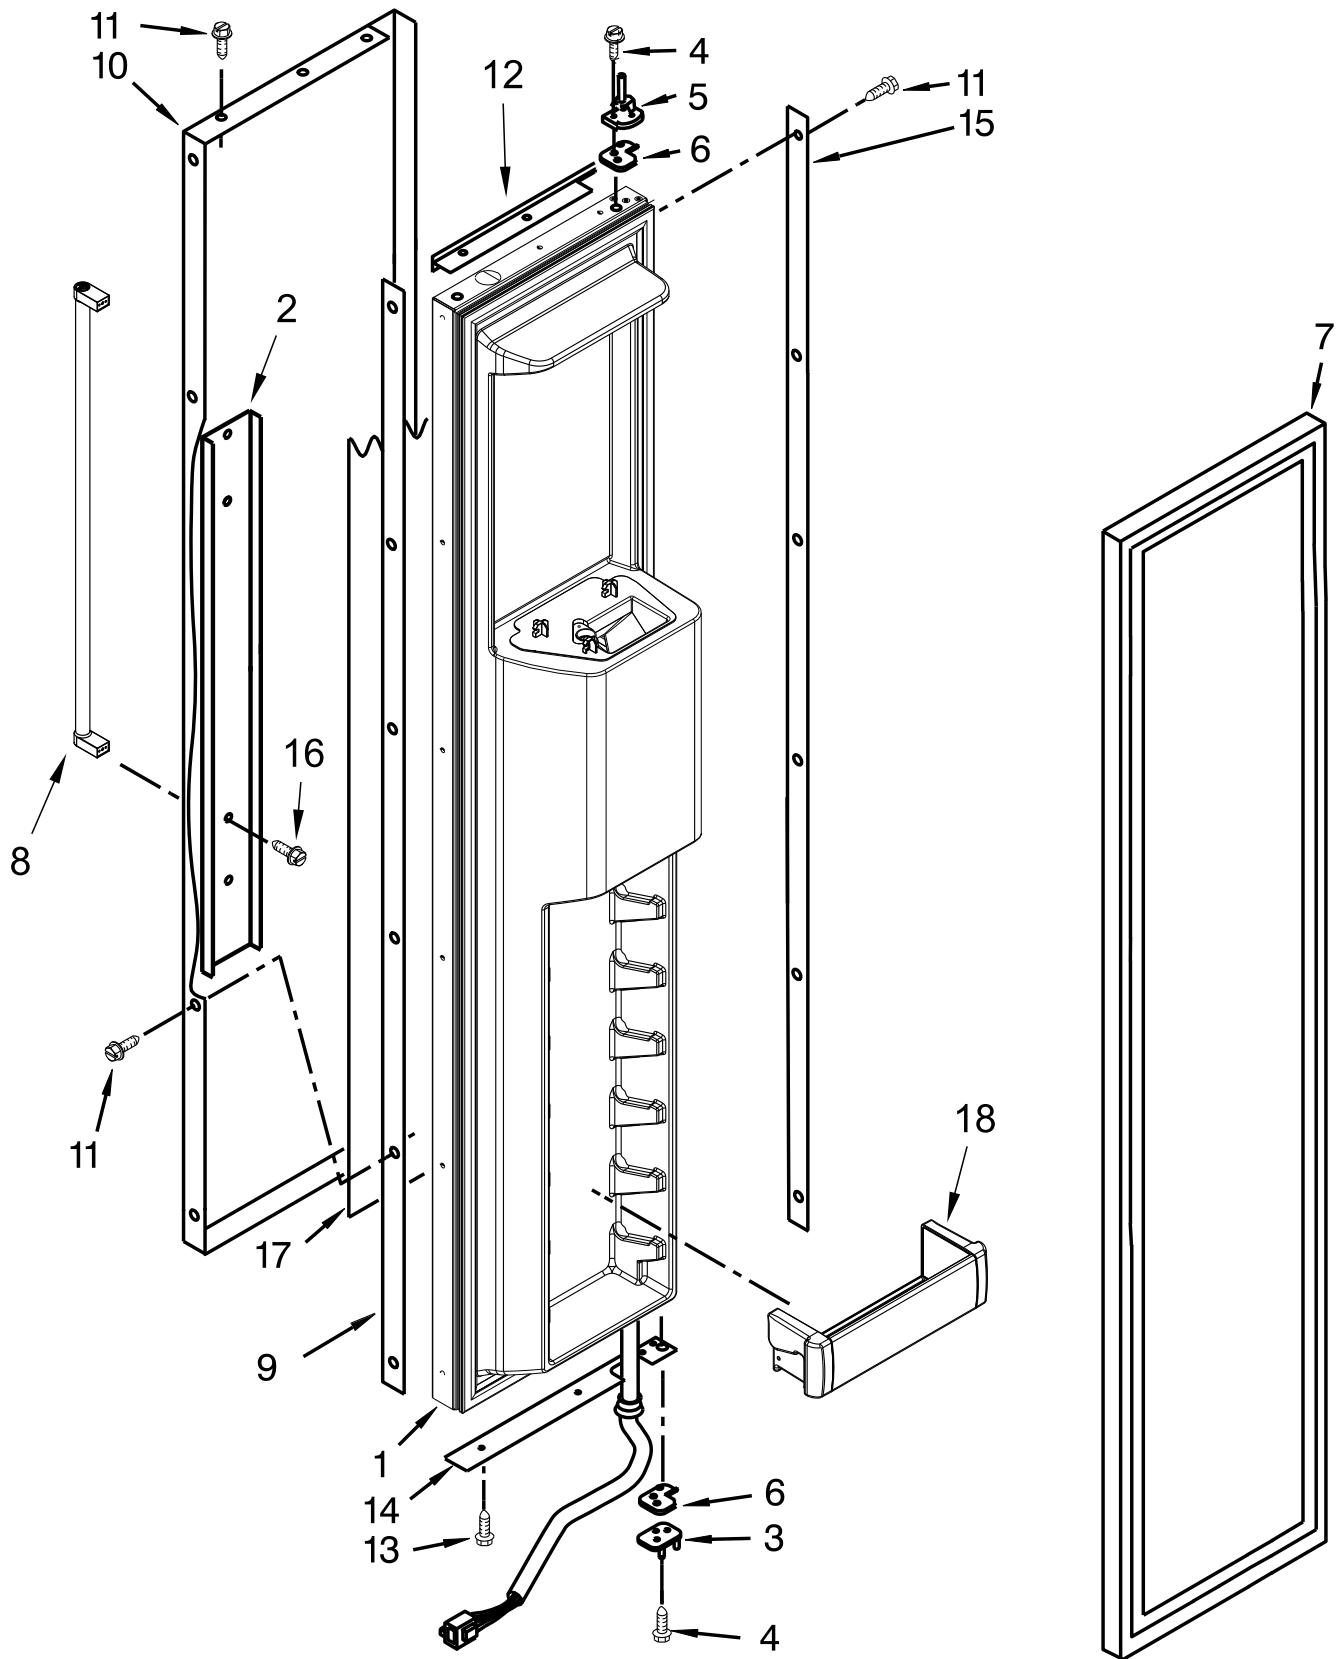

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10769019	Freezer Door	8		Door Handle	14	W10758111	Spacer, Door Skin
2	W10127710	Plate, Handle Door		W10541592	Stainless			Bottom
3	2302879	Assembly, Bottom Hinge	9	W10758113	Spacer, Handle Side	15	W10756209	Spacer, Hinge Side
4	W10162602	Screw			Door			Door
5	W10485980	Assembly, Hinge (Top)	10		Skin, Door	16	308544	Screw
6	2316804	Spacer, Door Hinge		W10756216	Stainless	17		Filler, Door
7		Bottom	11	8281250	Screw (Stainless)		2325196	Top
		Gasket, Door	12	W10758109	Spacer, Door Skin (Top)		2325197	Bottom
	W10761963	Grey	13	488568	Screw (Stainless)	18	W10323601	Bin, Door


DISPENSER PARTS

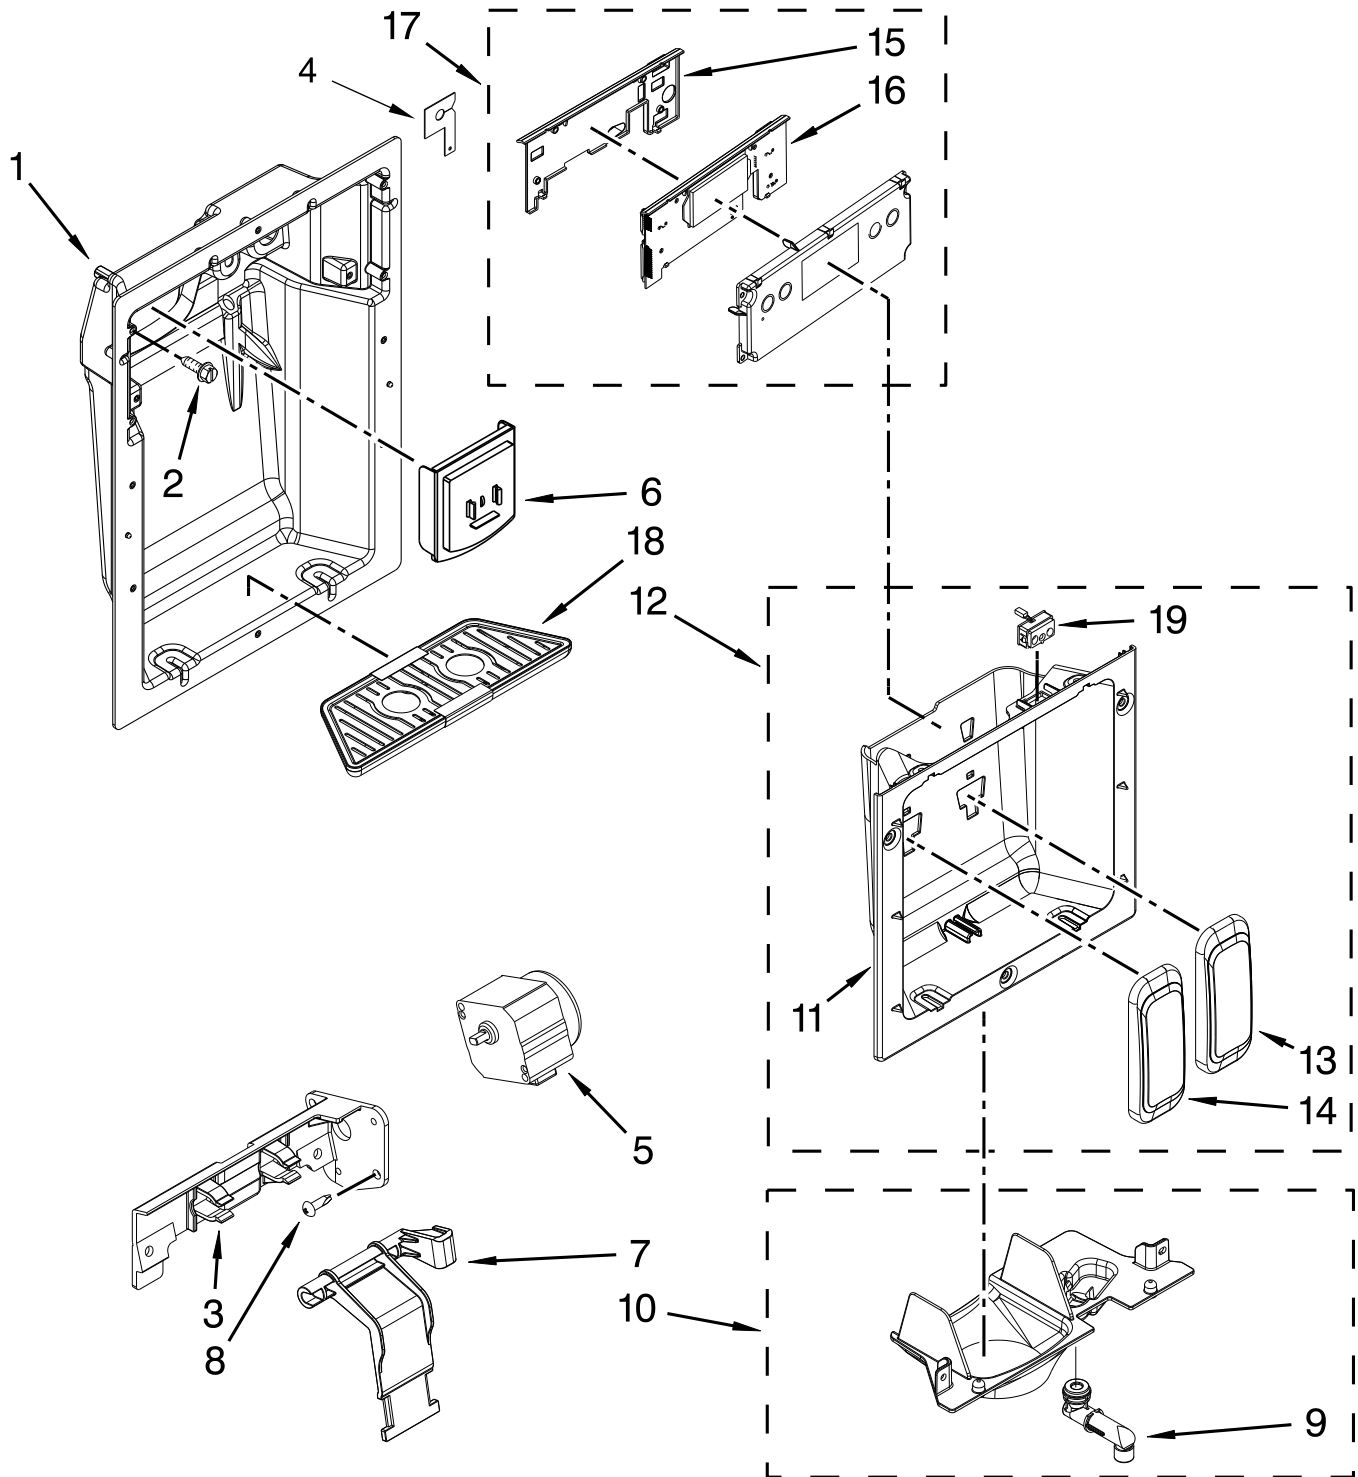

DISPENSER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Housing, Dispenser (Not Serviced)	10	2318017	Assembly, Separator	16	2321746	Assembly, User Interface Control Cover
2	486194	Screw	11		Housing, Middle (Not Available Order Item 12)	17	W10151236	Assembly, User Interface
3	W10542660	Bracket, Motor	12	W10260622	Assembly, Housing	18		Drip Tray Assembly
4	2305447	Clip, Wiring	13		Water, Paddle Assembly		2318062US	Universal Silver
5	W10205979	Motor, Ice Door		2305307GN	Universal Silver	19	2305342	Assembly, LED
6	W10504458	Door, Ice	14		Assembly, Ice Paddle			
7	W10542663	Support, Ice Door		2305306GN	Universal Silver			
8	4449745	Screw	15	2305219	Cover, Control			
9	2305235	Assembly, Spigot						

TOP GRILLE AND UNIT COVER PARTS

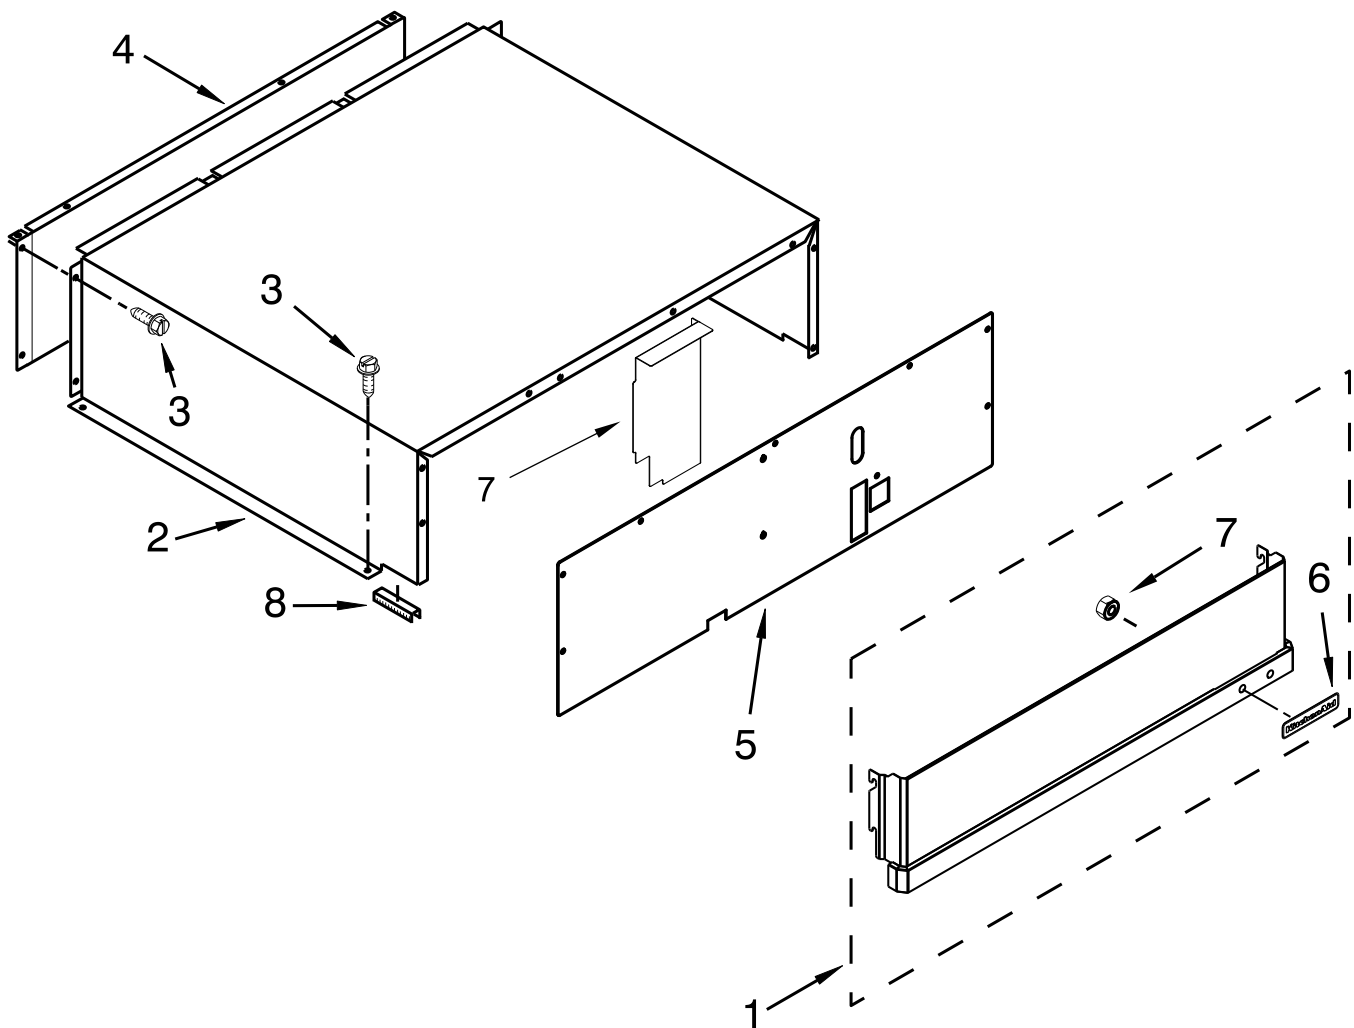


TOP GRILLE AND UNIT COVER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10761967	Assembly, Decorative Panel (Stainless)
2	W10545068	Cover, Unit
3	486194	Screw
4	2256466	Panel, Unit Back
5	W10694109	Cover, Unit Front

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6		Nameplate
	W10518672	Grey

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10645086	Divider, Unit Air
8	2215910	Grommet, Flexible


UPPER UNIT PARTS

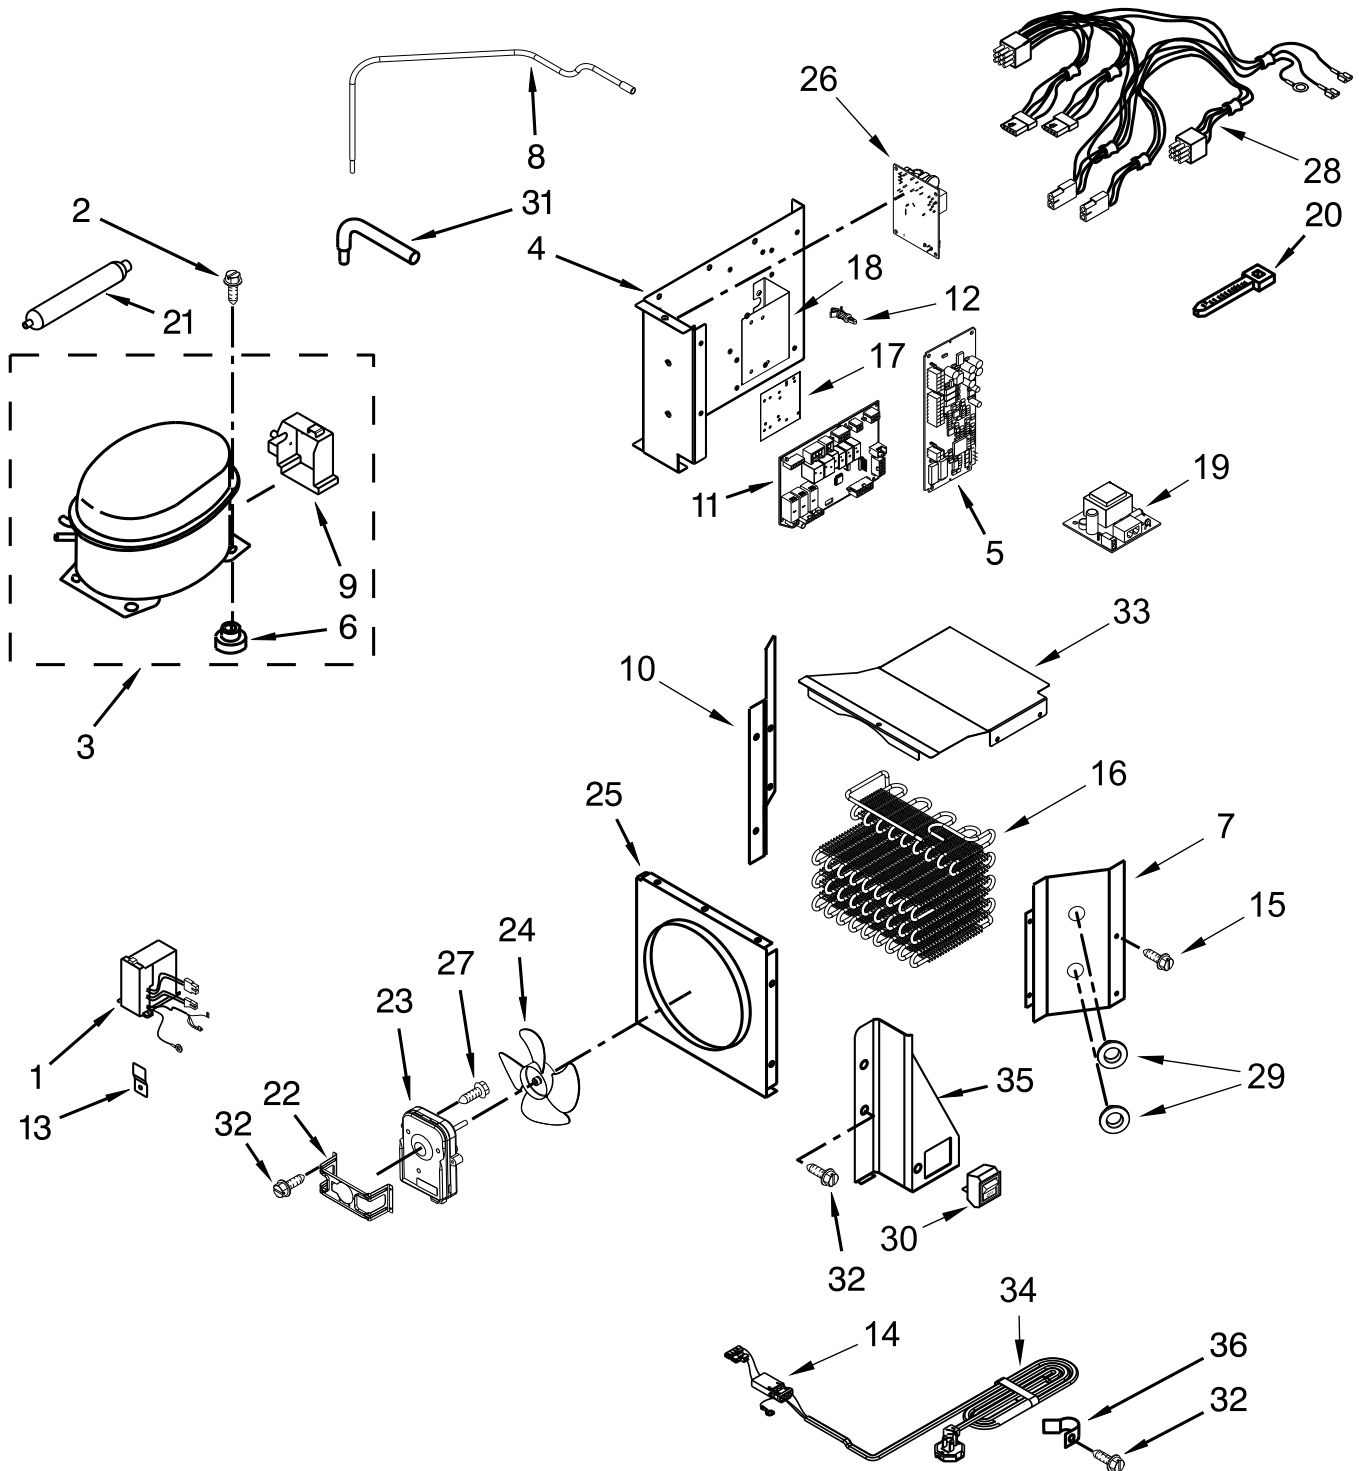

UPPER UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10645666	Assembly, Inverter Box	14	2310195	Assembly, Jumper Wire (Power Switch to Power Cord)	30	2266802	Switch, Power Disconnect
2	489373	Screw				31	W10528578	Tube, Process
3	W10653005	Compressor	15	1157158	Screw	32	486194	Screw
4	W10550831	Housing, Control Board Mounting	16	W10591457	Condenser	33	W10525175	Cover, Condenser Support
5	W10635302	LED Control	17	W10770059	Plate, Circuit Board (Top)	34	2310196	Cord, Power
6	1100826	Grommet	18	W10761479	Plate, Circuit Board	35	W10321055	Bracket, Control Assembly
7		Support, Condenser	19	2259350	Board, Power Supply	36	549193	Clamp, Power Cord
	W10525179	Right Hand	20	2155774	Tie, Wire			Following Parts Not Illustrated
8	W10648264	Tube, Heat Loop Transition	21	W10175593	Drier		978025	Valve, Access
9	2215676	Cover, Terminal	22	W10414681	Bracket, Fan Motor		978026	Valve, Access
10		Support, Condenser	23	2188875	Motor, Condenser		978027	Valve, Access
	W10525177	Left Hand	24	W10139483	Blade, Fan		978028	Valve, Access
11	W10200659	Control, Electronic	25	W10415670	Orifice, Fan		978029	Valve, Access
12	2203075	Spacer	26	W10624574	Supply, Power		978030	Valve, Access
13	2256328	Bracket, Inverter Mounting	27	W10146359	Screw		876764	Valve, Access
			28	W10775849	Assembly, Unit Wire			REFRIGERANT CHARGE
			29	W10587113	Grommet			5.75 oz. (R-134A)


LOWER UNIT AND TUBE PARTS

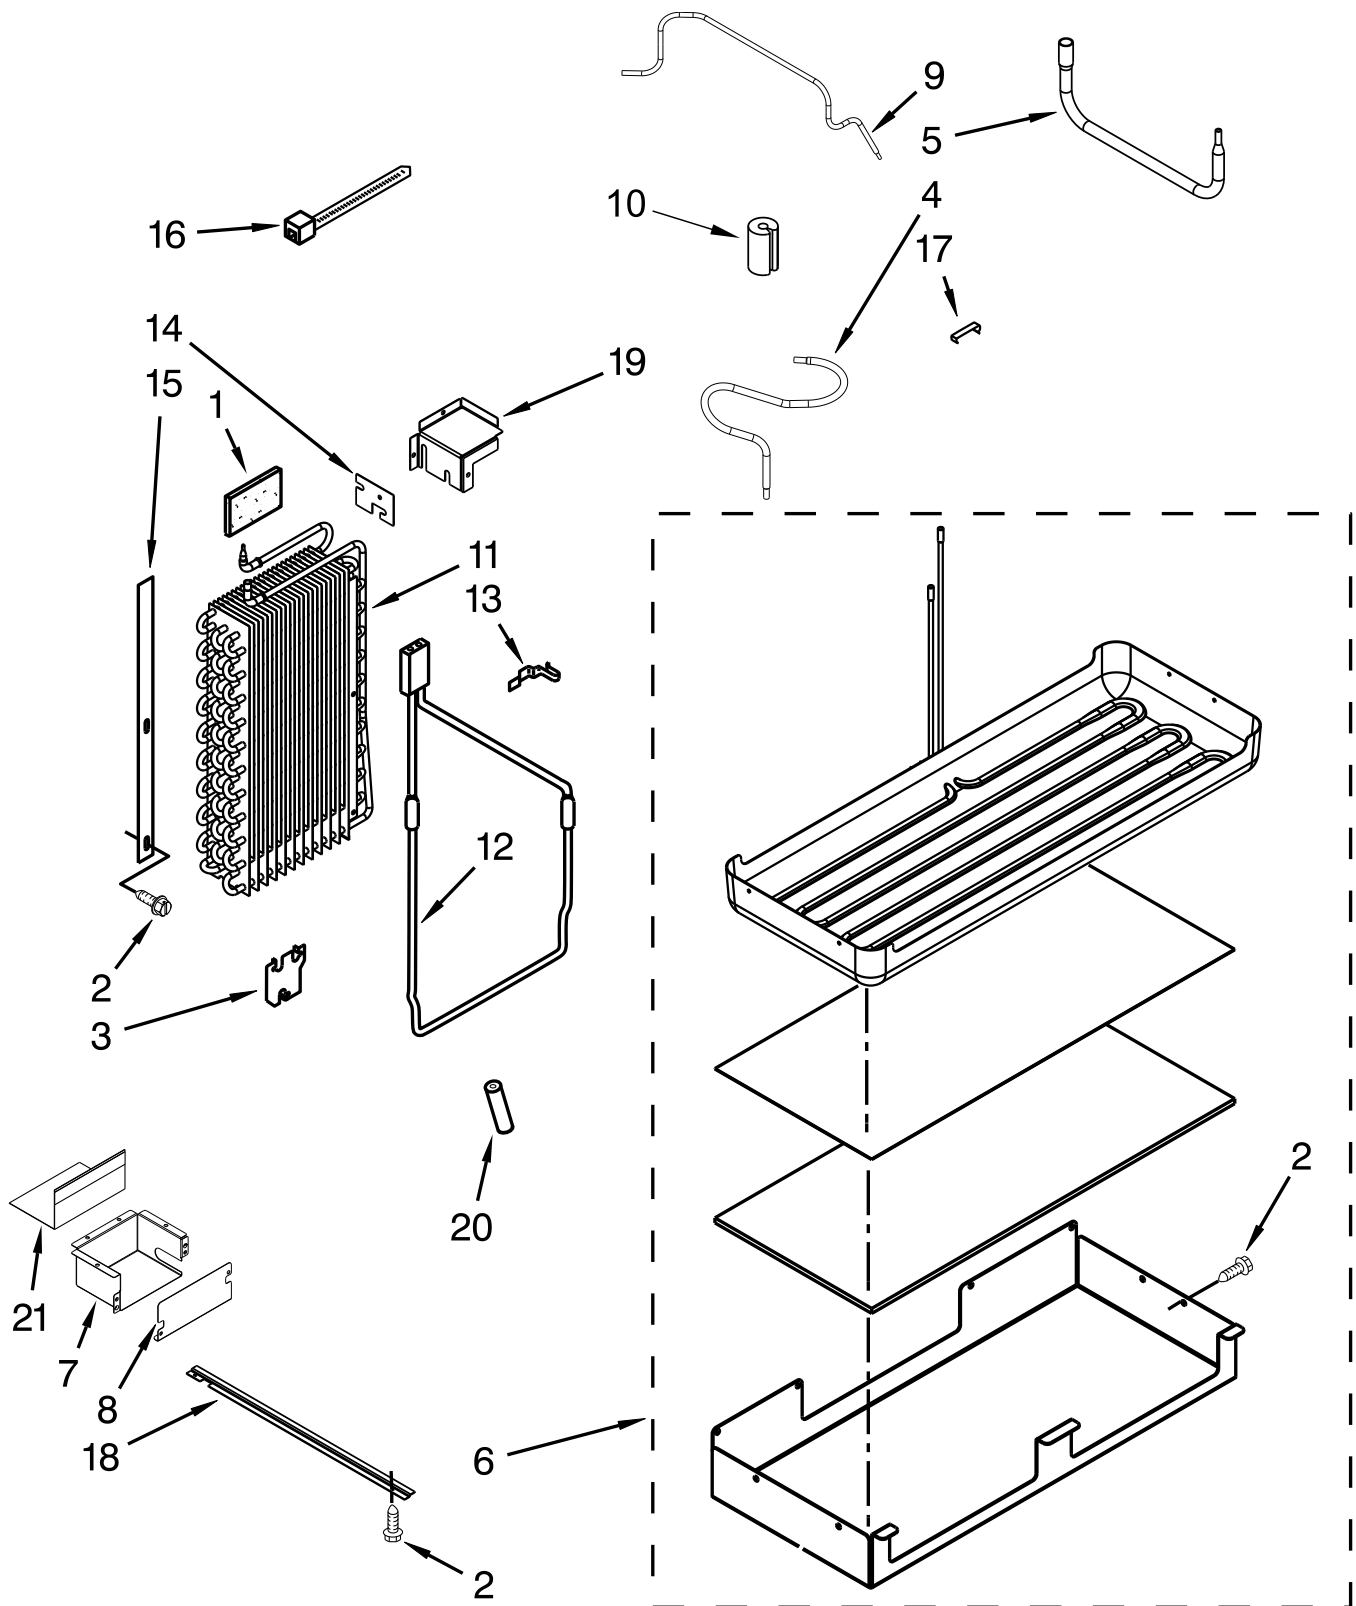

LOWER UNIT AND TUBE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	2169104	Sealer, Insulation	9	W10499596	Tube, Discharge	18	2320554	Support, Drain Pan
2	486194	Screw	10	W10413009	Grommet, Air Return	19	W10160981	Assembly, Air Return Bracket
3	W10157752	Bracket, Heater	11	W10427991	Evaporator	20	2215648	Dampener
4	W10648568	Tube, Oil Trap Suction	12	W10140160	Heater, Defrost	21	W10321050	Shelf, Wiring Cover
5	W10388653	Tube, Transition (Drier/Restrictor)	13	1113048	Clamp, Heater			
6	W10281063	Assembly, Drain Pan	14	W10139908	Cover, Evaporator Seal			
7	W10309012	Cover, Wiring	15	W10432308	Gasket, Evaporator			
8	W10321048	Cover, Wire Box	16	2155774	Tie, Wire			
			17	W10169509	Clip, Heat Exchanger			

ICEMAKER PARTS

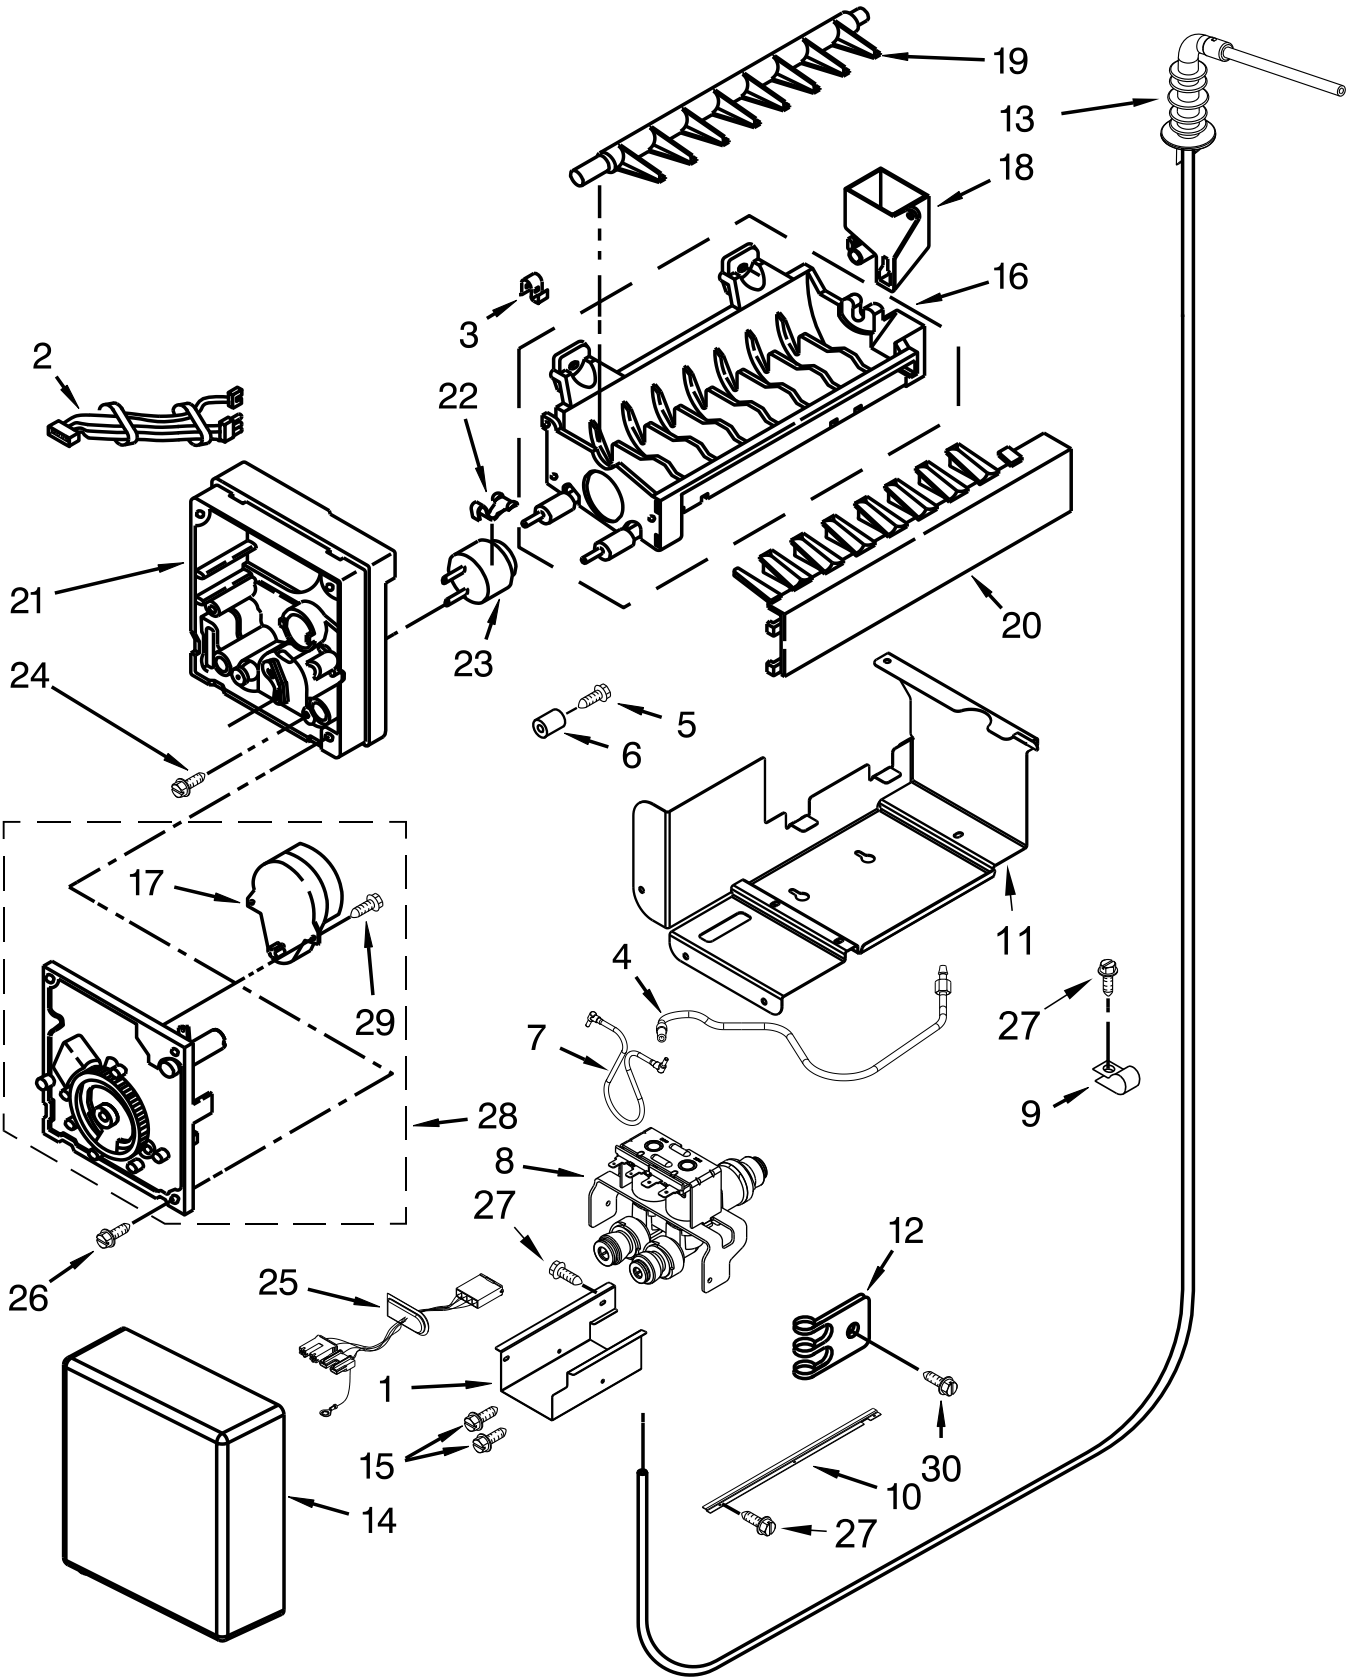

ICEMAKER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	2320599	Shield, Valve	13	W10357286	Fitting, Water	26	489276	Screw
2	W10508670	Wire Assembly, Icemaker	14	W10289690	Cover, Icemaker	27	486194	Screw
3	628379	Clip, Thermal Fuse	15	W10141604	Screw	28	W10223929	Assembly, Module and Motor
4	W10296807	Tube, Filter Inlet	16	W10122550	Assembly, Mold and Heater	29	489136	Screw
5	489474	Screw	17		Motor, (Not Serviceable Order Item 28)	30	W10141645	Screw
6	2252354	Spacer	18	W10377998	Cup, Fill	100	W10774431	Complete Icemaker Assembly
7	W10683737	Tube, Filter Outlet	19	626753	Ejector			
8	W10159843	Valve, Solenoid	20	W10272164	Stripper, Ice			
9	2221070	Clamp, Tube	21	2194712	Support, Housing			
10	2320559	Support, Valve	22	2315522	Retainer, Thermostat			
11	2300167	Bracket, Icemaker Mounting	23	627985	Thermostat			
12	2208136	Clip, Water Tube	24	W10001280	Screw			
			25	W10139199	Wire Assembly, Smart Valve			