


## assembly instructions

Family: Freeport | Item No. 1802 OZ



#### **Drawing 1 - Fixture Assembly**

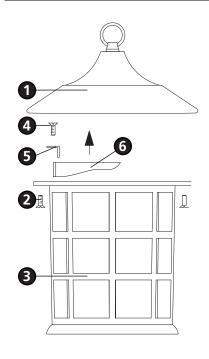

# Vstart here

- 1. Find a clear area in which you can work.
- 2. Unpack fixture and glass from carton.
- 3. Carefully review instructions prior to assembly.

\*\*\* The construction of this fixture will be accomplished by first assembling the main body of the fixture, making all necessary electrical connections, and then hanging the fixture from the ceiling.

**SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18)** AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED **ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.** 

- 1. Remove screws (2) from under roof (1). Make sure cage assembly (3) is supported while removing screws. When last screw is removed the cage assembly can drop off the fixture - see Drawing 1.
- 2. Remove screws (4) that hold the glass clips (5) in place.
- 3. Glass (6) can now be lifted out of the cage assembly (3).
- 4. To replace glass, follow steps 1-3 in reverse order.
- 5. Please refer to the hanging instruction sheet (I.S. 20) provided to complete installation of this fixture.

NOTE: remove cardboard from inside of fixture before lamping


11.12.09




## assembly instructions

I.S.20

#### **Drawing 1 - Strap Detail**



#### **Drawing 2 - Fixture Mounting**

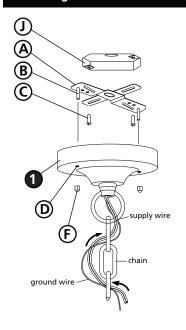

# Ystart here

- 1
- 1. Prepare gem strap (A) for mounting by threading two screws (B) provided into back of gull wing bracket of gem strap (A) see **Drawing 1**.
- Be sure the holes into which the screws are threaded match the spacing of holes (D) in the ceiling pan (1) see **Drawings 1 and 2**.
- 3. Mount gem strap (A) to junction box (J), using the two 1" screws (C) provided.

SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18) AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.

- 2
- 1. Determine the length of chian you will require.
- **2.** Attach chain to loop on top of fixture and weave supply wire and ground throught chain.
- 3. Attach loop from canopy to the chain.
- 4. Fixture is ready for hanging.

Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet (I.S. 18) and follow all instructions to make all necessary wiring connections. Then refer back to this sheet to continue installation of this fixture.

3

- 1. Hang the fixture by slipping the holes (D) in the canopy (1) over the screws (B) in the mounting strap (A) see **Drawing 2**.
- 2. Thread on ball knobs (F) to secure fixture to the ceiling.


10.29.09




### I.S. 18 wiring | grounding instructions

**SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18)** AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED **ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.** 


#### **Drawing 1 - Flush Mount**

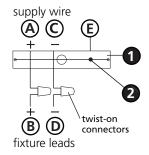

#### **Drawing 2 - Chain Hung**

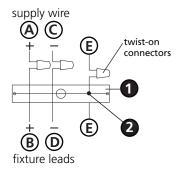

#### **Drawing 3 - Post-Mount**

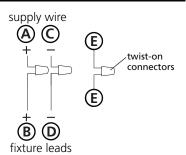

### wiring instructions

#### **Indoor Fixtures**

- 1. Connect positive supply wire (A) (typically black or the smooth, unmarked side of the two-conductor cord) to positive fixture lead (B) with appropriately sized twist on connector - see Drawings 1 or 2.
- 2. Connect negative supply wire (C) (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture lead (D).
- 3. Please refer to the **grounding instructions** below to complete all electrical connections.

#### **Outdoor Fixtures**

- 1. Connect positive supply wire (A) (typically black or the smooth unmarked side of the two-conductor cord) to positive fixture lead (B) with appropriately sized twist on connector - see Drawings 2 or 3.
- 2. Connect negative supply wire (C) (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture lead (D).
- 3. Cover open end of connectors with silicone sealant to form a watertight seal.
- If installing a wall mount fixture, use caulk to seal gaps between the fixture mounting plate (backplate) and the wall. This will help prevent water from entering the outlet box. If the wall surface is lap siding, use caulk and a fixture mounting platform specially.
- 4. Please refer to the grounding instructions below to complete all electrical connections.

### grounding instructions

#### Flush Mount Fixtures

For positive grounding in a 3-wire electrical system, fasten the fixture ground wire (E) (typically copper or green plastic coated) to the fixture mounting strap (1) with the ground screw (2) - see Drawing 1.

Note: On straps for screw supported fixtures, first install the two mounting screws in strap. Any remaining tapped hole may be used for the ground screw.

#### **Chain Hung Fixtures**

Loop fixture ground wire (E) (typically copper or green plastic coated) under the head of the ground screw (2) on fixture mounting strap (1) and connect to the loose end of the fixture ground wire directly to the ground wire of the building system with appropriately sized twist-on connectors - see Drawing 2.

#### **Post-Mount Fixtures**

Connect fixture ground wire (E) (typically copper or green plastic coated) to power supply ground with appropriately sized twist-on connector inside post. Cover open end of connector with silicone sealant to form a watertight seal - see Drawing 3.